

PROTEUS-PLUS User Manual

Version V2.04
Dec 8, 2019

TABLE OF CONTENTS

GENERAL OVERVIEW	5
TYPICAL INTERCONNECT DIAGRAM	6
GLOSSARY TERMS	7
COMMUNICATION	7
COM PORTS	7
COM PORTS: BAUD RATES.....	7
COM PORTS: DEVICE TYPES	7
COM PORTS: CONFIGURATION	8
COM1	8
COM2	8
USB DEVICE PORT	8
USB HOST PORTS.....	8
CSV FORMATS	9
ETHERNET PORT	10
VIDEO INPUT & OUTPUT	11
VIDEO FRAME RATES	12
VIDEO DELAY	12
IRIG INPUT	12
COMPOSITE INPUT (PIP)	13
LOAD CONFIGURATION	14
STORE CONFIGURATION.....	14
TEXT, LOGO AND DATA INSERTER	15
QUICK TUTORIAL	15
DISPLAY TIME, DATE	15
DISPLAY TEXT	16
DISPLAY IMAGES.....	18
DISPLAY GPS DATA.....	19
DISPLAY NMEA DATA	21
DISPLAY VALUES FROM ANY CSV SENTENCE	22
DISPLAY VALUES FROM ANY UNSUPPORTED NMEA SENTENCE.....	22
REAL TIME ANNOTATION	26
APPEND MILLISECOND COUNTER TO IRIG, GPS, RTC TIME.....	27
SNTP	28
APPS	29

QUADRATURE OR SIMPLE COUNTERS	29
ANALOG DATA	33
XY MEASUREMENT	37
RETICLE	39
PLANE SITUATION AWARENESS	41
ROV SITUATION AWARENESS	44
SLIDERS	47
COMPASS	49
GEOTAGGING & KML GENERATION	50
RECORDING SETUP	51
PLAYBACK SETUP.....	52
CONFIGURATION	52
COUNT UP TIMER.....	56
PROTEUS COMMANDS.....	57
TRANSMIT A COMMAND SCRIPT	57
PROTEUS REGISTERS	58
SPECIFICATIONS	59
MAXIMUM INPUT VOLTAGE	59
INPUT CONNECTOR	59
ENVIRONMENTAL	59
WEIGHT & DIMENSION	59
FRONT PANEL LED	59
PCB DIMENSION.....	60
ENCLOSURE DIMENSION	62
APPENDIX A – KEYBOARD COMMANDS	63
KEYBOARD COMMANDS	63
KEYBOARD SHORTCUTS	63
APPENDIX B – UPDATING FIRMWARE.....	64
APPENDIX C – INSTALL RENESAS FLASH PROGRAMMER	66
APPENDIX D – IMAGES.....	67
JPG	67
PNG	67
LOCATION	67
APPENDIX E – CREATE CUSTOM FONTS.....	68
APPENDIX F – TERMINAL BLOCKS.....	69

APPENDIX G – REGISTER DESIGNATION.....	70
APPENDIX H – FORMAT MICROSD.....	73

GENERAL OVERVIEW

Video Overlay is a method by which computer-generated images are superimposed on video. Properly transformed images appear as if they are an integral part of the scene without impeding the video of the actual environment.

The primary purpose of PROTEUS is to provide the ability to insert text, logos and GPS data.

Numerous apps have been developed to enhance this product. Customers have found them to be useful like the apps available for iPhone. The existent of these apps should not discourage any customer from considering this product for basic text, logo and GPS data insertion.


PROTEUS supports both HD-SDI, HDMI input & output. It does not need to be connected to a computer for normal operation.

PROTEUS is available in 3 editions and the table below provides a comparison. **This User Manual is for PROTEUS ESSENTIAL.**

FEATURES	PROTEUS		
	LITE	ESSENTIAL	PLUS
Insert Texts, Images, Time/Date, GPS data, POS Laser Scanner Code	√	√	√
Insert values from CSV sentences via RS232 & Ethernet		√	√
Insert values from NMEA sensors via RS232		√	√
Numerous APPs + Widgets + Device drivers		√	√
2 x Quadrature inputs		√	√
4 x Analog inputs		√	√
Insert IRIG-B timecode		√	√
Insert Network SNTP timecode		√	√
MEMS based Compass, Gyroscope		√	√
30+ Drawing commands via RS232 & Ethernet		√	√
Superimpose composite (NTSC/PAL) video input over HD video input (PIP)		√	√
Geotagging + KML File			√

TYPICAL INTERCONNECT DIAGRAM

Diagram below illustrates a few the possible applications.

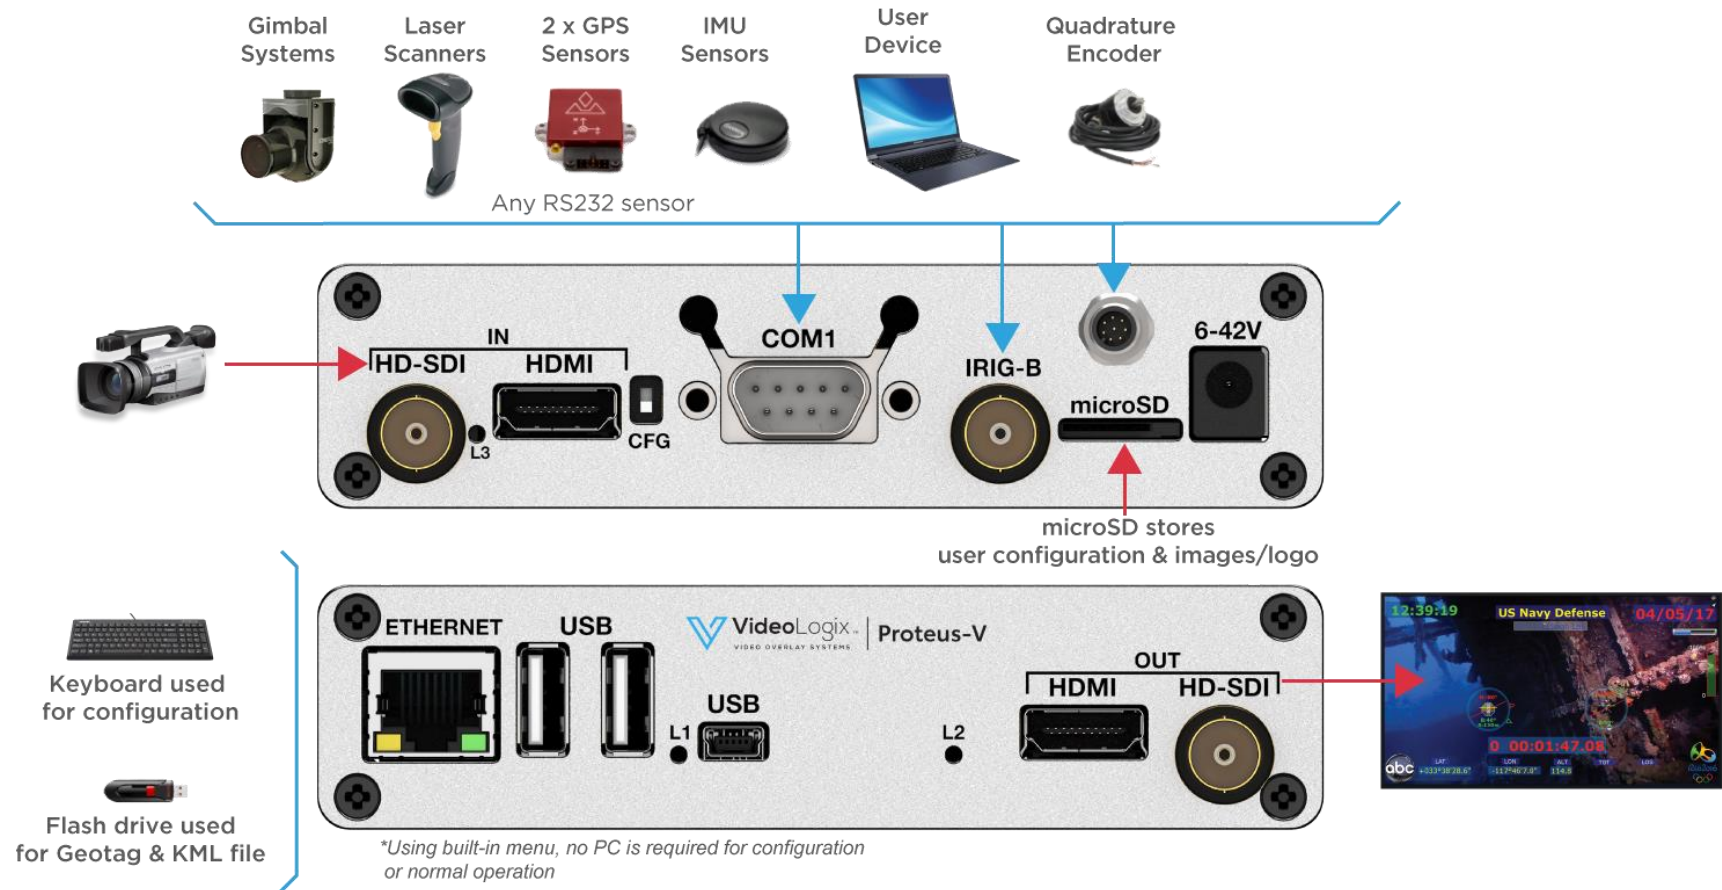

GLOSSARY TERMS

Term	Definition
SCS	Software Communication Specification
CSV	Comma Separated Values
TB	Terminal Block
UM	User Manual
GPS	Global Position System

COMMUNICATION

COM PORTS

PROTEUS provides 2 x serial ports (COM1 & COM2) for communication with the external devices:

COM PORT	Location	Pin assignments
COM1	RS232: Rear Panel DB9	2=RX, 3=TX, 5=GND
COM2	RS232: Internal J54 & J16	J54: 1=RX, 2=GND, 3=TX

COM PORTS: BAUD RATES

- COM ports are fixed for N, 8, 1. However, baud rates can be set to 4800, 9600, 19200, 38400, 57600 or 115200.

COM PORTS: DEVICE TYPES

COM ports can be interfaced to various sensors. Table below shows the current list and their corresponding Device Type setting.

Attach Sensor/Device	Corresponding Device Type setting
Any device transmitting CSV sentences i.e. laptop, sensors	CSV1, CSV2, CSV3, CSV4 (See CSV formats for more detail)
All NMEA-0183 compatible devices i.e. GPS Modem, Sounder, etc.	CSV1, CSV2, CSV3, CSV4
PROTEUS App	CSV1
PuTTY or similar program	CSV1
Vector NAV IMU	VectorNav
General Dynamic CINEFLEX	CINEFLEX

COM PORTS: CONFIGURATION

Press F9 to display the Main Menu. Follow [Figure 1-Figure 2](#) to configure COM ports for desire baud rate & device.

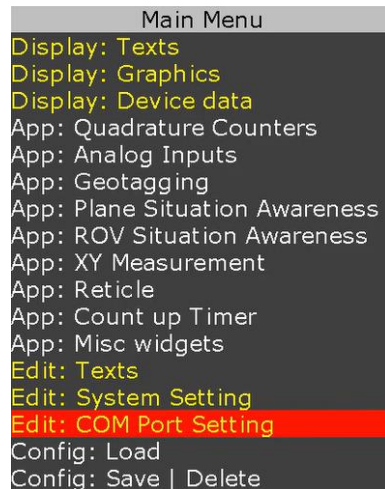


Figure 1

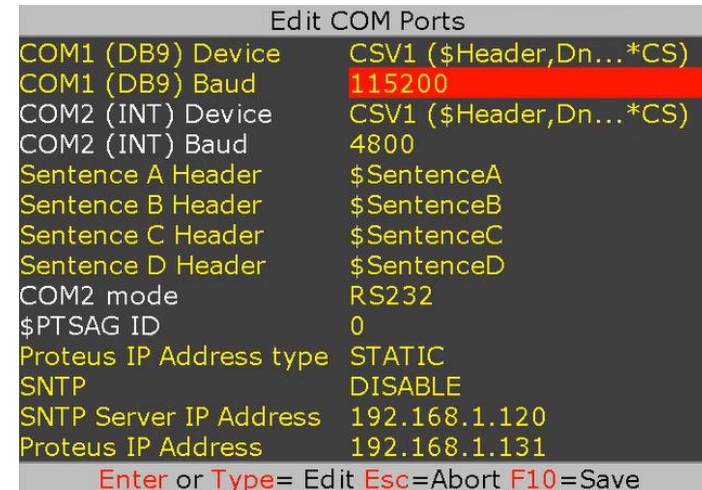


Figure 2

COM1

COM1 (DB9) is configured as DTE (PC) i.e. RX=Pin2, TX=Pin3. Thus, sensors such as GPS can be directly connected to the DB9 without the need for NULL modem cable. However, a NULL modem cable is required to interface PROTEUS to a PC.

This port can be used to send remote commands defined in SCS (Software Communication Specification) or connect any RS232 sensor.

COM2

COM2 is located internal. Signals TX & RX are provided at J16 connector (Compatible with Garmin GPS 18x LVC) as well as **Terminal Block** J54.

This port can be used to send remote commands defined in SCS (Software Communication Specification) or connect any RS232 sensor.

USB DEVICE PORT

This port is used to upgrade the internal firmware. When connected to a PC, it will enumerate as a COM port. This port can also be used to send remote commands defined in SCS (Software Communication Specification).

USB HOST PORTS

PROTEUS has 2 USB host ports. Typical devices connected to these ports are USB keyboard and USB Flash drive.

CSV FORMATS

A CSV (Comma Separated Values) is an ASCII sentence composed of a unique header, followed by up to 12 comma separated values and a checksum.

\$Header, VAL1, VAL2, VAL3, VAL4, VAL5, VAL6, VAL7, VAL8, VAL9, VAL10, VAL11, VAL12*CS

\$	Signifies start of the sentence.
Header	Sentence header. Follow Figure 1-2 to define your unique sentence header.
VALn	Each sentence contains multiple values (VALn) delimited by commas.
*	The asterisk serves as checksum delimiter.
CS	The checksum field contains two ASCII characters which indicate the hexadecimal value of the checksum.

PROTEUS supports 4 different CSV sentences:

Type	Sentence includes	Sentence Structure	Example
CSV1	\$Header, Values..., Checksum	\$HEADER, VAL1, VAL2, VAL3, ... VALn*CS	\$STEVE, 45, 315, 200, 100*XX
CSV2	\$Header, Values...	\$HEADER, VAL2, VAL3, ...	\$BRIAN, 45, 315, 200, 100
CSV3	\$Values...	\$VAL1, VAL2, VAL3, ...	\$45, 315, 200, 100
CSV4	Values ...	VAL1, VAL2, VAL3, ..	45, 315, 200, 100

Upon reception of a **CSV** sentence and confirmation of the sentence header (only CSV1), PROTEUS parses the sentence. Parsed values (VAL1 ... VAL12) are sequentially stored in [Registers](#) # 40 through 87. Any widgets linked to these registers will automatically get updated. CSV sentence vary in length, but each VALn is limited to 40 characters or less.

For more detail on how to use CSV sentences, see [Display values from any csv sentence](#)

The checksum field is the last field in a sentence and follows the checksum delimiter character “*”. The checksum is the 8-bit exclusive OR of all characters in the sentence, including “,” delimiters, between but not including the “\$” and the “*” delimiters. The hexadecimal values of the most significant and least significant 4 bits of the result is converted to two ASCII characters (0-9, A-F (upper case)) for transmission. The most significant character is transmitted first. Example: **\$GPGLL, 5057.970, N, 00146.110, E, 142451, A*27<CR><LF>**

In C checksum computation would be written as:

```
char sentence [] = "GPGLL,5057.970,N,00146.110,E,142451,A";
int i;
char checksum = 0;
for ( i = 0; i < strlen(sentence); i++)
    checksum ^= sentence[i];
```

Although not recommended, for CSV1 type sentences, checksum computation can be bypassed by replacing **CS** with **XX**.

ETHERNET PORT

This port can be used to send remote commands defined in SCS (Software Communication Specification).

- 10M/100M auto sensing network interface
- Networking: Static or DHCP IPv4 addressing
- Subnet Mask: 255.255.255.0
- Default Gateway: 0.0.0.0
- UDP protocol. Port 9999

Follow [Figure 1-Figure 2](#) to configure network interface. Following any change to the DHCP setting, power must be recycled for the change to take effect. *PROTEUS's IP address can be viewed by pressing **Alt-h**.*



The screenshot displays a dark-themed interface with yellow text. It lists various keyboard shortcuts and system information. The shortcuts include F9 for Main Menu, Alt+H for Help, Alt+G for Display Grid, F1 for Start External Video Recorder, F2 for Stop External Video Recorder, F3 for KML: Drop Placemaker #1, F4 for KML: Drop Placemaker #2, F8 for Edit User Texts, and Esc for Clear screen. The system information section shows the Serial number as 1900000D17174B018E53A6CDAE75B20C, Edition as Pro, Version as V2.10-E, Video output as HDMI=VIC0, SDI=0A, Output=VIC5, and IP address as DHCP: 192.168.1.131.

F9	Main Menu
Alt+H	Help
Alt+G	Display Grid
F1	Start External Video Recorder
F2	Stop External Video Recorder
F3	KML: Drop Placemaker #1
F4	KML: Drop Placemaker #2
F8	Edit User Texts
Esc	Clear screen
Serial	1900000D17174B018E53A6CDAE75B20C
Edition	Pro
Ver	V2.10-E
Video	HDMI=VIC0, SDI=0A, Output=VIC5
IP	DHCP: 192.168.1.131

VIDEO INPUT & OUTPUT



PROTEUS provides the following video input & output:

- SDI (HD & SD)
- HDMI (HD & SD)

PROTEUS does *not support* HDMI video with *HDCP*. It can only process one video input at a given time. If more than one input is connected at the same time, PROTEUS selects a video input based on the following priorities:

1. HD-SDI
2. HDMI

PROTEUS does not scale video and the output resolution follows the input. PROTEUS provides simultaneous video outputs.

VIDEO FRAME RATES

PROTEUS is compatible with the following video formats:

1080i @ 50 / 60 Hz

1080p @ 23.98 / 24 / 25 / 29.97 / 30 Hz

1080PsF @ 23.98 / 24 Hz

720p @ 50 / 59.94 / 60 Hz

NTSC 480i @ 60 Hz

PAL 576i @ 50 Hz

VIDEO DELAY

All OSD functions are superimposed into the video "on-the-fly." As a result, there is no degradation in video quality and the delay from the video input to the video output is < 290 nsec.

IRIG INPUT

This interface can be used to input an external unmodulated IRIG-B signal. PROTEUS can decode IRIG-B time & date code. This interface can also be used to input a composite video NTSC (M, J, 4.43) or PAL (B,D,G,H,I,M,N,CN) for purpose of superimposing it on a HD video as PIP.

COMPOSITE INPUT (PIP)

IRIG input can also be used to input a composite video NTSC (M, J, 4.43) or PAL (B,D,G,H,I,M,N,CN) for purpose of superimposing it on a HD video. To enable PIP follow the pictures below. Composite video (as shown below as colorbar) can be superimposed anywhere on the 1920 x 1080.

Main Menu	
Display: Texts	
Display: Graphics	
Display: Device data	
App: Quadrature Counters	
App: Analog Inputs	
App: Geotagging	
App: Plane Situation Awareness	
App: ROV Situation Awareness	
App: XY Measurement	
App: Reticle	
App: Count up Timer	
App: Misc widgets	
Edit: Texts	
Edit: System Setting	
Edit: COM Port Setting	
Config: Load	
Config: Save Delete	



System Settings	
Time (hh:mm:ss)	18:00:49
Date (mm/dd/yy)	10/01/19
GMT offset (-HH:MM)	-00:00
Date format	MM/DD/YY
Autosync RTC to GPS	On
System of unit	Meter
Show RTC HH:MM:SS.mmm	Off
Show IRIG HH:MM:SS.mmm	Off
Show GPS HH:MM:SS.mmm	Off
Alpha blend	25
Colorbar options	SMPTE CBAR1
Composite PIP	On
Composite Video Standard	NTSC_M
Composite PIP (X,Y) position	1400,100

Enter or Type= Edit Esc=Abort F10=Save



LOAD CONFIGURATION

PROTEUS can maintain 16 different configurations. Follow figures below to load a configuration.

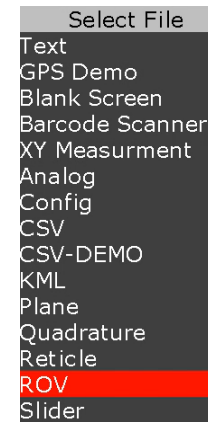
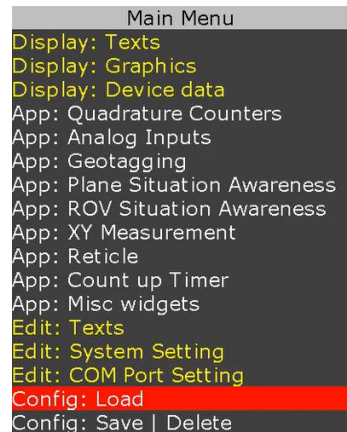


STORE CONFIGURATION

PROTEUS stores 16 different configurations. Follow figures below to save your configuration.

To save, type in the new file name in an empty field or highlight a file name (overwrite) and press **F10** to save.

To delete, highlight the file name and press **Ctrl + Alt + F10**.

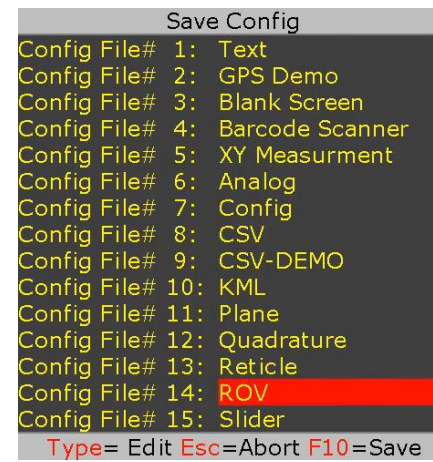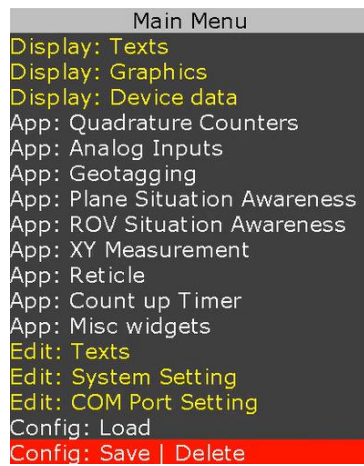

TEXT, LOGO AND DATA INSERTER

QUICK TUTORIAL

DISPLAY TIME, DATE

1. Press F9 to display main menu
2. Follow [Figure 3 - Figure 5](#) to insert the desired parameter
3. On [Figure 5](#), use $\updownarrow$ arrow keys to select “RTC Time”
4. Press $\downarrow$ to select “On”
5. RTC time will appear on the screen and *flashing*.
6. Use [shortcuts](#) keys to change the field attributes as described below:

“Font select, field **W**idth, text **J**ustification, text **C**olor, text **B**ackground and **Ctrl** or **Alt** + $\updownarrow$ text position”

7. Repeat steps 3 through 6 to display “RTC Date”
8. Press F10 to save and exit.

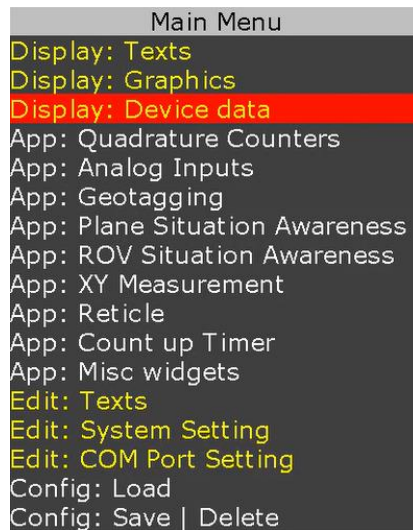


Figure 3

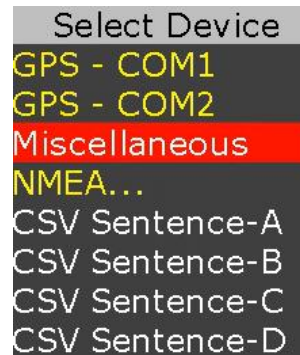


Figure 4

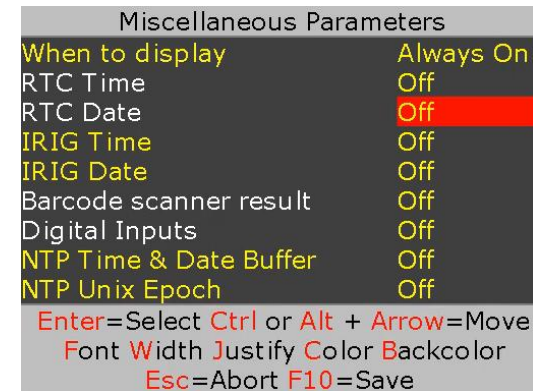


Figure 5

DISPLAY TEXT

Press F9 to display Main Menu. Follow [Figure 6 - Figure 7](#) to type-in or edit pre-existing texts.

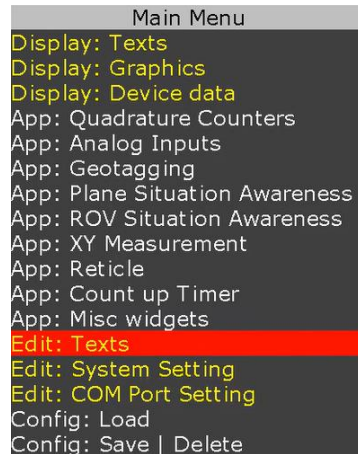


Figure 6



Figure 7

Follow [Figure 8 - Figure 9](#) to display text on video.

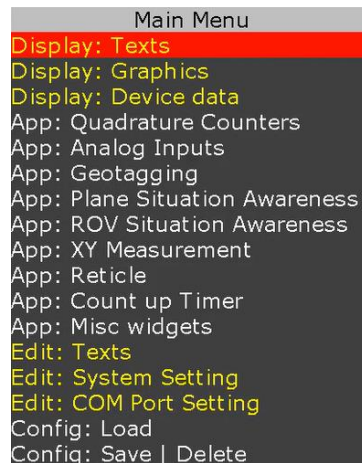


Figure 8



Figure 9

While in [Figure 9](#), use ↑ arrow keys to select desire text. Press ↓ to select “On”. Use [shortcuts](#) keys to format the text as described below:

Font select, field Width, text Justification, text Color, text Background and Ctrl or Alt + ↔ text position

Insert text

This is font#1

This is font#2

This is font#3

This is font#4

This is font#5

This is font#6

This is font#7

This is font#8



DISPLAY IMAGES

Please review [Appendix D – images](#) on how to prepare images for use with PROTEUS.

Press F9 to display Main Menu. Follow [Figure 10](#) - [Figure 11](#) to display images.

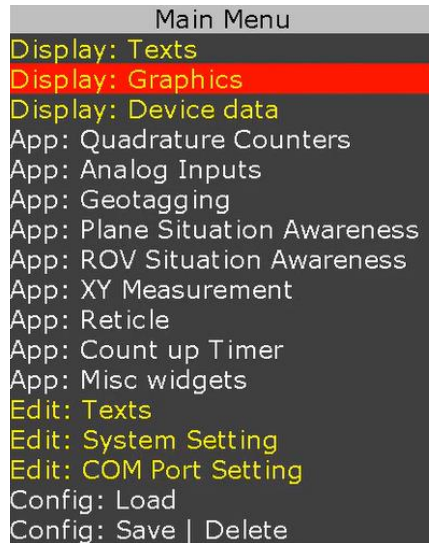


Figure 10




Figure 11

While in [Figure 11](#), use **↑** to select a desire image. Press **↓** to select "On". Use **Ctrl** or **Alt** + **↑↔** to position the image on screen.

DISPLAY GPS DATA

- Two independent GPS modems can be connected to COM1 & COM2 at the same time.
- COM ports are fixed for N, 8, 1. Follow [Figure 1 - Figure 2](#) to configure for desire baud rate
- \$GPRMC, \$GPGGA, \$PTSAG, \$GPWPL, \$GPGSA, \$GPGSV, \$GPGGL....

A *sample* GPS file is provided with your PROTEUS. To load it, press F9, go to *"Config: Load"* and select *"GPS"*.

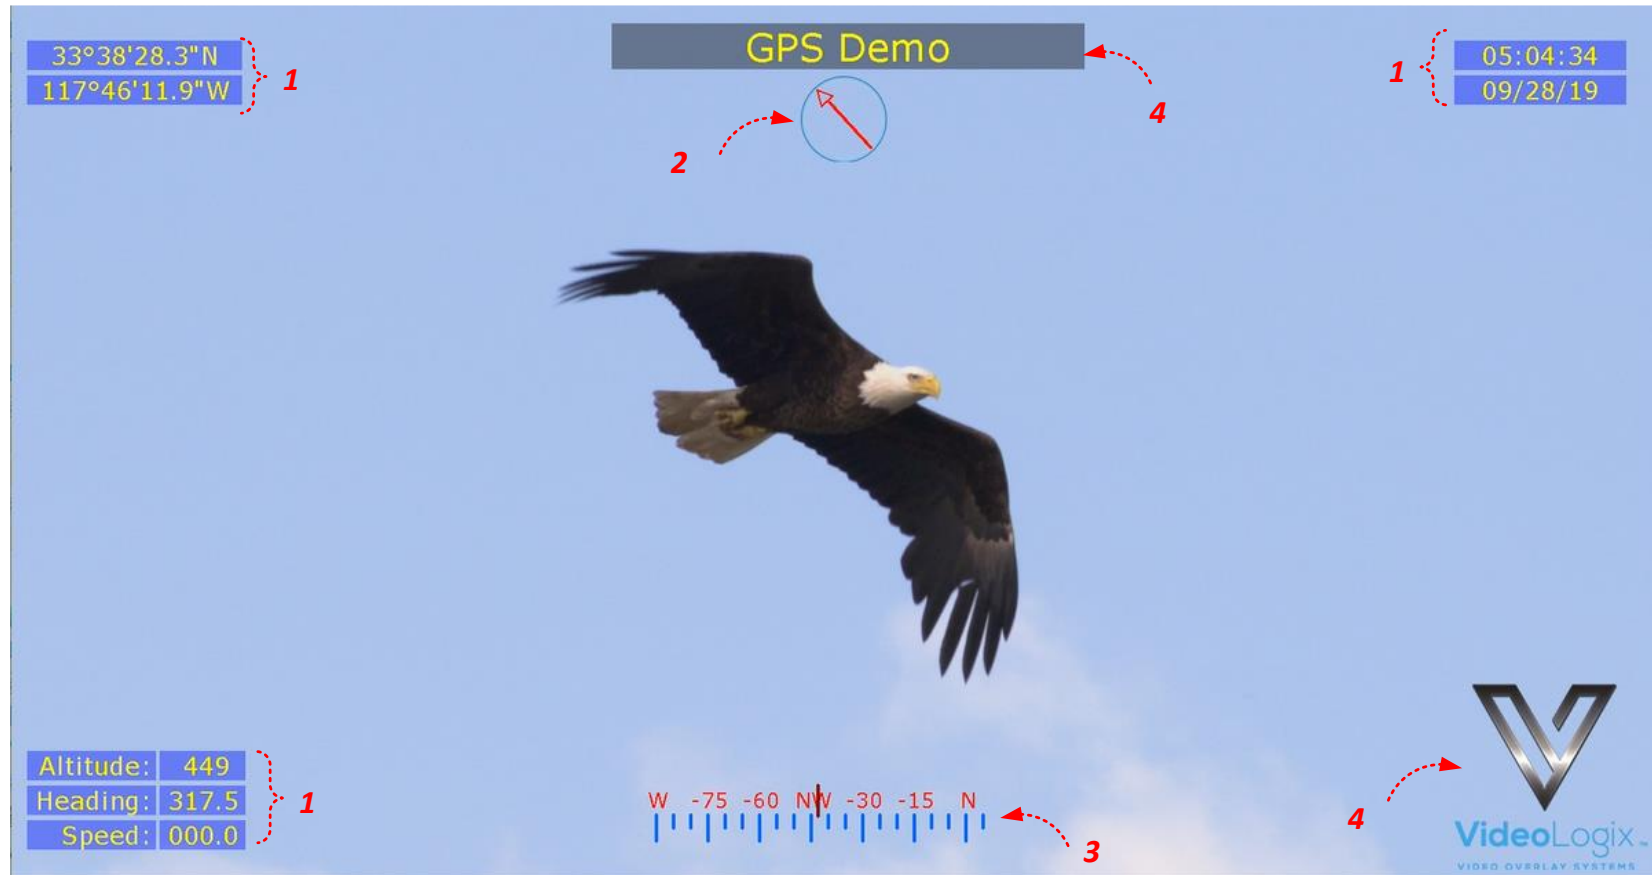

- | | | |
|---|------------------|---|
| 1 | GPS data | Obtained directly from GPS modem |
| 2 | Circular Compass | Controlled via GPS heading |
| 3 | Rolling Compass | Controlled via GPS heading |
| 4 | Misc. Parameters | Title, Logo. Fully configurable by the user |

To customize the sample file to meet your needs, follow [Figure 12 - Figure 14](#).

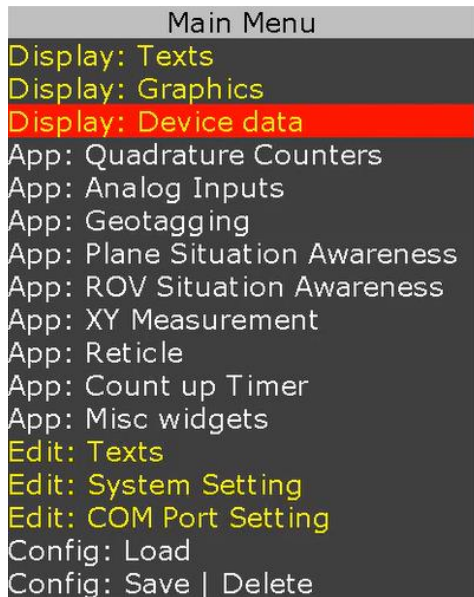


Figure 12

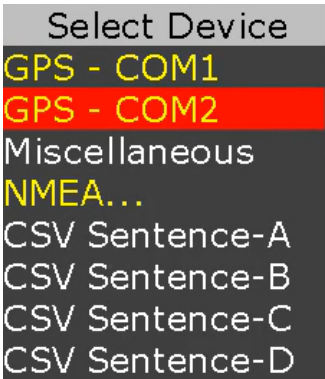


Figure 13

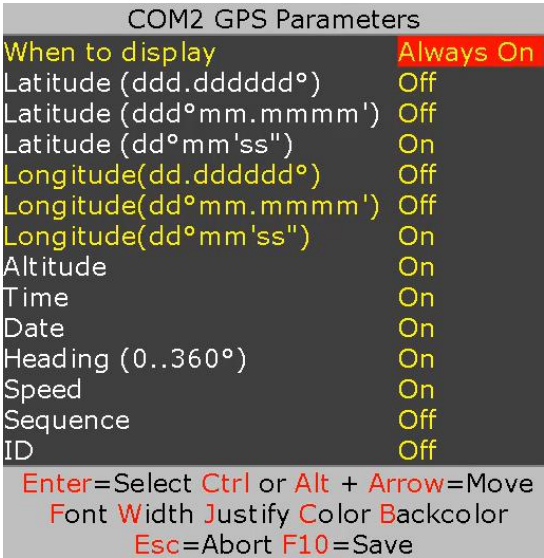


Figure 14

While in [Figure 14](#), use [↑](#) to select desire GPS parameter. Press [↓](#) to select "On". Use [shortcuts](#) keys to format the text as described below:

Font select, field Width, text Justification, text Color, text Background and Ctrl or Alt + ↑↔ text position
--

DISPLAY NMEA DATA

- PROTEUS intrinsically supports many NMEA sentences such as **\$GPRMC**, **\$GPGGA**, **\$PTSAG**, **\$GPWPL**, **\$GPGSA**, **\$GPGSV**, **\$GPGGL**, **\$SDDBT**, **\$SDDPT**, **\$WIMTW**, **\$WIMWV**, **\$VNINS**, **\$VNIMU**, **\$VNYPR**, **\$PTNTHPR**, **\$HCHDG**, **\$HCHDT**, **\$HCC**, **\$DBS**, **\$PCIT**, **\$PCIPR**, etc.
- For above messages, just configure [COM_port](#) and PROTEUS is ready to receive messages & manage your visual data. Follow [Figure 15-Figure 17](#) and [Figure 12 - Figure 14](#) to display NMEA parameters.
- You may come across a NMEA sentence that is not intrinsically supported by PROTEUS for example **\$PTCF**. To configure PROTEUS to receive this sentence, follow [Figure 1 - Figure 2](#) and replace **\$SentenceA** with **\$PTCF**. Upon reception of **\$PTCF** sentence, PROTEUS parses the sentence and parsed values (VAL1..VAL6) are sequentially stored in Registers # 40-45 as shown below:

\$PTCF,HHH.H,T,+RRR.R,+PPP.P,rrr.rr,ppp.pp*CS

\$PTCF	VAL1	VAL2	VAL3	VAL4	VAL5	VAL6
Register	40	41	42	43	44	45
Values	HHH.H	T	+RRR.R	+PPP.PP	+rrr.rr	+ppp.pp

For more detail on how to display each value, please see [Display values from any csv sentence](#)

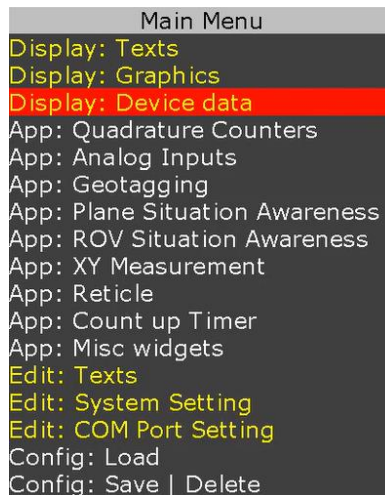


Figure 15

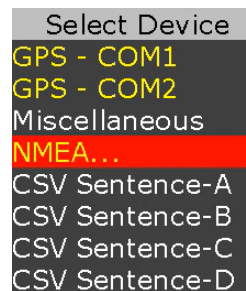


Figure 16

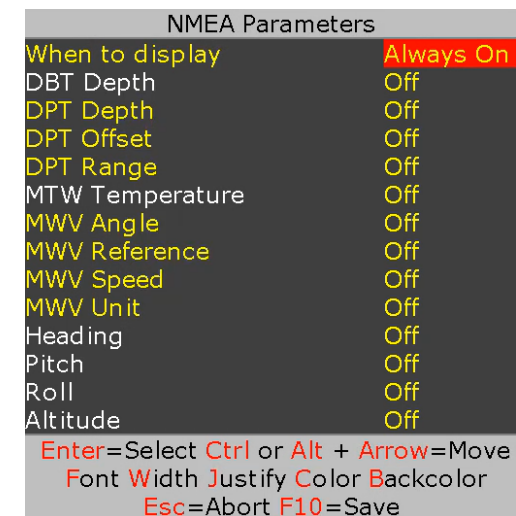


Figure 17

DISPLAY VALUES FROM ANY CSV SENTENCE

DISPLAY VALUES FROM ANY UNSUPPORTED NMEA SENTENCE

A CSV (Comma Separated Values) is an ASCII sentence composed of a unique header, followed by up to 12 comma separated values and a checksum.

\$Header, VAL1, VAL2, VAL3, VAL4, VAL5, VAL6, VAL7, VAL8, VAL9, VAL10, VAL11, VAL12*XX

- All NMEA-0183 messages are CSV
- PROTEUS intrinsically supports many of the NMEA-0183 messages i.e. \$GPRMC, \$GPGGA, \$PTSAG, \$GPWPL, \$GPGSA, \$GPGSV, \$GPGGL, \$SDDBT, \$SDDPT, \$WIMTW, \$WIMWV, \$VNINS, \$VNIMU, \$VNYPR, \$PTNTHPR, \$HCHDG, \$HCHDT, \$HCC, \$DBS, \$PCIT, \$PCIPR, etc.
- For these messages, just configure [COM port](#) and PROTEUS is ready to receive messages & manage your visual data
- There may be instances where you want to send your own CSV message or support a new NMEA message
- You can configure PROTEUS to receive up to 4 customize CSV messages (A, B, C, D)
- Upon reception of CSV sentence, PROTEUS verifies checksum & parses the message
- For each message, parsed values (VAL1.. VAL12) are stored in Registers # 40-87 as shown below:

\$Header-A	VAL1	VAL2	VAL3	VAL4	VAL5	VAL6	VAL7	VAL8	VAL9	VAL10	VAL11	VAL12
Register	40	41	42	43	44	45	46	47	48	49	50	51

\$Header-B	VAL1	VAL2	VAL3	VAL4	VAL5	VAL6	VAL7	VAL8	VAL9	VAL10	VAL11	VAL12
Register	52	53	54	55	56	57	58	59	60	61	62	63

\$Header-C	VAL1	VAL2	VAL3	VAL4	VAL5	VAL6	VAL7	VAL8	VAL9	VAL10	VAL11	VAL12
Register	64	65	66	67	68	69	70	71	72	73	74	75

\$Header-D	VAL1	VAL2	VAL3	VAL4	VAL5	VAL6	VAL7	VAL8	VAL9	VAL10	VAL11	VAL12
Register	76	77	78	79	80	81	82	83	84	85	86	87

EXAMPLE

\$Header-A,1,22,333,4444,55555,666666,7777777,88888888*XX

\$Header-A	VAL1	VAL2	VAL3	VAL4	VAL5	VAL6	VAL7	VAL8
Register	40	41	42	43	44	45	46	47
Values	1	22	333	4444	55555	666666	7777777	88888888

\$Header-C,This,is,an,,,Example*XX

\$Header-C	VAL1	VAL2	VAL3	VAL4	VAL5	VAL6
Register	64	65	66			67
Values	This	is	an			Example

A *sample* CSV file is provided with your PROTEUS. To load it, press F9, go to “*Config: Load*” and select “*CSV*”.



- | | | |
|---|-------------------|--|
| 1 | Sentence-A values | VAL1..VAL8 |
| 2 | Sentence-B values | VAL1..VAL4 |
| 3 | Sentence-C values | VAL1..VAL4 |
| 4 | Sentence-D values | VAL1..VAL4 |
| 5 | Misc. Parameters | Texts, RTC Time & Date, Logo. Fully configurable by the user |

Upon transmission of the following sentences (use PuTTY @115K, N,8 ,1), their values should appear as shown in *Figure 18*.

```
$SentenceA,1,22,333,4444,55555,666666,7777777,88888888*XX  
$SentenceB,A,BB,CCC,DDDD*XX  
$SentenceC,Pitch,Roll,Yaw,Heading*XX  
$SentenceD,This,is,an,Example*XX
```



Figure 18

Any individual value can also be updated by sending command **\$VL43**. For example:

- To change VAL7 from SentenceA to 777 send: **\$VL43,46,777*XX**.
- To change VAL6, VAL7, VAL8 from SentenceA to 777, 8888, 99999 accordingly, send: **\$VL43,45,777,8888,99999*XX**.

To customize the sample file to meet your needs, follow [Figure 19-Figure 24](#).

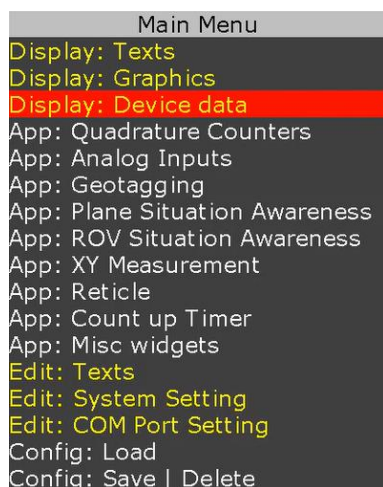


Figure 19

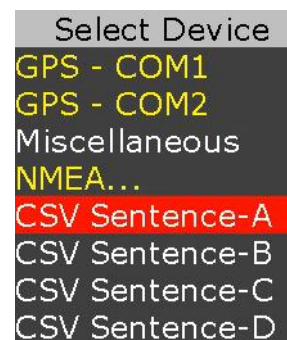


Figure 20

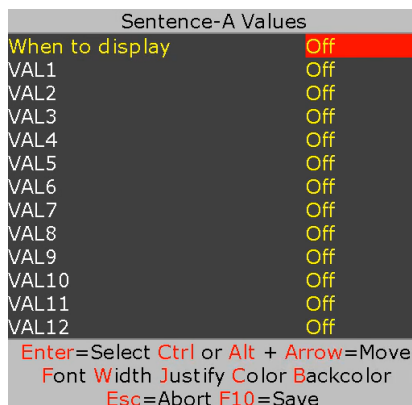


Figure 21

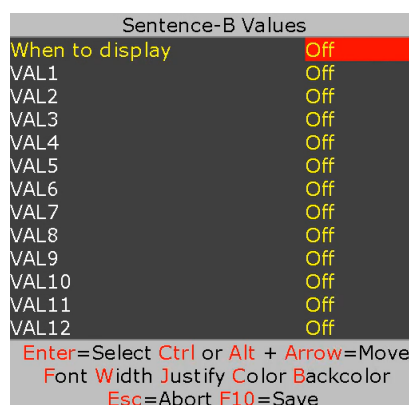


Figure 22

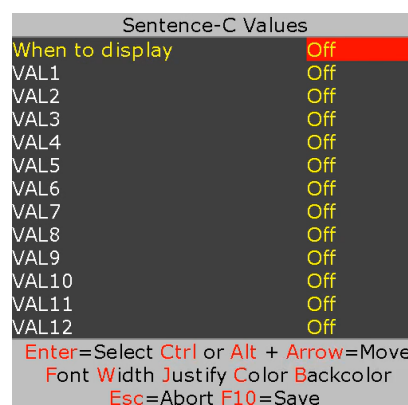


Figure 23

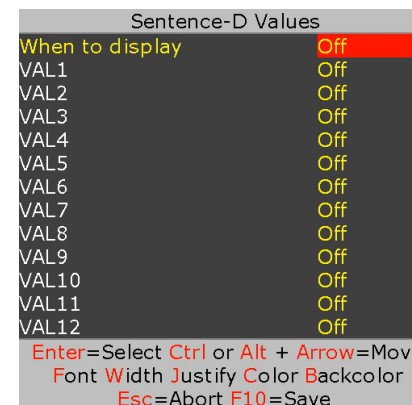


Figure 24

Figure 25

While in [Figure 21- Figure 24](#) , use $\uparrow$ to select desire CSV value. Press $\downarrow$ to select "On". Use [shortcuts](#) keys to format the text as described below:

Font select, field Width, text Justification, text Color, text Background and Ctrl or Alt + $\uparrow \leftrightarrow$ text position.

REAL TIME ANNOTATION


Follow [Figure 26](#) and [Figure 27](#) to enable “Real time annotation”.

The default settings for annotation is:

- Upper left corner (x, y) is 100, 100
- Font size #2
- Text color yellow
- Text background color blue

To change the default setting, visit [Display text](#) and follow [Figure 6](#) through [Figure 9](#) to display, position and format **Text #10**. Once complete, remove Text #10 as shown in [Figure 9](#).

Once annotation is enabled, your keyboard entries will appear as shown in the picture below. Press Esc to clear the text.

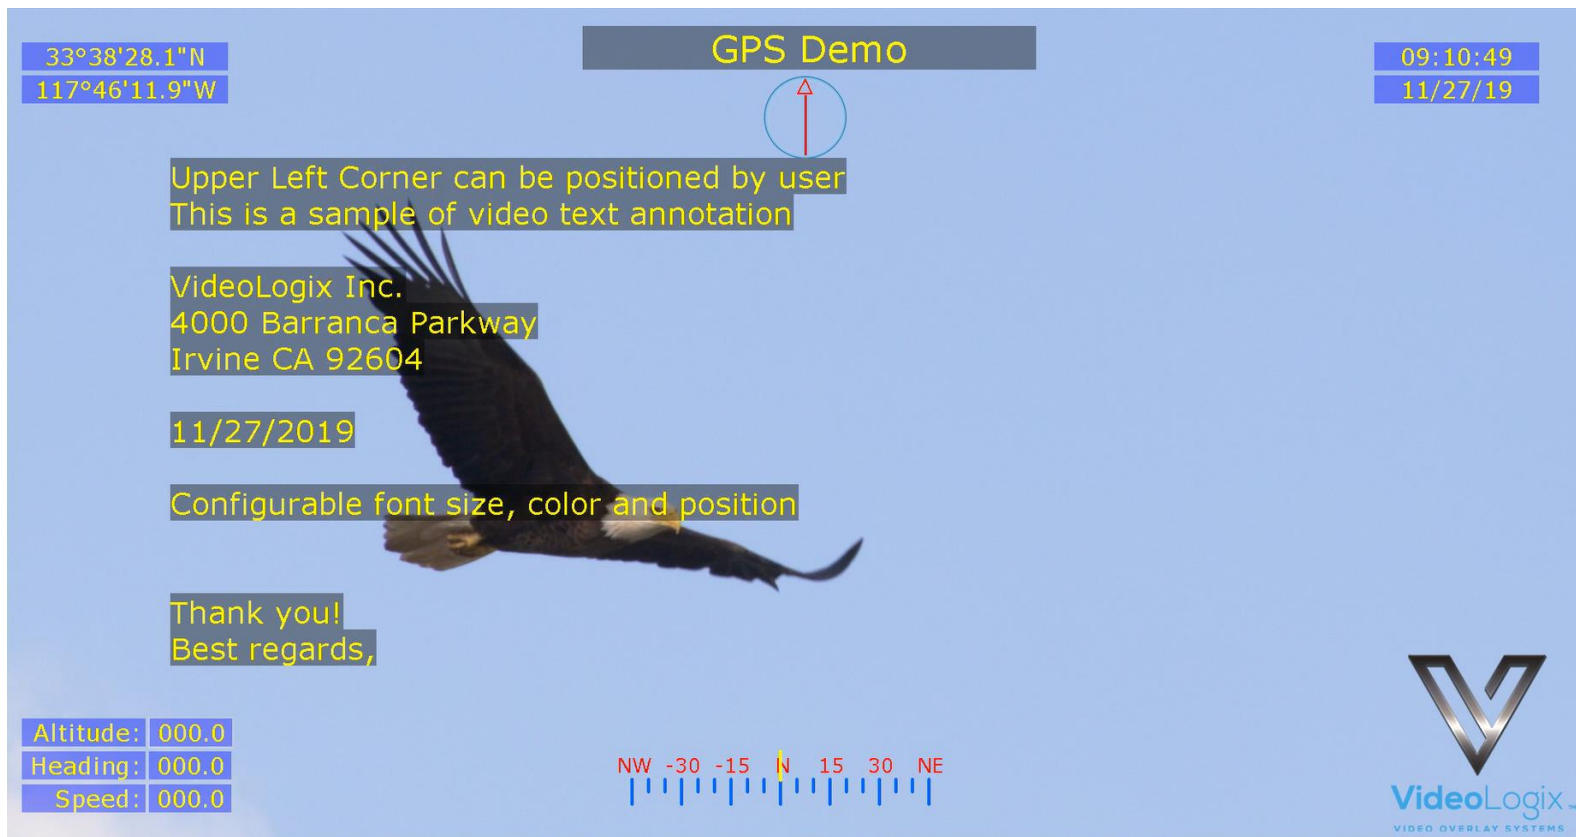

APPEND MILLISECOND COUNTER TO IRIG, GPS, RTC TIME

Follow [Figure 26](#) - [Figure 27](#) to append millisecond count to RTC, IRIB and GPS time. Millisecond counter is reset on second rollover. Once enable, the displayed time will refresh at video frame rate i.e. 30 time per second for 1080p@30

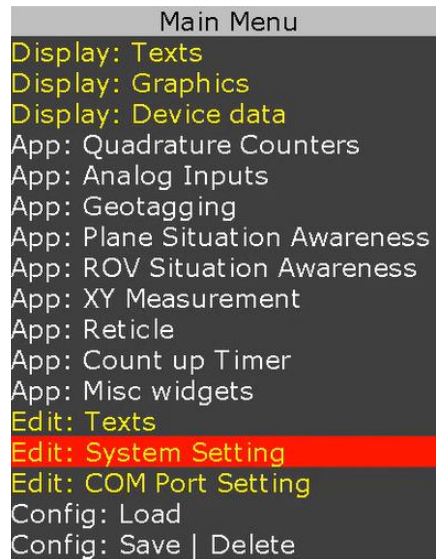


Figure 26

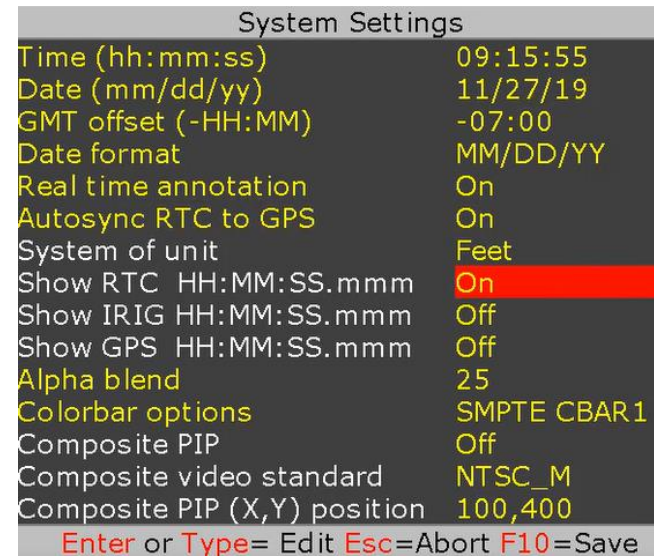


Figure 27

SNTP

SNTP (Simple Network Time Protocol) synchronizes PROTEUS built-in RTC with a server that has already been synchronized by a source such as a radio, satellite receiver or modem.

PROTEUS SNTP Client operates in unicast to obtain time over the network. It polls its SNTP Server on regular interval and waits to receive a reply from that Server. When one is received, it verifies that the reply contains a valid update by applying a set of 'sanity check' recommended by RFC 4330. It then applies Server clock directly to its local clock (RTC).

Follow [Figure 28 - Figure 29](#) to configure SNTP.

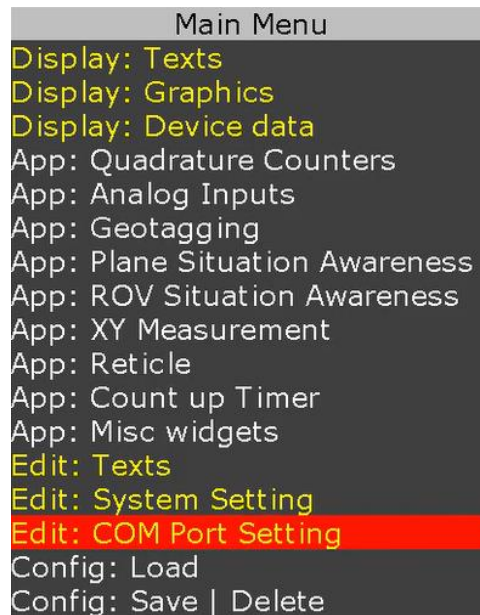


Figure 28


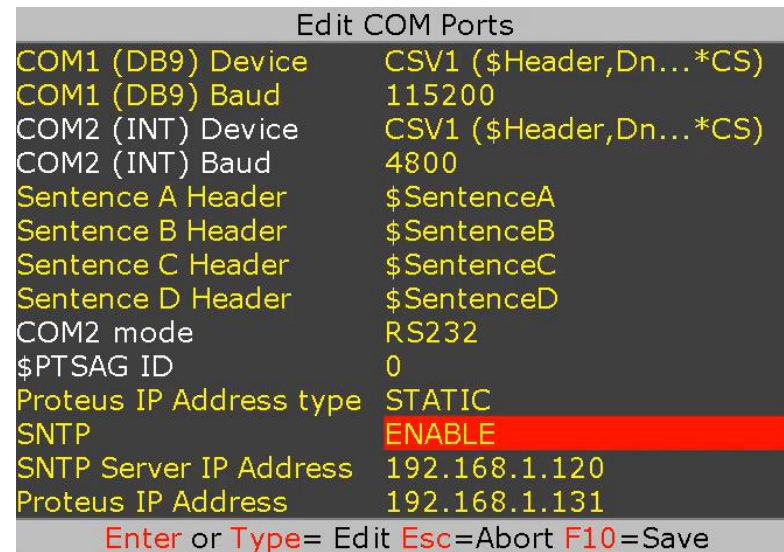


Figure 29

APPS

QUADRATURE OR SIMPLE COUNTERS

- Two Quadrature counters.
- Counters are 26-bits wide. Maximum count 67,108,863 or $\pm 33,554,431$
- Configurable line resolution $\times 1$, $\times 2$, $\times 4$. See diagram below for additional detail
- Dedicated RESET pins
- Raw counter value can be converted to any unit (distance, speed, etc.) using $\text{mapped_count} = m * \text{raw_count} + b$
- Counter values can be used to control “XY Measurement app” or “Reticle app”
- Interface compatible with Mechanical, Hall effect & Optical rotary encoders

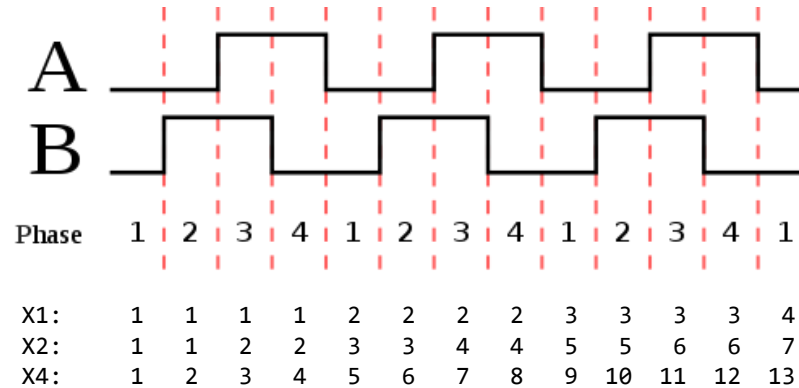


The counters can be configured as Quadrature or Simple counters.


Terminal Block (J52-J53) Pins	As Quadrature Counters	As Simple Counters
DIN1	RESET for Counter 1.	RESET for Counter 1
DIN2	RESET for Counter 2	RESET for Counter 2
DIN3	Quadrature Counter 1 inputs	Simple Counter 1 input
DIN4		-
DIN5	Quadrature Counter 2 inputs	Simple Counter 2 input
DIN6		-

Typical wiring connection for Quadrature Counters

Quadrature Counter 1

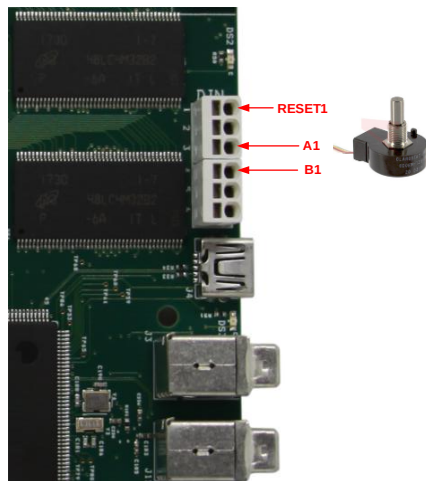

Quadrature Counter 2

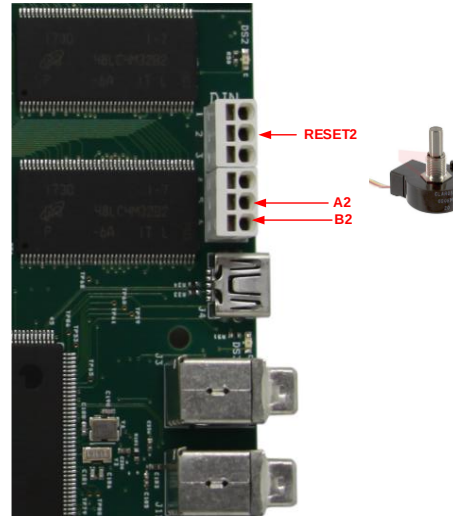


Electrical Interface

Input compatibility:


- 0-5V logic (10ma sink current)
- Frequency < 10MHz

Power & ground can be provided to the quadrature encoder via J55:

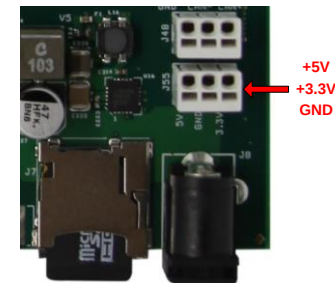


Typical wiring connection for Simple Counters

Simple Counter 1

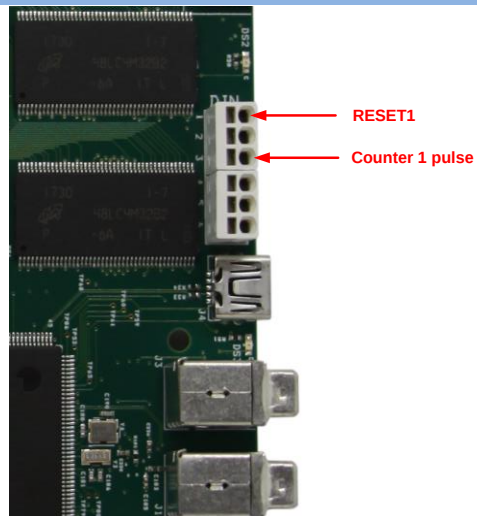

Simple Counter 2

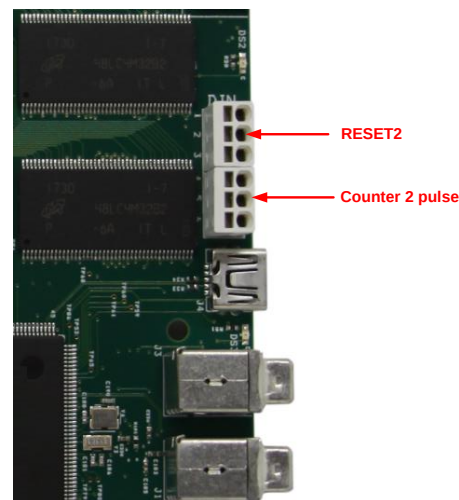

Electrical Interface

Input compatibility:

- 0-5V logic (10ma sink current)
- Frequency < 1KHz (5msec debounce)

CONFIGURE COUNTERS

A *sample* Quadrature file is provided with your PROTEUS. To load it, press F9, go to "*Config: Load*" and select "*Quadrature*".



- 1 Raw count
- 2 Mapped count
- 3 Misc. Parameters

$raw_count = 67,108,863 \text{ or } \pm 33,554,431$

$mapped_count = m * raw_count + b$

Title, Time & Date, Logo. Fully configurable by the user

To customize the sample file to meet your needs, follow [Figure 30 - Figure 32](#)

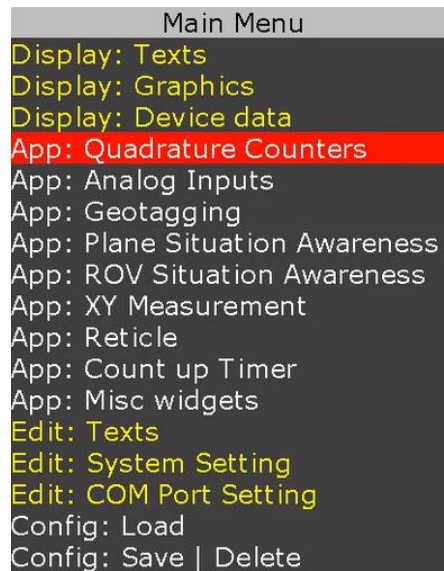


Figure 30



Figure 31

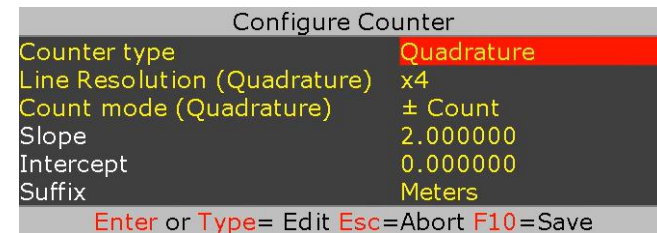


Figure 32

Follow [Figure 33 - Figure 34](#) to display map and raw counts.



Figure 33



Figure 34


EXAMPLE

Configure counter 1 for 0.0023 inch/count and display result.

- Follow [Figure 30 - Figure 32](#) to set Counter 1 "Slope" and "Intercept" to 0.0023 and 0 respectively.
- Follow [Figure 30, Figure 33 - Figure 34](#) to display "Counter 1 Map"

ANALOG DATA

- Four Analog inputs
- Input range 0..3.3V
- Internal low pass RC filter (24Ω, 5600pF)
- 12-Bit ADC. Analog signals are *Sampled* at 1KHz. Each ADC *Sample* is average of 4 consecutive (2μs apart) samples
- ADC_{raw} is average of 1 to 64 (user selectable) most recent *Samples*.
- For example $n=1$ displays the most recent sample and $n=8$ displays average of the most recent 8 samples
- Analog signals can be converted to any unit using $ADC_{mapped} = m * ADC_{raw} + b$
- ADC_{mapped} and ADC_{raw} are placed in video frame on falling edge of VSYNC. See diagram below for additional detail
- Analog signals can also be used to control “XY Measurement app” or “Reticle app”

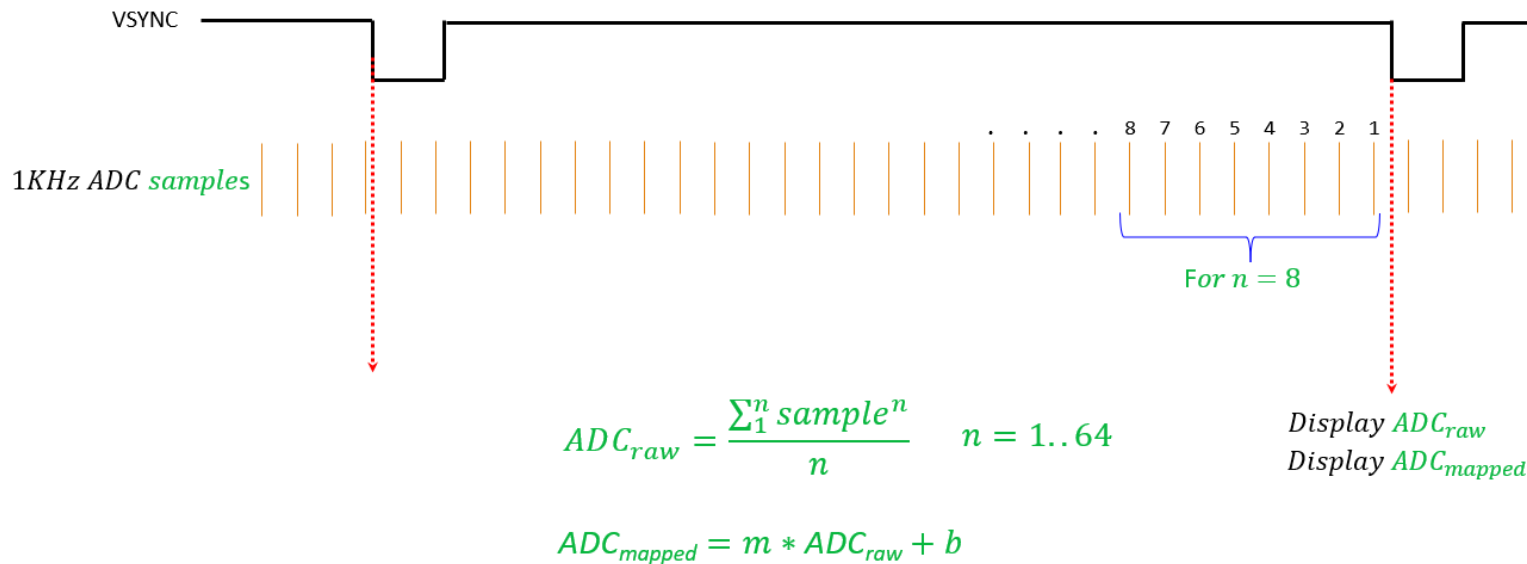

TB: J50	Description	Range	Corresponding 12-bit ADC Value
Pin 1	GND	-	-
Pin 2	Analog Input CH1	0..3.3V	0..4095
Pin 3	Analog Input CH2	0..3.3V	0..4095
Pin 4	Analog Input CH3	0..3.3V	0..4095
Pin 5	Analog Input CH4	0..3.3V	0..4095
Pin 6	GND	-	-

A *sample* Analog file is provided with your PROTEUS. To load it, press F9, go to “*Config: Load*” and select “*Analog*”.



- 1 Raw Analog values
- 2 Mapped Analog values
- 3 Misc. Parameters

$$ADC_{raw} = 0.4095$$

$$ADC_{mapped} = m * ADC_{raw} + b$$

Title, Time & Date, Logo. Fully configurable by the user

To customize the sample file to meet your needs, follow [Figure 35 - Figure 37](#):

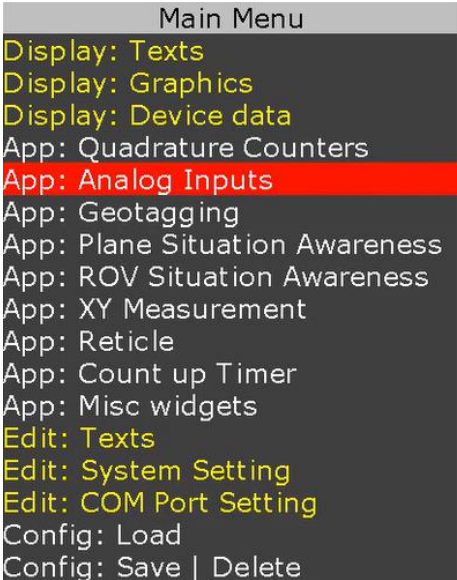


Figure 35



Figure 36

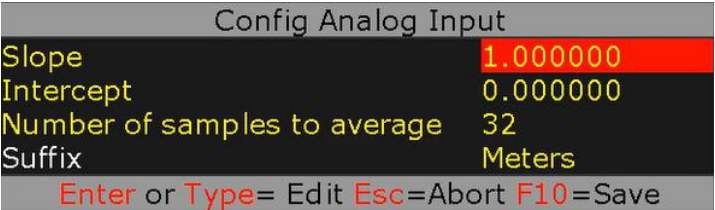


Figure 37

Follow [Figure 38 - Figure 39](#) to display map and raw values.



Figure 38


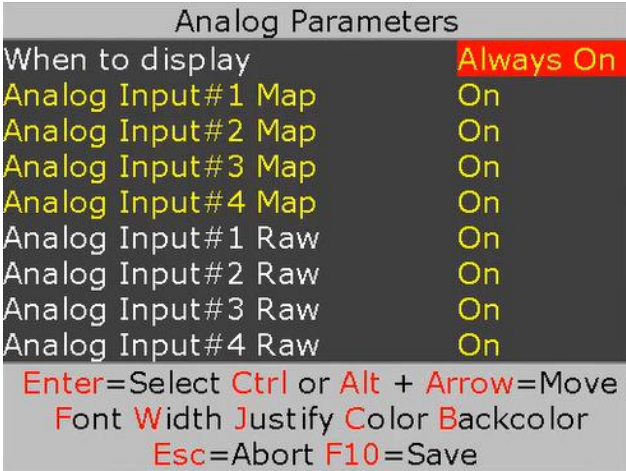


Figure 39

EXAMPLE 1

Configure analog channel 1 to convert 0-3.3V input to display 0 - 667.5 feet.

Input	ADC Count	Represent (feet)
3.3V		
0	0	0
3.3	4095	667.5

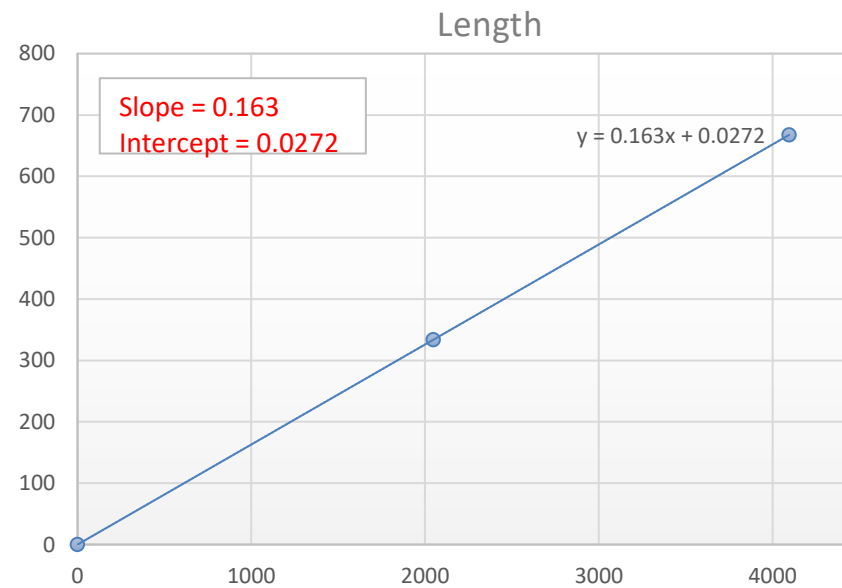


Follow [Figure 35 - Figure 37](#) to set CH1 “Slope” & “Intercept” to 0.163 and 0.0272 respectively.

Follow [Figure 38 - Figure 39](#) to display “Analog Input #1 Map”

To quickly get familiar with this app, please watch our short tutorial video “[Tutorial Analog Inputs](#)” on our web site.

XY MEASUREMENT

A *sample* XY measurement file is provided with your PROTEUS. To load it, press F9, go to "Config: Load" and select file "XY Measurement"

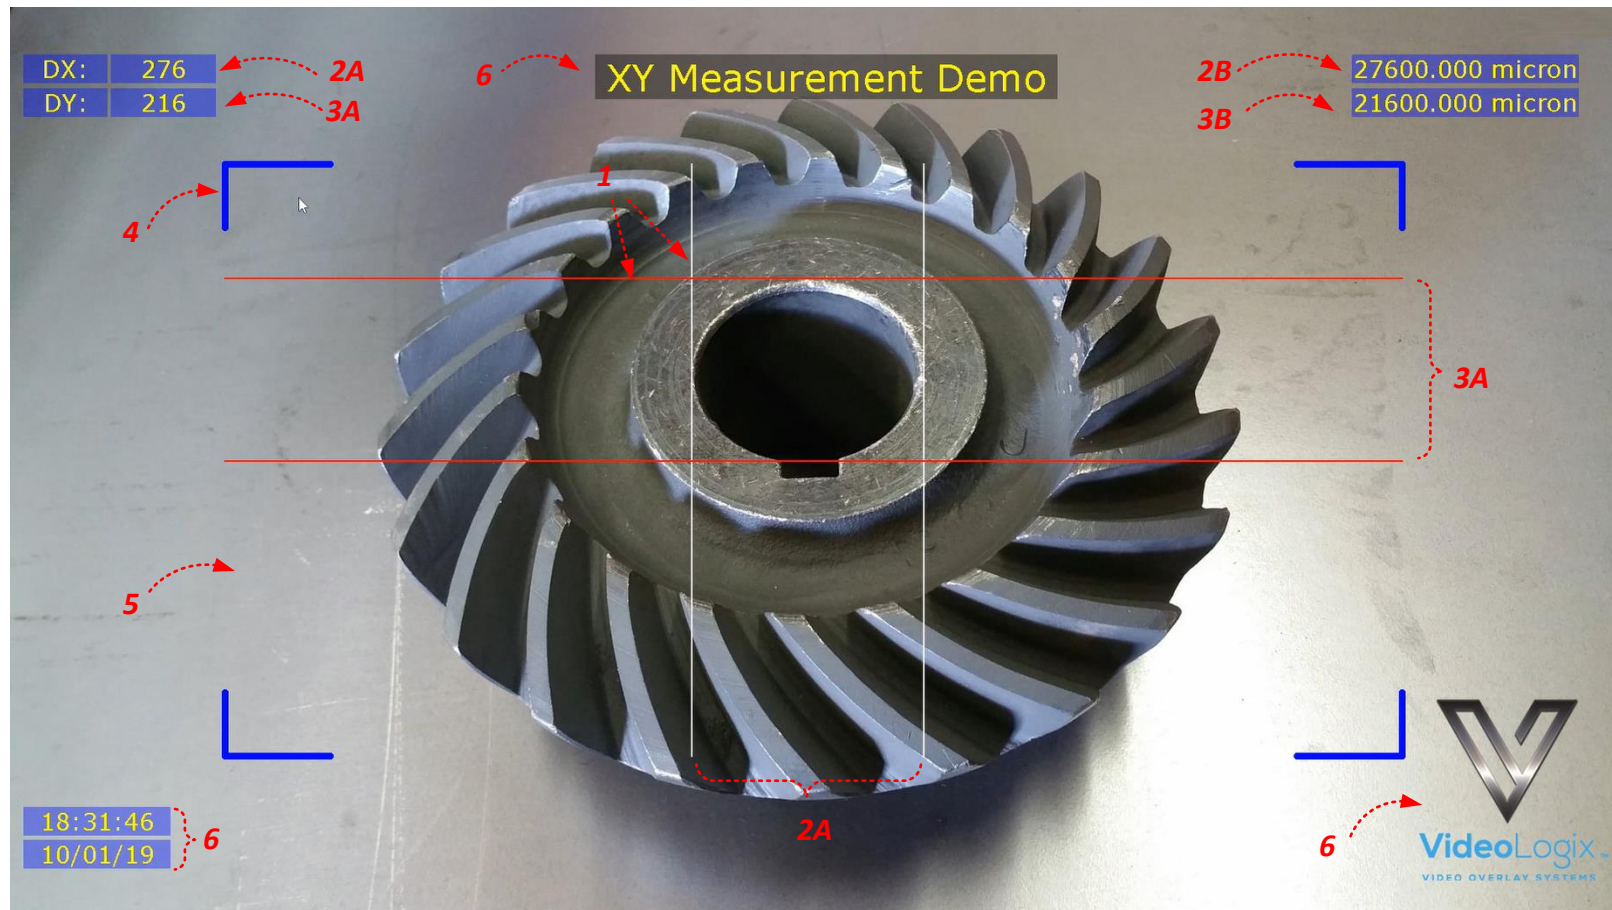

- | | | |
|----|------------------|--|
| 1 | Markers | $x1, x2, y1, y2$ markers. Can be moved via Analog inputs, quadrature inputs, RS232 command, arrow keys |
| 2A | Delta X | $DX = x2 - x1 $ |
| 2B | Calibrated DX | $CX = mx * DX + bx$ |
| 3A | Delta Y | $DY = y2 - y1 $ |
| 3B | Calibrated DY | $CY = my * DY + by$ |
| 4 | Border | Border can be a bracket, box or none. Adjustable line width & color |
| 5 | Area | The width and height are adjustable up to 1920 x 1080 |
| 6 | Misc. Parameters | Title, Time & Date, Logo. Fully configurable by the user |

To customize the sample file to meet your needs, follow [Figure 40 - Figure 42](#):

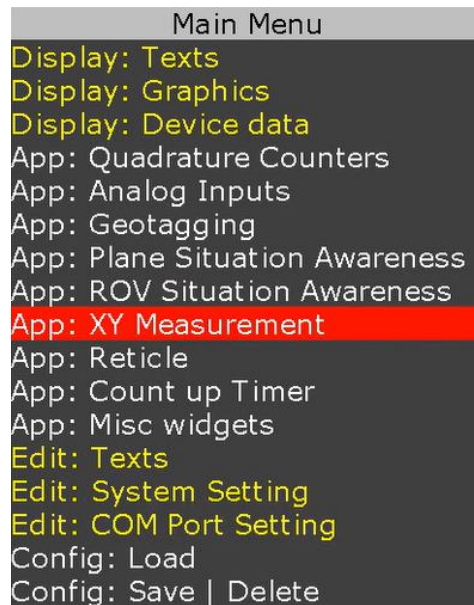


Figure 40



Figure 41

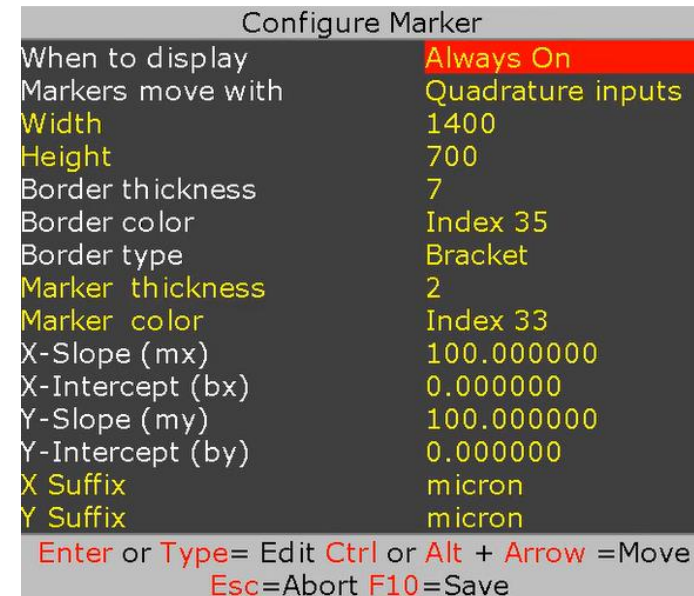


Figure 42

There are 4 options for X1, X2, Y1, Y2 marker movement:

[Analog Inputs](#)

Apply 0-3.3V to CH1-CH4

[Quadrature Inputs](#)

Connect incremental encoder switches to quadrature inputs# 1,2.
(Toggle **IN0** to select between horizontal & vertical marker pair)

RS232 Command

Send command **\$VL43,157,x1,x2,y1,y2*XX** to set registers **#157,158,159,160**


Keyboard Arrow

Use **↔** to move 1-pixel resolution. Use **Ctrl + ↔** to move 25 pixels. Press **↓** to select next marker.


To quickly get familiar with this app, please watch our short tutorial video ["Tutorial Video XY Measurement"](#) on our web site.

RETICLE

A *sample* Reticle file is provided with your PROTEUS. To load it, press F9, go to “*Config: Load*” and select “*Reticle*”.

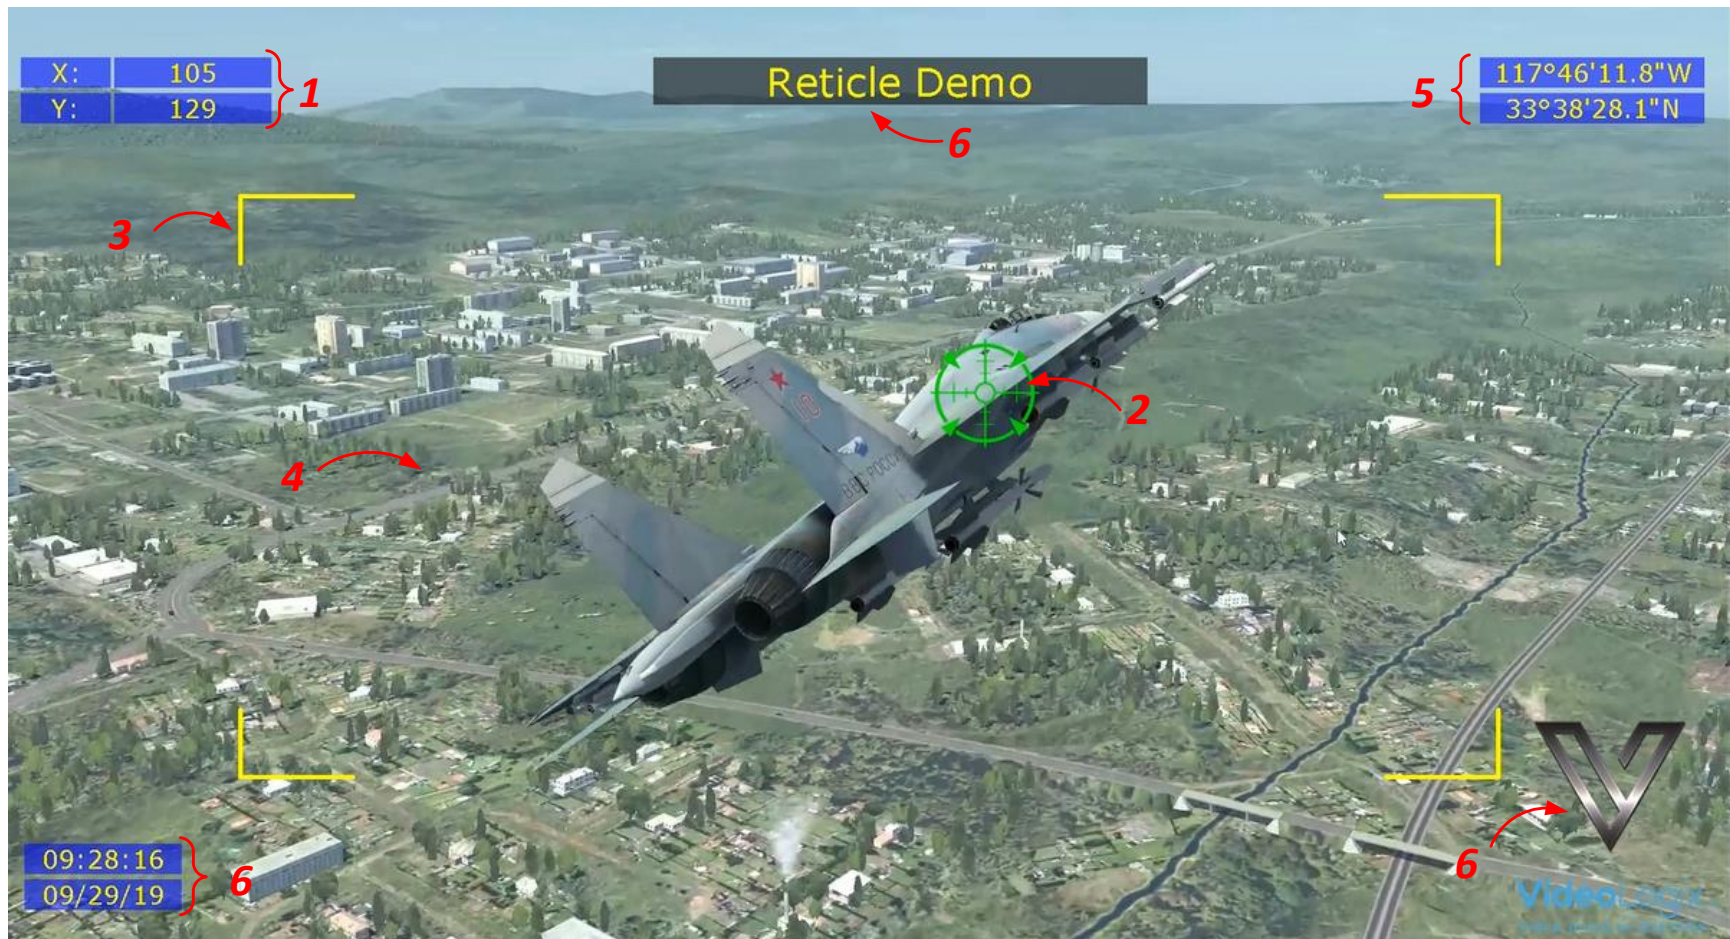

- | | | |
|---|------------------|---|
| 1 | Reticle position | Reticle X&Y position. Center is at 0,0 |
| 2 | Reticle style | Reticle can be any PNG image, adjustable crosshair or square box. See examples below. |
| 3 | Border | Reticle can be moved by via Analog inputs, quadrature inputs, RS232 command, arrow keys |
| 4 | Area | Border can be a bracket, box or none. Adjustable line width & color |
| 5 | GPS | The width and height are adjustable up to 1920 x 1080 |
| 6 | Misc. parameters | Latitude & Longitude
Title, Time & Date, Logo. Fully configurable by the user |

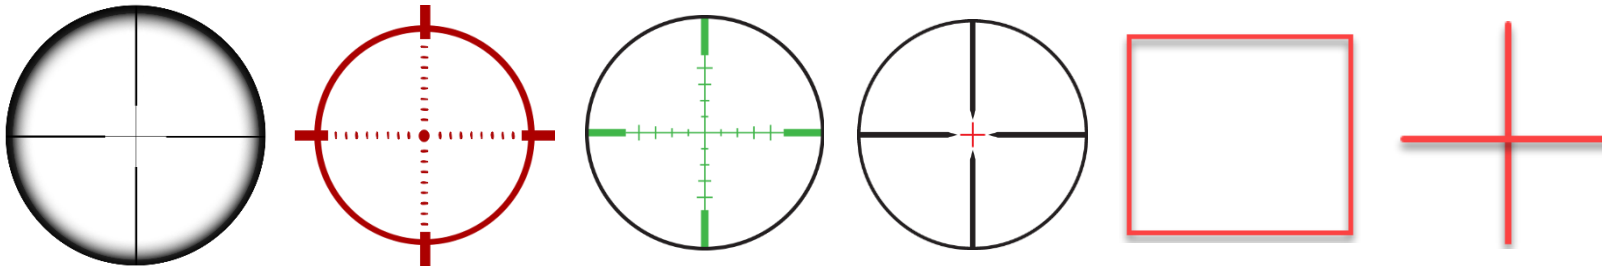

To customize the sample file to meet your needs, follow [Figure 43 - Figure 45](#)

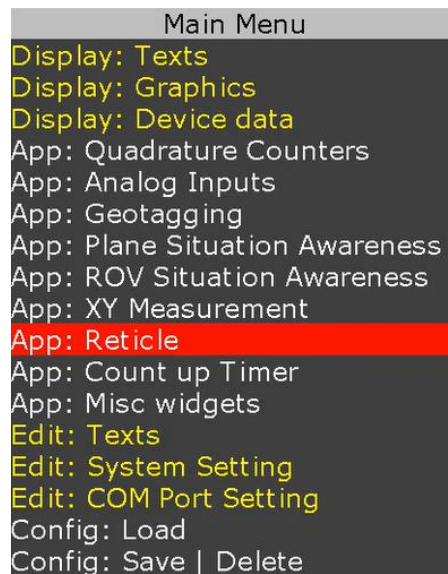


Figure 43



Figure 44



Figure 45

There are 4 options for Reticle movement:

[Analog Inputs](#)

Apply 0..3.3V to CH1-CH2

[Quadrature Inputs](#)

Connect two incremental encoder switches to quadrature inputs# 1,2

RS232 Command

Send command \$VL43,155,x,y*XX to set registers #155,156

Keyboard Arrow

Use $\updownarrow\leftrightarrow$ to move 1-pixel resolution. Use Ctrl + $\updownarrow\leftrightarrow$ to move 25 pixels

To quickly get familiar with this app, please watch our short tutorial video "[Tutorial Reticle](#)" on our web site.

PLANE SITUATION AWARENESS

A **sample** Plane file is provided with your PROTEUS. To load it, press F9, go to "**Config: Load**" and select "**Plane**".



- | | | |
|------------|------------------------|---|
| 1 | GPS data | Read from GPS attach to COM1 or COM2 |
| 2 | Plane Situation Widget | Please see below for detail description |
| 3 | Compass | Rolling compass widget |
| 4A, 4B, 4C | Sliders | 4A depict pitch, 4B roll and 4C Altitude |
| 5 | Timer | A count up timer with msec resolution |
| 6 | CSV Sentence-A values | VAL1 = Heading, VAL2 = Bearing, VAL3 = Roll, VAL4=Pitch, VAL5 = Depth |
| 7 | Misc. parameters | Title, Logo. Fully configurable by the user |

PLANE SITUATION AWARENESS WIDGET

As shown in [Figure 46](#), Plane situation awareness widget depicts parameters such as heading, bearing (relative or magnetic), roll, pitch, azimuth, elevation. The size of the widget is governed by the background image shown in [Figure 47](#). Larger image will result in a larger widget. Background image resides on the microSD and can be replaced by a user-provided image for different size and look & feel. The image must be named "Ring Plane".

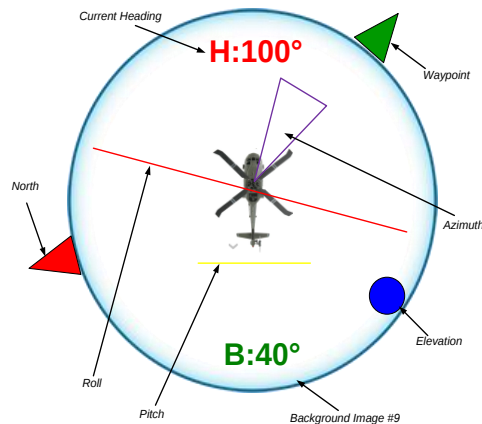


Figure 46

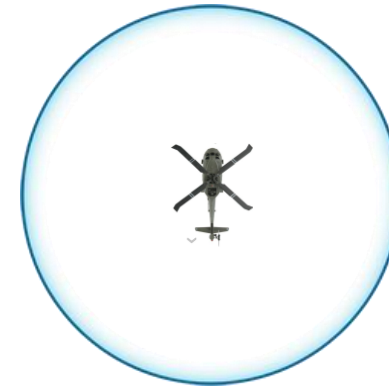


Figure 47

Follow [Figure 48 - Figure 49](#) to configure the widget.

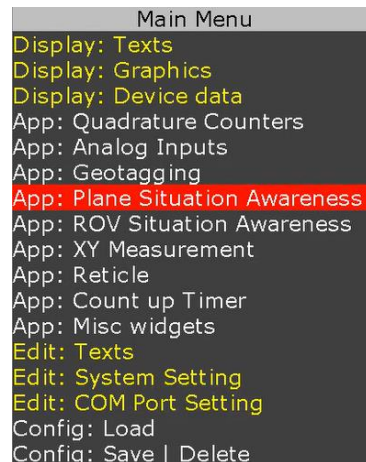


Figure 48

Aircraft Situation Awareness	
When to display	Always On
REG: Heading°	40
REG: Bearing°	41
REG: Roll°	42
REG: Pitch°	43
REG: Gimbal Azimuth°	44
REG: Gimbal Elevation°	45
REG: Lens	46
Invert: Heading°	Off
Invert: Bearing°	Off
Invert: Roll°	Off
Invert: Pitch°	Off
Invert: Azimuth°	Off
Invert: Elevation°	Off
Relative Bearing°	Off
Text color	Index 32
Enter or Type= Edit Ctrl or Alt + Arrow =Move Esc=Abort F10=Save	

Figure 49

Follow [Figure 49](#) to specify what register are associated with each parameter. For example, table below shows available options for heading:

Register # associated with Heading	Description
102	Heading is provided by attaching Garmin GPS modem to a COM port
114	Heading is provided by attaching Vector NAV INS sensor to a COM port
40	Heading is provided by transmitting a CSV sentence A to a COM port. Heading would be VAL1
00	Do not display heading

The device (GPS, INS ...) specific registers are updated automatically when it is connected to PROTEUS. When the content of a register changes, any widget (text or graphic) that is linked to that register is **automatically** updated.

The content of any register can also be changed by sending Set Register Command. Assuming register 40 is linked to heading, command below will set the heading to 85°. Therefore, all widgets linked to register 40 will be updated automatically.

\$VL43,40,85*XX

[Figure 50](#) demonstrates the relation between heading, relative vs magnetic bearing:


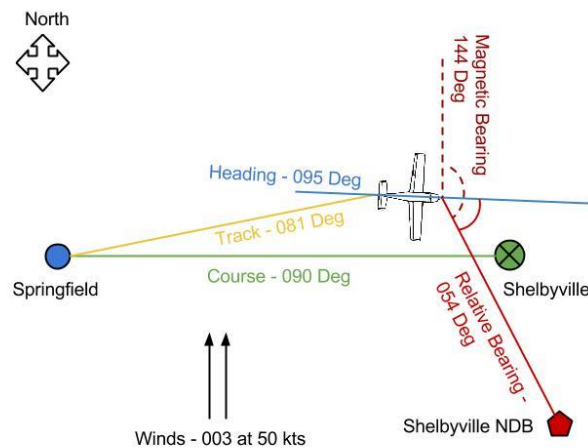


Figure 50

To customize the sample file to meet your needs, please visit the corresponding section in this document to learn about the specifics.

ROV SITUATION AWARENESS

A *sample* ROV file is provided with your PROTEUS. To load it, press F9, go to "Config: Load" and select "ROV".

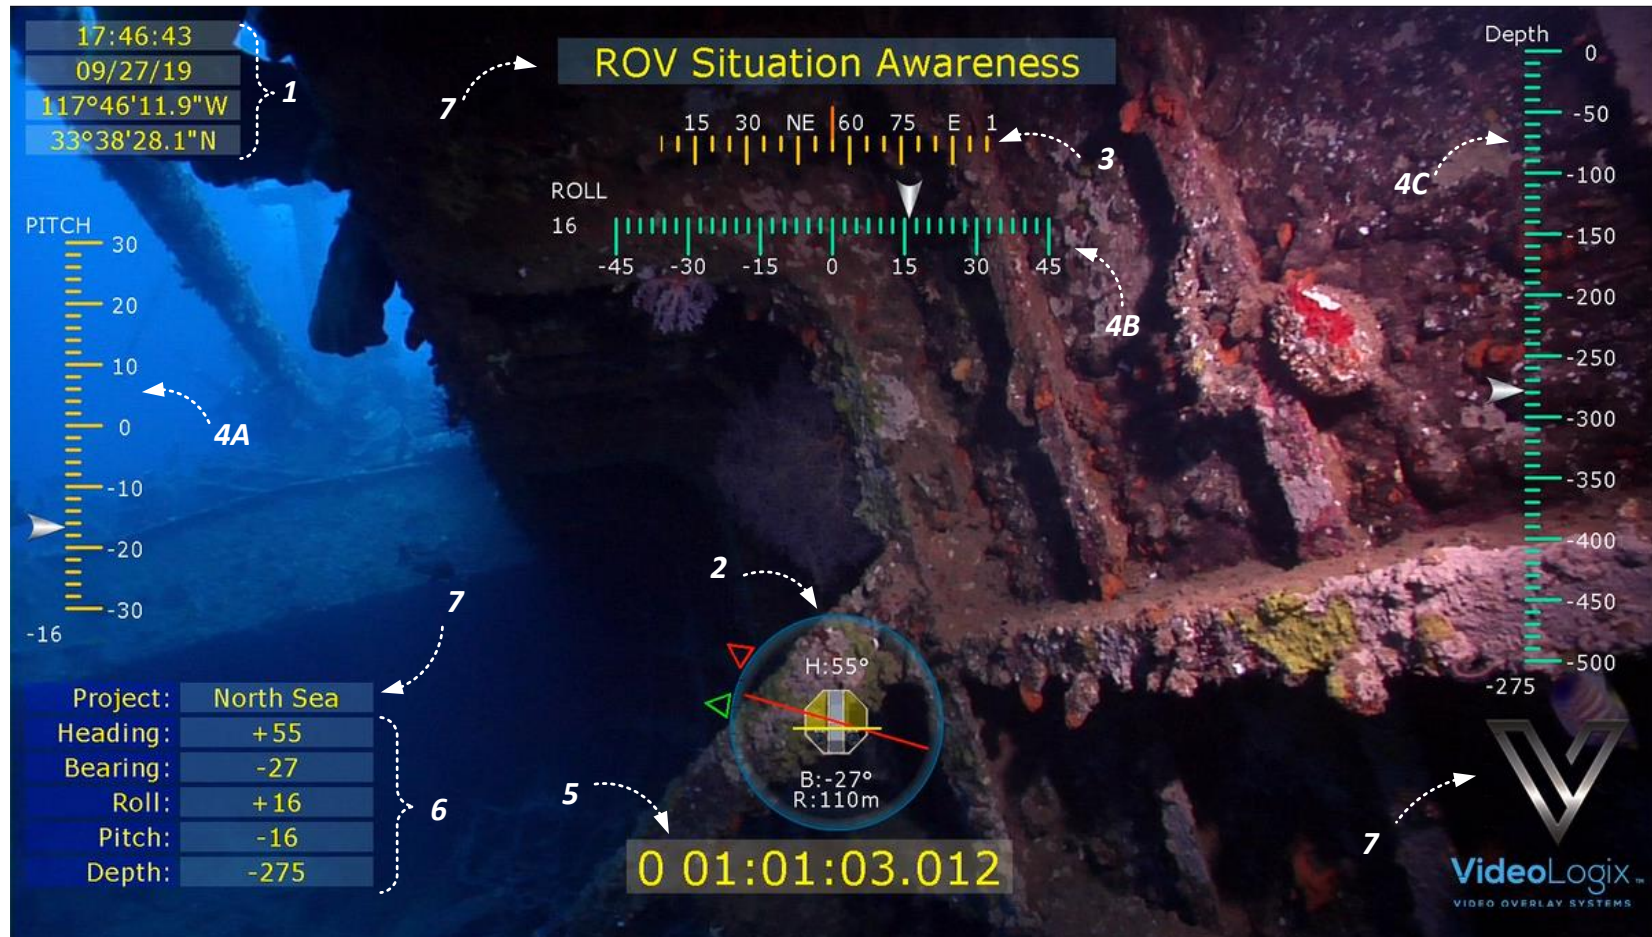

- | | | |
|------------|-----------------------|---|
| 1 | GPS date | Read from GPS attach to COM1 |
| 2 | ROV Situation Widget | Please see below for detail description |
| 3 | Compass | Rolling compass widget |
| 4A, 4B, 4C | Sliders | 4A depict pitch, 4B roll and 4C Depth |
| 5 | Timer | A count up timer with msec resolution |
| 6 | CSV Sentence-A values | VAL1 = Heading, VAL2 = Bearing, VAL3 = Roll, VAL4=Pitch, VAL5 = Depth |
| 7 | Misc. parameters | Title, Logo. Fully configurable by the user |

ROV SITUATION AWARENESS WIDGET

As shown in [Figure 51](#), ROV situation awareness widget depicts parameters such as heading, bearing (relative or magnetic), range to target, roll and pitch. The size of the ROV widget is governed by the background image shown in [Figure 52](#). Larger image will result in a larger widget. Background image resides on the microSD and can be replaced by a user-provided image for different size and look & feel. The image must be named "Ring Rov".

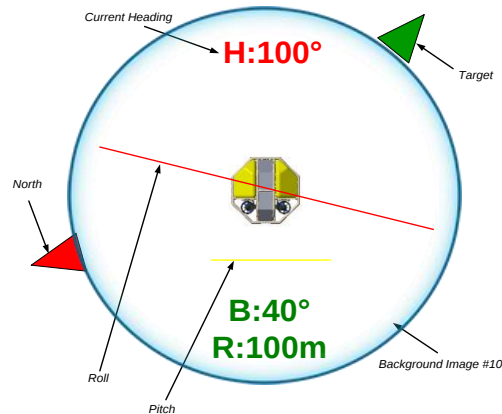


Figure 51

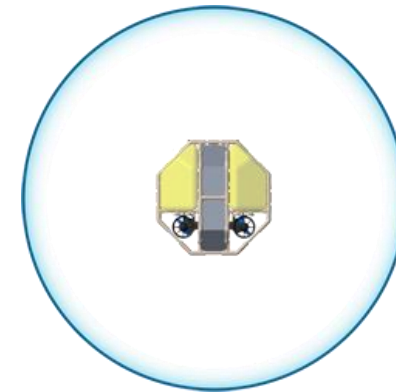


Figure 52

Follow [Figure 53-Figure 54](#) to configure the widget.

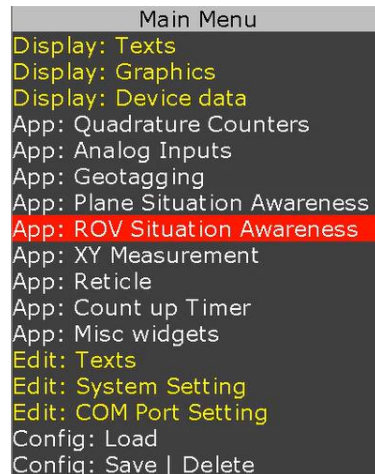


Figure 53

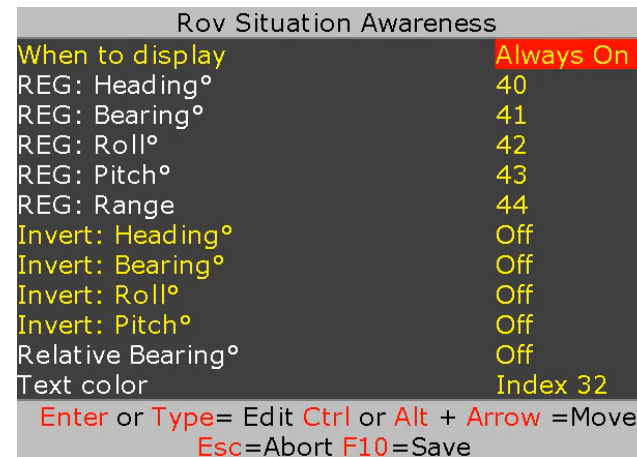


Figure 54

Follow [Figure 54](#) to specify what register is associated with each parameter. For example, table below shows available options for heading:

Register # associated with Heading	Description
80	Heading is provided by attaching Garmin GPS modem to PROTEUS COM port
110	Heading is provided by attaching Vector NAV INS sensor to PROTEUS COM port
40	Heading is provided by transmitting a CSV sentence A to a COM port. Heading would be 1 st variable.
00	Do not display heading

The device (GPS, INS ...) specific registers are updated automatically when it is connected to PROTEUS. When the content of a register changes, any widget (text or graphic) that is linked to that register is **automatically** updated.

The content of any register can also be changed by sending Set Register Command. Assuming register 40 is linked to heading, command below will set the heading to 85°. Therefore, all widgets linked to register 40 will be updated automatically.

```
$VL43,40,85*XX
```

To customize the sample file to meet your needs, please visit the corresponding section in this document to learn about the specifics.

SLIDERS

PROTEUS provides 4 fully configurable sliders. Follow [Figure 55- Figure 57](#) to configure the sliders.



Figure 55



Figure 56

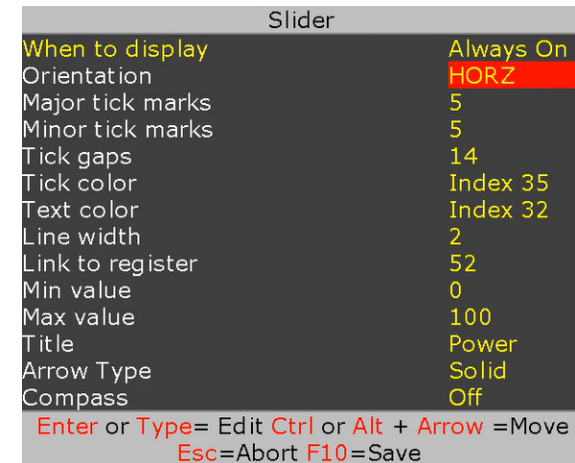


Figure 57

Slider must be linked to a register. Registers are updated via associated sensors or through RS232 commands. When the linked register receives a new value, associated slider is automatically updated.



Assuming slider is linked to register #40, RS232 command \$VL43,40,30*XX will set slider to 30.



Figure 58

COMPASS

PROTEUS provides a rolling compass and simple circular compass as shown below.

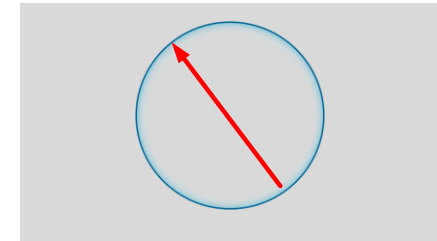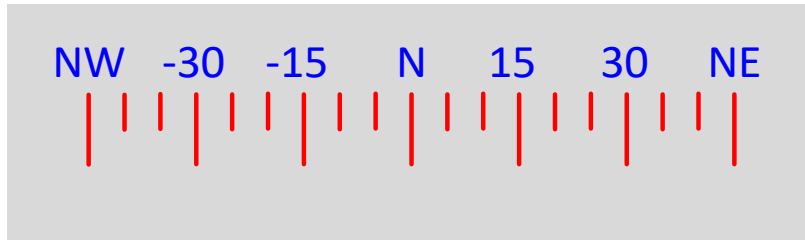

Follow [Figure 59 - Figure 61](#) to configure each compass



Figure 59



Figure 60

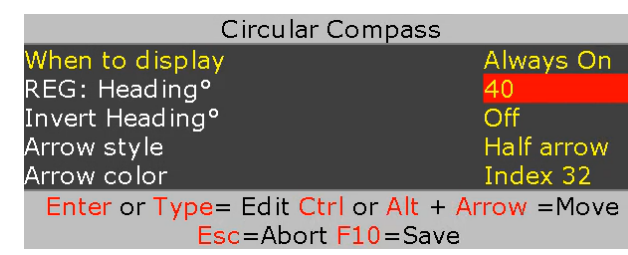


Figure 61

Rolling compass provides 4 visible spans (30° , 45° , 60° , 90°) with 4 different legends described below:

- $0..360^\circ$
- $0..360^\circ$ NSEW
- $-180^\circ \dots +180^\circ$
- $-180^\circ \dots +180^\circ$ NSEW

The size of the circular compass widget is governed by its background image. Larger image will result in a larger compass. Background image resides on the microSD and can be replaced by a user-provided image for different size and look & feel. The image must be named "Ring100".

GEOTAGGING & KML GENERATION

Geotagging is the process of syncing geographical data such as latitude and longitude coordinates, time and date, video time code (VTC), altitude, bearing, camera gyro (pitch, roll, azimuth) etc. to your video in real time. This produces geotagged media (KML file) that can be viewed in Google Earth so you can see the exact location where video was taken.

During geo recording, operator can drop unique place markers (red marker #1, #2) to bring attention to monitoring staff.

During playback, monitoring staff can click on any place marker and jump to the exact instant in the video.


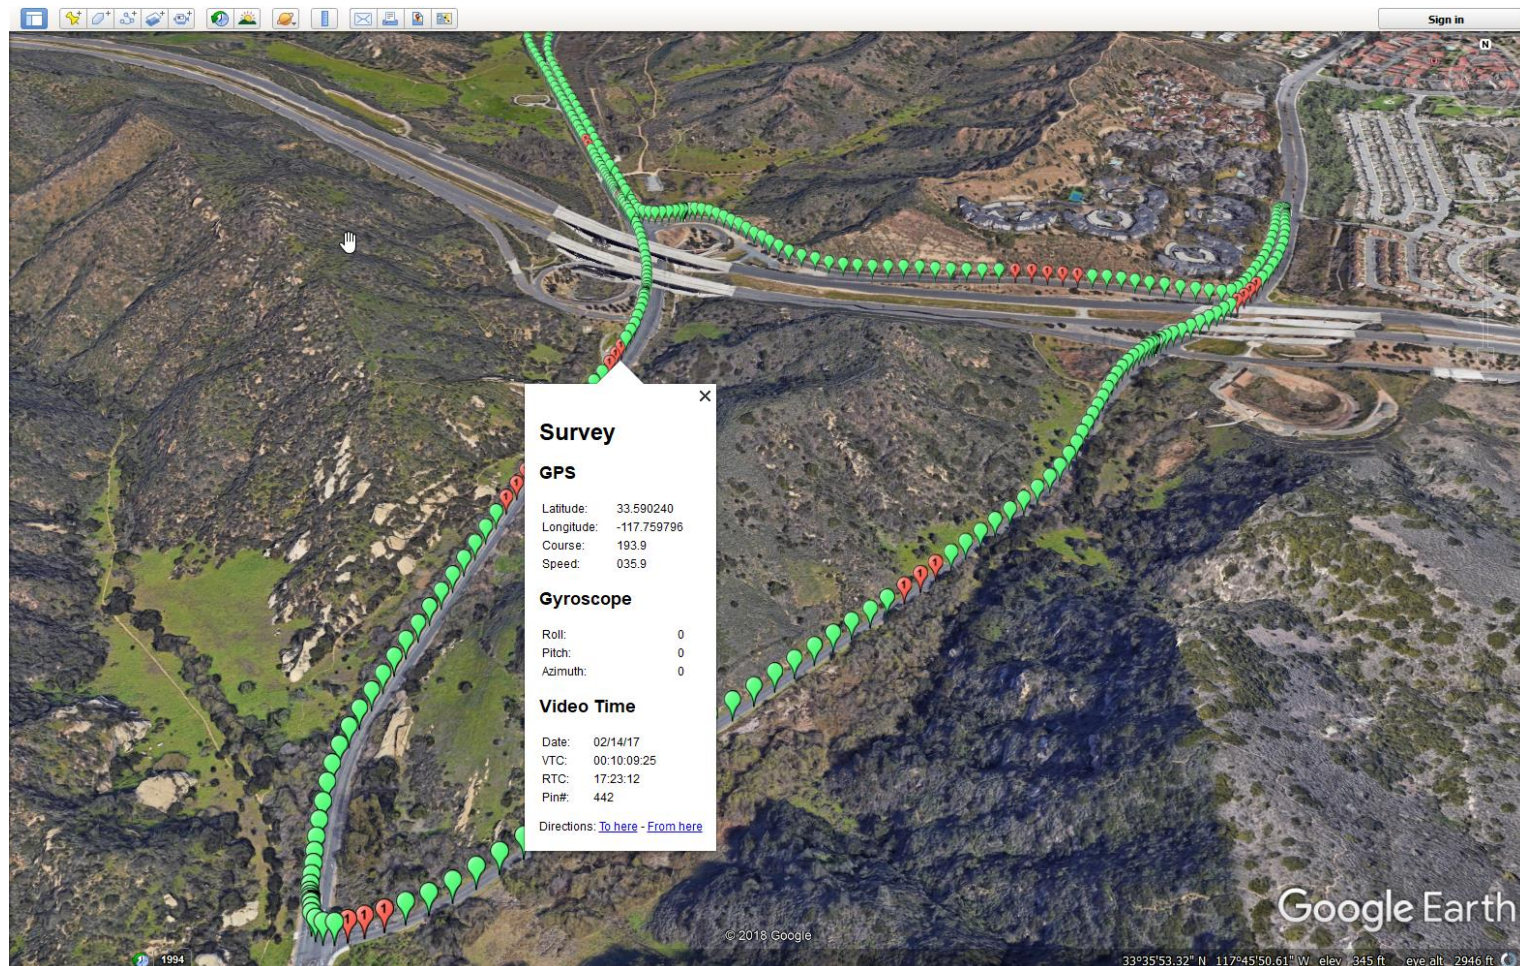


Figure 62

RECORDING SETUP




PLAYBACK SETUP

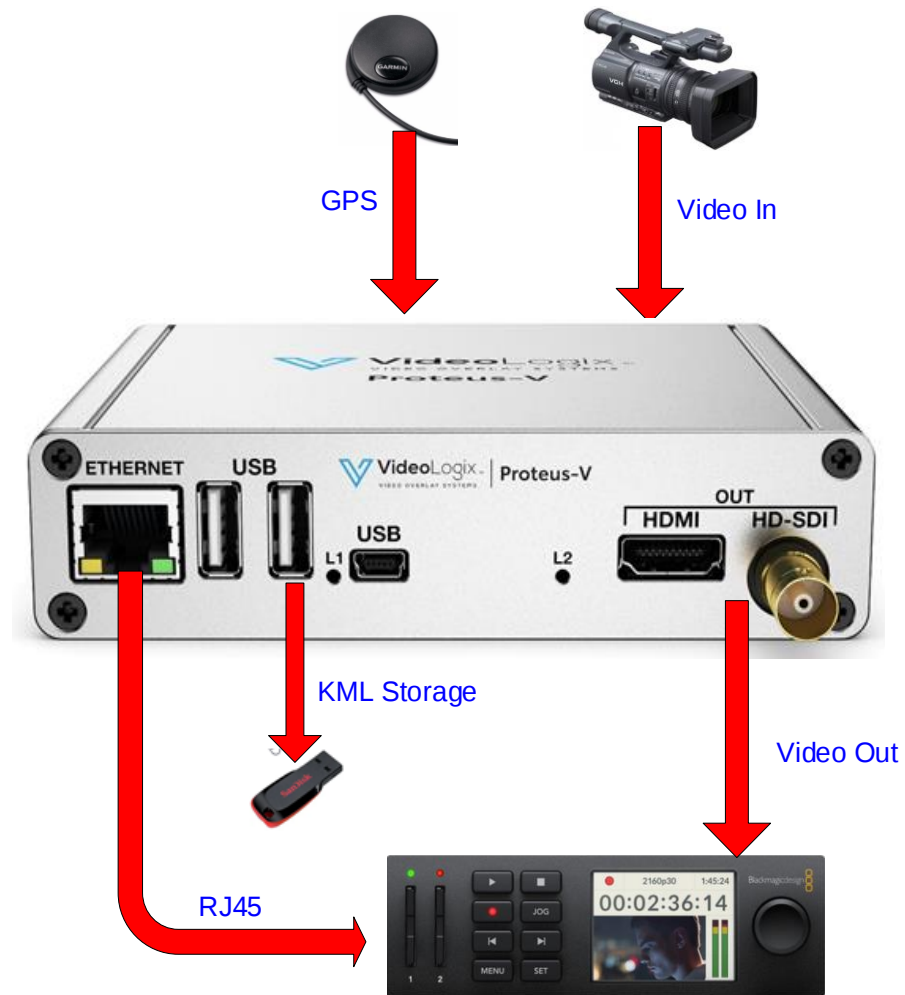

CONFIGURATION

Press F9 and follow figures below to configure the geotagging.

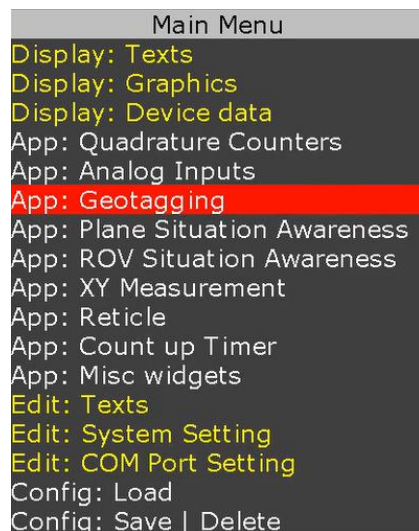

Settings	Description
REG: Gyro Pitch	Enter PROTEUS register# where values are read from. For example, for Pitch: • If a Vector NAV IMU is attached to PROTEUS, enter 115 • If user provides pitch value via CSV Sentence-A (VAL2) enter 41 • If not required, enter 0
REG: Gyro Roll	
REG: Gyro Azimuth	
REG: Heading	
REG: Latitude	
REG: Longitude	
KML File Name	<i>This field will be used in the future release</i>
Video File Name	<i>This field will be used in the future release</i>
F1/F2 Control Video Recording	<i>Video recording can be control directly or via keyboard. F1 = Start, F2 = Stop</i>
Log KML when moving only	<i>To reduce file size, recording can be enabled only when in motion</i>
Include Video Time Code	If enable, video recorded must be connected to PROTEUS via Ethernet cable
Video Recorder IP address	Enter IP address of the video recorder

You can easily customize what information is over laid on your video in real time. In the sample screen shown in [Figure 63](#):

- GPS time, date, latitude and longitude are superimposed on the upper left.
- A rolling compass in the center.
- Current Video Time Code (VTC) and current place marker # on the upper right.

As show in Figure 62, the default place maker is green. When F3 or F4 is pressed, red place marker #1 or #2 is inserted once. Alternative place markers can be used to quickly bring attention to locations requiring in depth analysis.

To start KML recording, press F1.

To stop KML recording, press F2.

As show in Figure 62, during KML recording, the red icons located on the upper right flashes once per second to confirm recording is in process.



Figure 63

COUNT UP TIMER

PROTEUS provides Count Up timer. Follow [Figure 64-Figure 65](#) to configure the timer.

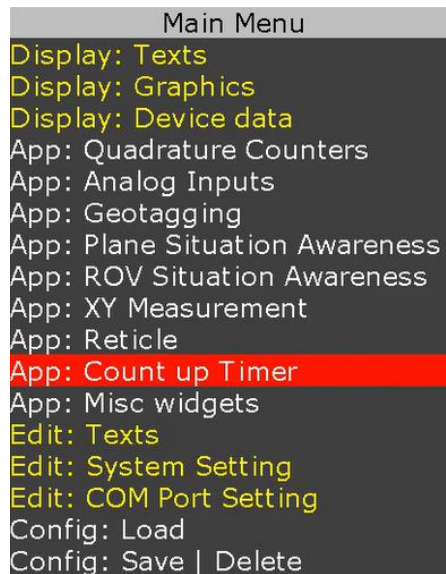


Figure 64



Figure 65

CLOCK SOURCE

Source	Description
Internal 27MHz	Source for 1msec pre-scaler

EXTERNAL CONTROLS

GPI	Description
IN1	0 = Pause Timer, 1 = Resume Timer
IN2	0 = Reset Timer. Reset occurs within 10nsec.

TIMER FORMAT

Timer format is "D HH:MM:SS.mmm" where D is number of days and mmm is milliseconds

PROTEUS COMMANDS

Aside from supporting various connected devices, PROTEUS provides over 30 powerful commands to overlay crisp and clear texts, graphics and telemetry generated information into an incoming HD & SD video in real time. Refer to the Software Communication Spec (SCS) for the detail description of each command.

TRANSMIT A COMMAND SCRIPT

1. Connect PROTEUS to your monitor. Connect RS232 cable from your PC to the PROTEUS. Power on PROTEUS.
2. Run *PROTEUSApp* located in folder *C:\VideoLogix-V\utility*.
3. Use *File, Select Com Port* to assign a com port.
4. Go to "Demo/Tutorial" tab.
5. Click *Run Script Now* button and load *C:\VideoLogix-V\Script\0-TestCommands*.
6. A demo should appear on your video monitor.

PROTEUS REGISTERS

PROTEUS system contains a collection of registers used for configuring the system and accessing the data it produces. These registers may be read or written to using the Read Register and Write Register commands (refer to SCS for detail). The table in Appendix G provides a quick reference for all the registers and their associated properties. The device specific (Cineflex, IMU, GPS ...) registers are automatically updated when the associated device is connected to PROTEUS. Widgets that are linked to a register are updated automatically when the content of the register changes.

SPECIFICATIONS

MAXIMUM INPUT VOLTAGE

Min (DCIN)	Max (DCIN)	Power
6VDC	42VDC	4 watts

INPUT CONNECTOR

DC power jack is standard 2 conductors, center pin positive, 2.1mm ID, 5.5mm OD.

ENVIRONMENTAL

Specifications	Min	Max
Operating Temperature	0° C	65° C
Humidity	10-90% RH Non-Condensing	
Storage Temperature	-40° C	115° C

WEIGHT & DIMENSION


Weight	1 lbs.
Dimension	125.30 x 105.23 x 30.51 (mm)

FRONT PANEL LED

PROTEUS provides 3 LED's in the front & rear panel.


LED	Description
L1	<i>Flashes when a RS232 message is received</i>
L2	<i>Flashes when system is working properly</i>
L3	<i>Flashes when FPGA is working properly</i>
Ethernet LED	<i>Flashes when there is a write to the USB flash drive</i>

PCB DIMENSION

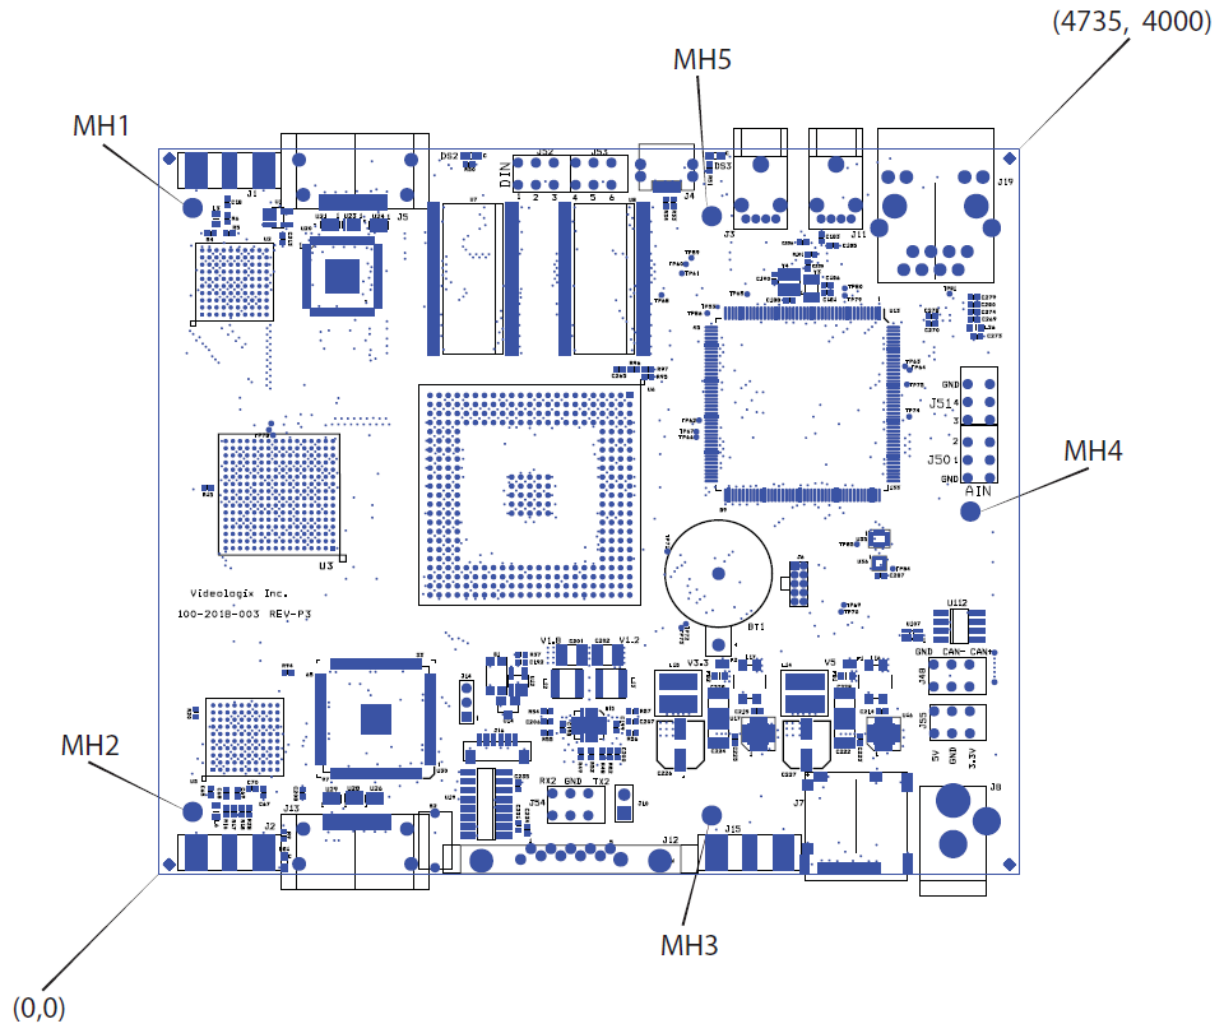


ALL DIMENSIONS IN MIL (0.001 inch)

	X	Y	Dia
MH1	185	3672	100
MH2	185	345	100
MH3	3045	325	100
MH4	4470	2000	100
MH5	3045	3627	100

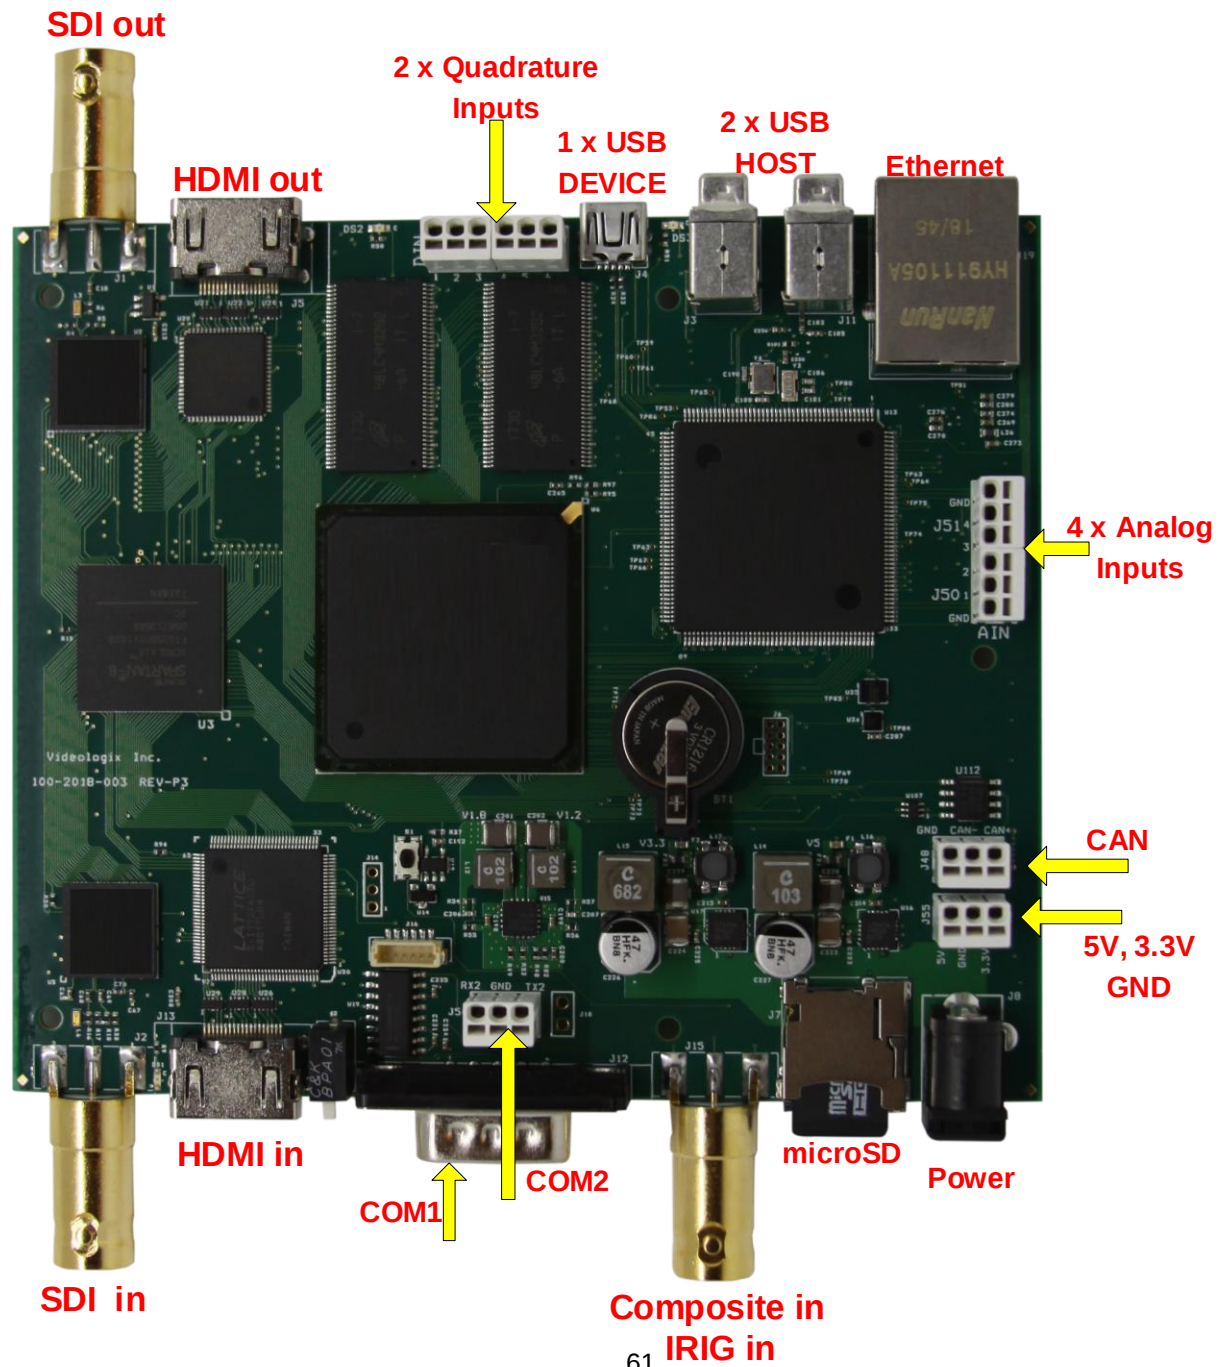

ENCLOSURE DIMENSION

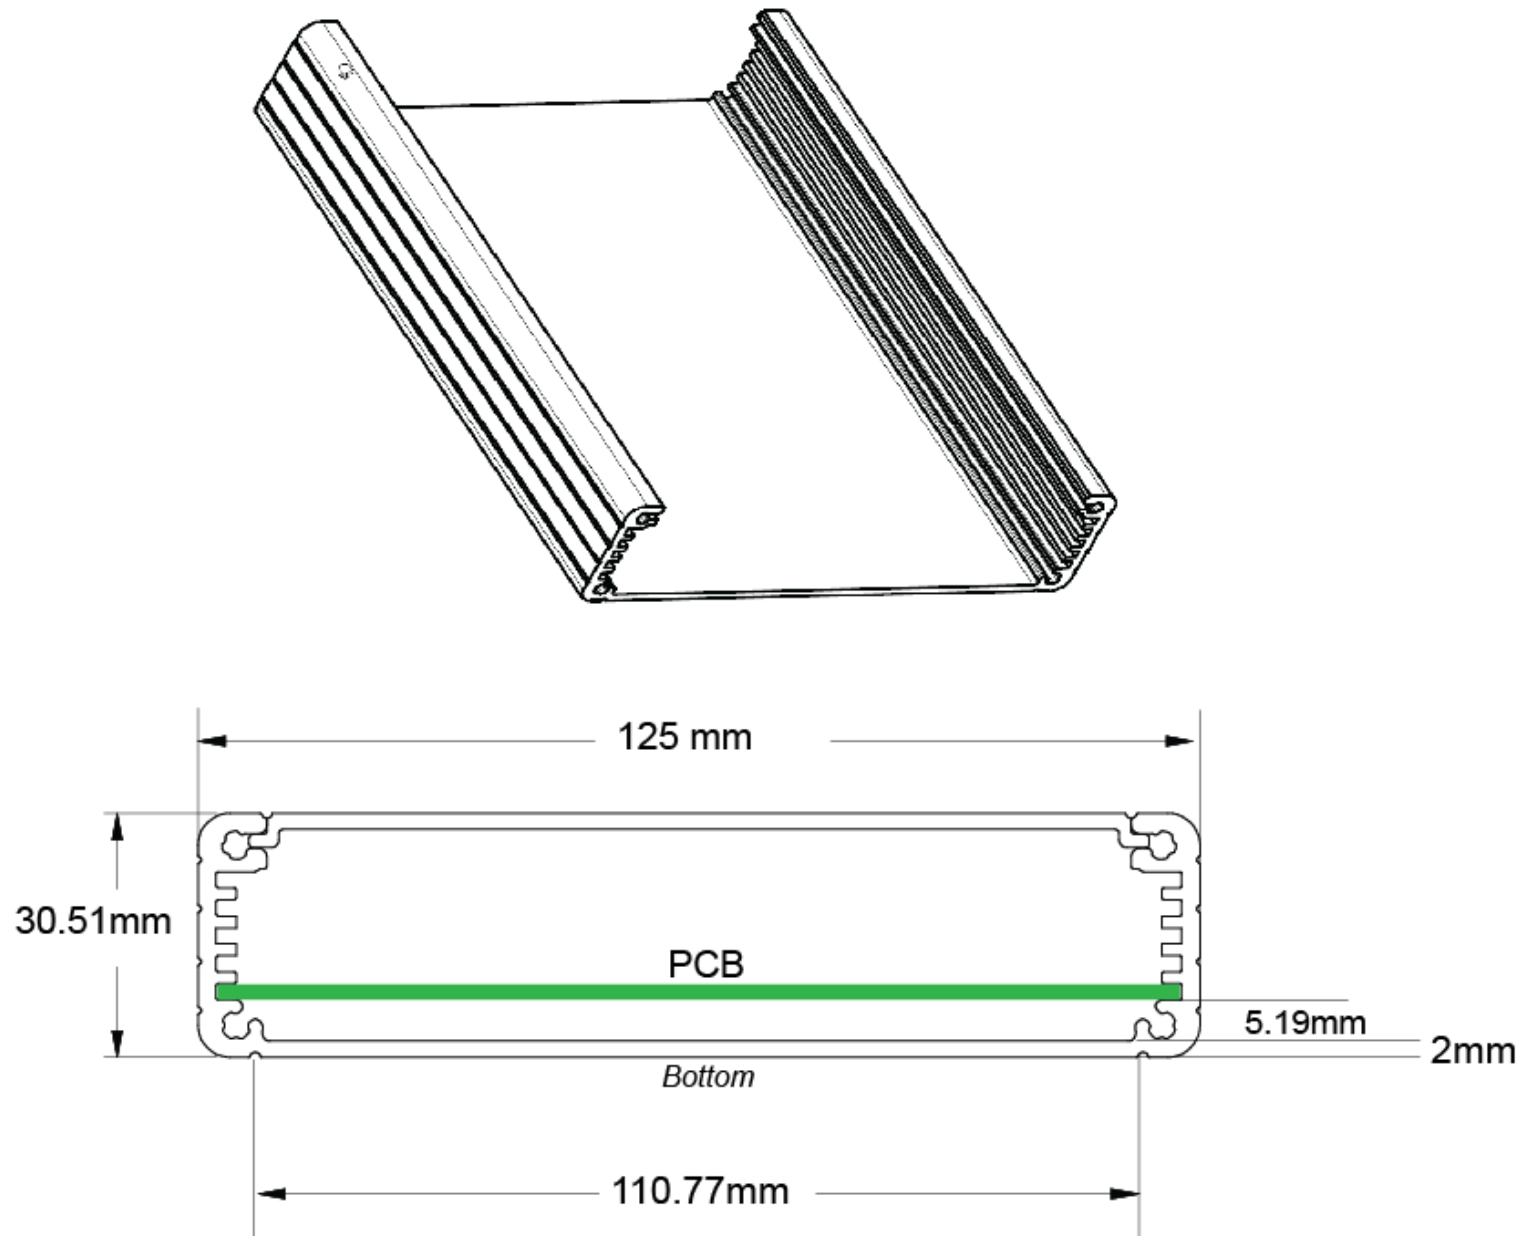

APPENDIX A – KEYBOARD COMMANDS

KEYBOARD COMMANDS

Keyboard command	Description
F8	Shortcut to “Edit: User Texts”
F9	Launch Main-Menu
F10	Save changes & exit Sub-Menu
ESC	Abort changes and exit Sub-Menu
Enter or Ctrl + Enter	Select an item from the picklist i.e. COM1, COM2...
Alt + G	Draw 60 x 60 pixel gridlines on video
Alt + H	Help

KEYBOARD SHORTCUTS


The following keystrokes are used to format the text superimposed on video.

Browse			Description
Forward		Reverse	
C	or	Ctrl + C	C olor: Change text foreground color
F	or	Ctrl + F	F ont: Change font type
W	or	Ctrl + W	W idth: Change width of the field
J	or	Ctrl + J	J ustify text: Left, center or right justification text within field
B	or	Ctrl + B	B ackground color: Change text background color
Ctrl + Arrow	or	Alt + Arrow	Move text location. Hold Ctrl to move the field 30 pixels and Alt to move the field 2 pixels.


APPENDIX B – UPDATING FIRMWARE


This section *assumes* you have already installed Renesas Flash Programmer. If not, please follow instruction in Appendix C.

 1. Toggle CFG switch in the rear panel to the lower position
2. Cycle power to PROTEUS
3. Connect mini USB cable from your PC to PROTEUS
4. Your PC should acknowledge PROTEUS with a beep. Alternatively, Device manager will add the following:



5. Start Renesas Flash Programmer and Follow instructions below:

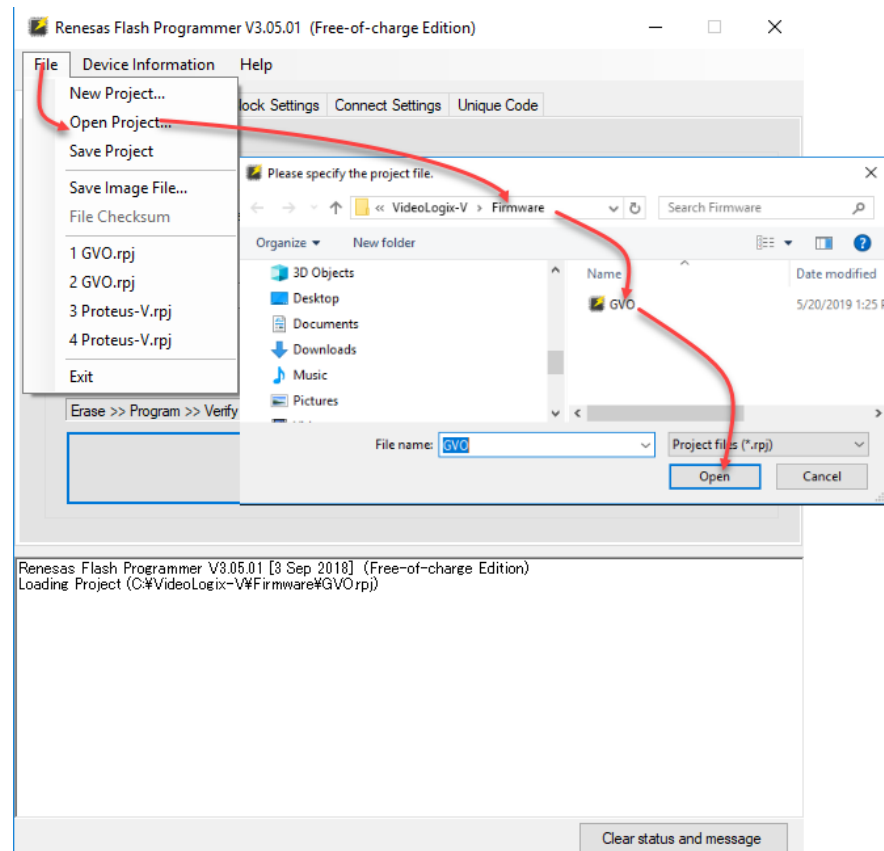


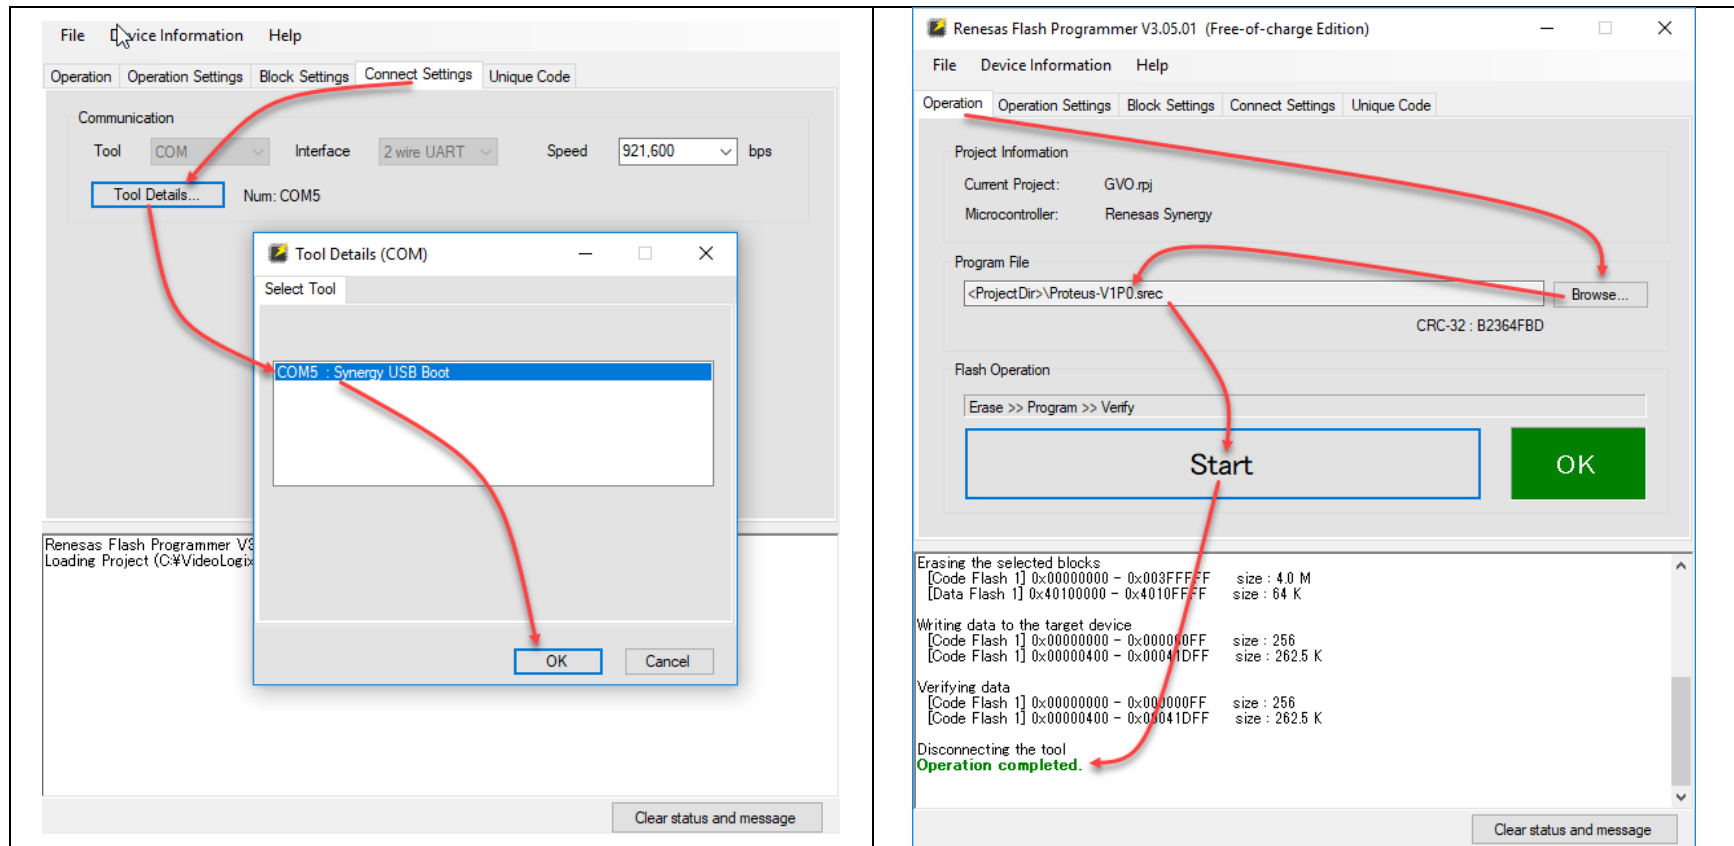

6. After 'Operation completed', Toggle CFG switch in the rear panel to the upper position
7. Cycle power to PROTEUS and you are done.

APPENDIX C – INSTALL RENESAS FLASH PROGRAMMER

Launch program 'Renesas_Flash_Programmer_Package_V30501' and follow instruction below. *This program is in utility folder on microSD card.*

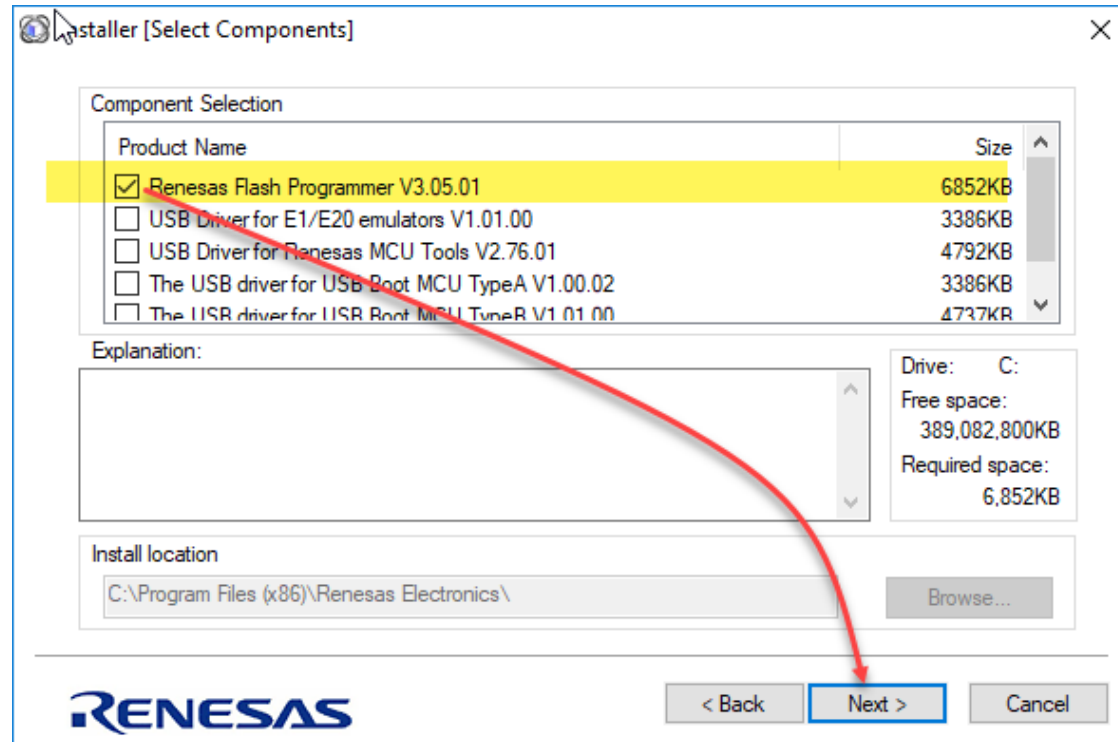

APPENDIX D – IMAGES


PROTEUS can display PNG and JPG images.

JPG

Image width & height divisible by 32. For example, 32 x 32 or 64 x 32 or 224 x 192, 320 x 64, etc.

PNG

PNG image must be converted to 32-bit BMP using Pixelformer utility. This utility will preserve pixel level alpha blending. [This program is in utility folder on microSD card](#). Use File-import to open PNG file and File-export to create the BMP file. When prompted, select A8:R8:G8:B8 as shown below.

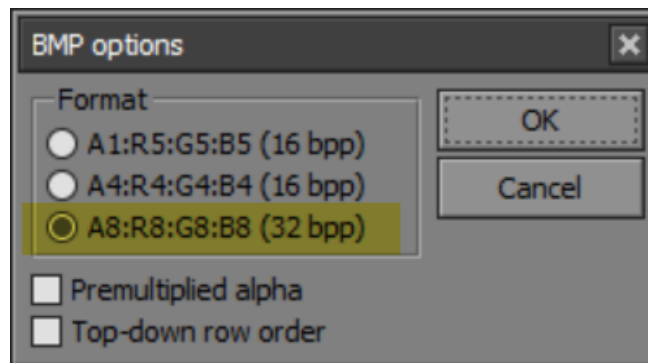

LOCATION

Store images in the folder [Images](#) on the microSD card.

APPENDIX E – CREATE CUSTOM FONTS


FONT0 through FONT7 can be customized by the user. To create your own fonts, follow steps below:

1. Start PROTEUSApp. *This app is in utility folder on microSD card.*
2. Go to **Font + Bitmask** tab.
3. Click **Select Font** button and select your desire font type & style.
4. Click **Create Font File** button.
5. Select your desire ISO Character set template from **C:\videologix-V\Fonts\ISO8859-9 Latin1.txt**
6. Type a file name for your font and press save.
7. Your new font will be stored in folder **C:\videologix-V\Fonts**
8. Edit file FontList.txt to add your new font file.
9. Copy FontList.txt and new font file to the folder 'Fonts' on microSD card.

APPENDIX F – TERMINAL BLOCKS

Care must be taken when inserting wire into terminal blocks. Do not insert thick screwdriver into terminal block as it will permanently damage the internal spring-loaded contacts. In general, any blade with 0.4mm x 2mm cross section is appropriate. Digikey P#1205202 is factory approved.

We have learned that X-ACTO Knife shown below works best.

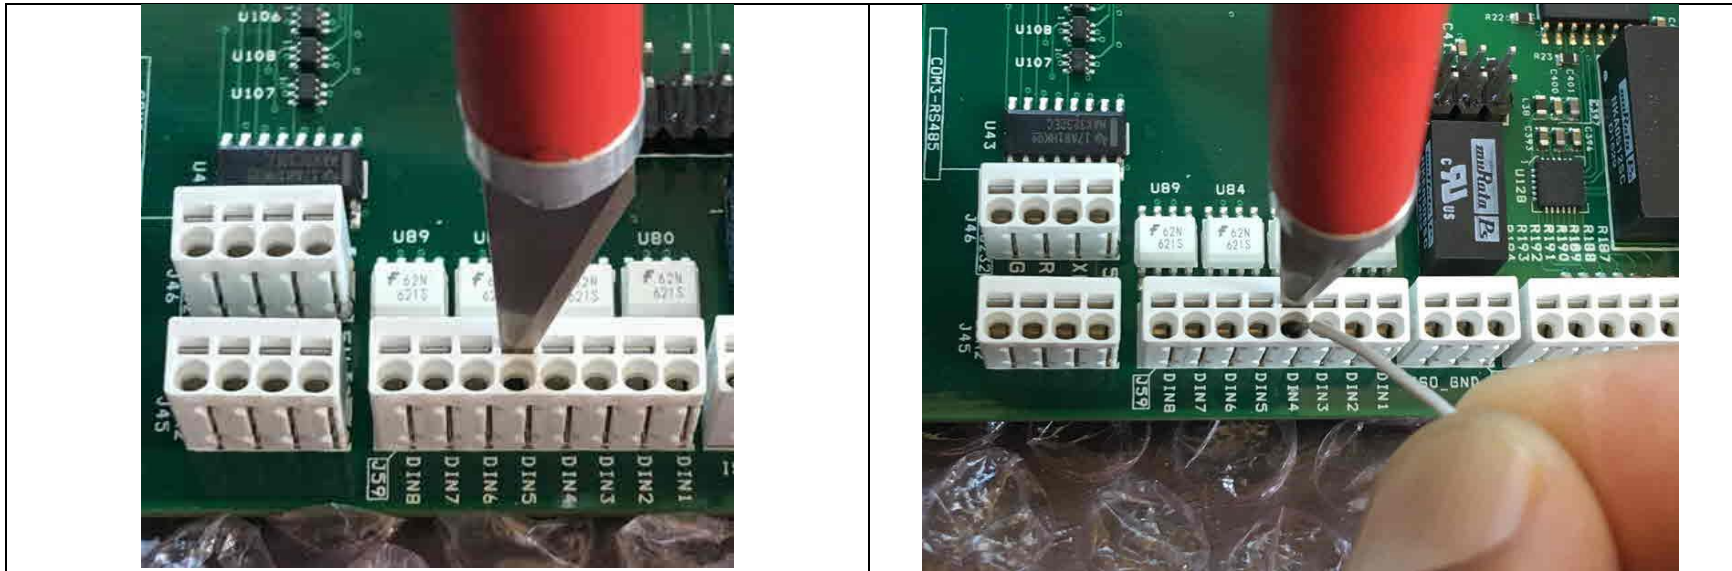

APPENDIX G – REGISTER DESIGNATION

Register ID	Designation
0	-
1	PM_STRING,
2	PM_BITMASK,
3	PM_VIDEO_MOD,
4	PM_UTC_OFFSET,
5	PM_RTC_TIME,
6	PM_RTC_DATE,
7	PM_IRIG_TIME,
8	PM_IRIG_DATE,
9	PM_NTP_TIME,
10	PM_NTP_DATE,
11	PM_ATC_TIME,
12	PM_DOWN_TIMER,
13	PM_UP_TIMER,
14	-
15	PM_AN_RAW1,
16	PM_AN_RAW2,
17	PM_AN_RAW3,
18	PM_AN_RAW4,
19	PM_AN_MAP1,
20	PM_AN_MAP2,
21	PM_AN_MAP3,
22	PM_AN_MAP4,
23	PM_QUAD_RAW1,
24	PM_QUAD_RAW2,
25	PM_QUAD_MAP1,
26	PM_QUAD_MAP2,
27	PM_COUNTER1,

Register ID	Designation
76	PM_TOKEND1,
77	PM_TOKEND2,
78	PM_TOKEND3,
79	PM_TOKEND4,
80	PM_TOKEND5,
81	PM_TOKEND6,
82	PM_TOKEND7,
83	PM_TOKEND8,
84	PM_TOKEND9,
85	PM_TOKEND10,
86	PM_TOKEND11,
87	PM_TOKEND12,
88	PM_GPS_ALTITUDE,
89	PM_GPS_COG,
90	PM_GPS_SPEED,
91	PM_GPS_TIME,
92	PM_GPS_DATE,
93	PM_GPS_LAT_D,
94	PM_GPS_LON_D,
95	PM_GPS_LAT_DM,
96	PM_GPS_LON_DM,
97	PM_GPS_LAT_DMS,
98	PM_GPS_LON_DMS,
99	PM_GPS_SEQUENCE,
100	PM_GPS_ID,
101	PM_GPS2_ALTITUDE,
102	PM_GPS2_COG,
103	PM_GPS2_SPEED,

28	PM_COUNTER2,
29	PM_COUNTER3,
30	PM_COUNTER4,
31	PM_GPI,
32	PM_SPAR1,
33	PM_SPAR2,
34	PM_SPAR3,
35	PM_eCompass,
36	PM_HEADERA,
37	PM_HEADERB,
38	PM_HEADERC,
39	PM_HEADERD,
40	PM_TOKENA1,
41	PM_TOKENA2,
42	PM_TOKENA3,
43	PM_TOKENA4,
44	PM_TOKENA5,
45	PM_TOKENA6,
46	PM_TOKENA7,
47	PM_TOKENA8,
48	PM_TOKENA9,
49	PM_TOKENA10,
50	PM_TOKENA11,
51	PM_TOKENA12,
52	PM_TOKENB1,
53	PM_TOKENB2,
54	PM_TOKENB3,
55	PM_TOKENB4,
56	PM_TOKENB5,
57	PM_TOKENB6,
58	PM_TOKENB7,
59	PM_TOKENB8,

104	PM_GPS2_TIME,
105	PM_GPS2_DATE,
106	PM_GPS2_LAT_D,
107	PM_GPS2_LON_D,
108	PM_GPS2_LAT_DM,
109	PM_GPS2_LON_DM,
110	PM_GPS2_LAT_DMS,
111	PM_GPS2_LON_DMS,
112	PM_GPS2_SEQUENCE,
113	PM_GPS2_ID,
114	PM_IMU_HEADING,
115	PM_IMU_PITCH,
116	PM_IMU_ROLL,
117	PM_IMU_HEIGHT,
118	PM_IMU_LAT,
119	PM_IMU_LON,
120	PM_IMU_TIME,
121	PM_IMU_DATE,
122	PM_IMU_LAT_DMS,
123	PM_IMU_LON_DMS,
124	PM_CINEFLEX_AZIMUTH,
125	PM_CINEFLEX_ELEVATION,
126	PM_CINEFLEX_ROLL,
127	PM_CINEFLEX_FOCUS,
128	PM_CINEFLEX_ZOOM,
129	PM_CINEFLEX_IRIS,
130	PM_CINEFLEX_TELE,
131	PM_CINEFLEX_PAN,
132	PM_ALTIMETER,
133	PM_VSPEED,
134	PM_MWV_ANGLE,
135	PM_MWV_REFERENCE,


60	PM_TOKENB9,
61	PM_TOKENB10,
62	PM_TOKENB11,
63	PM_TOKENB12,
64	PM_TOKENC1,
65	PM_TOKENC2,
66	PM_TOKENC3,
67	PM_TOKENC4,
68	PM_TOKENC5,
69	PM_TOKENC6,
70	PM_TOKENC7,
71	PM_TOKENC8,
72	PM_TOKENC9,
73	PM_TOKENC10,
74	PM_TOKENC11,
75	PM_TOKENC12,

136	PM_MWV_SPEED,
137	PM_MWV_UNIT,
138	PM_DBT_DEPTH,
139	PM_DPT_DEPTH,
140	PM_DPT_OFFSET,
141	PM_DPT_RANGE,
142	PM_MTW_TEMPRATURE,
143	
144	
145	
146	
147	
148	
149	
150	
151	

APPENDIX H – FORMAT MICROSD

Disable power before removing or inserting microSD card.

- The following instructions only apply to firmware version V2.24 or higher.
- microSD card capacity is limited to 2GB, 4GB, 8GB, 16GB, 32GB.
- Follow the diagram below to **format** your microSD card. Select **FAT32** as File System and Allocation unit size of **8192 bytes**.
- After microSD format, copy the folders shown below into your microSD card.
- Always **eject** the microSD card (as shown below) to complete the write operation.

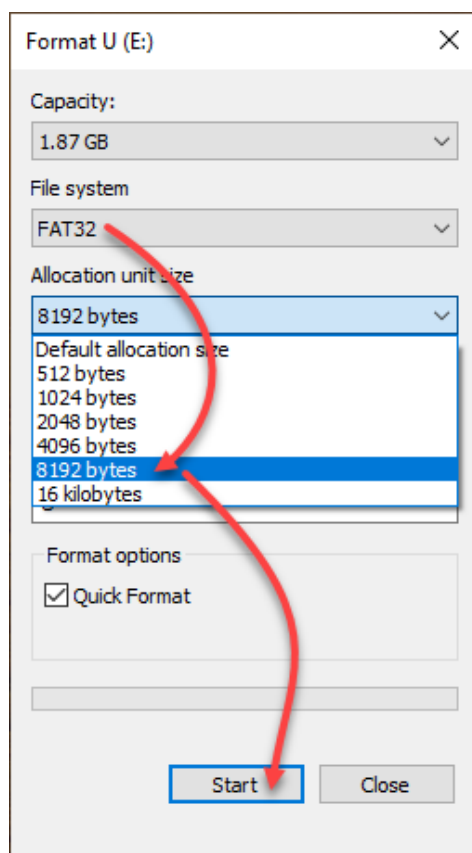

Name	Date modified
Configs	10/1/2019 12:13 PM
Documents	9/25/2019 11:16 AM
Firmware	9/25/2019 11:16 AM
Fonts	9/25/2019 11:16 AM
Images	9/25/2019 11:16 AM
KML	9/25/2019 11:16 AM
Script	9/25/2019 11:16 AM
lic	8/23/2019 3:54 PM
Read-me	7/28/2019 8:15 AM

