

PROTEUS-ESSENTIAL

User Manual

Version V2.09
April 20, 2020

TABLE OF CONTENTS

GENERAL OVERVIEW	4
TYPICAL INTERCONNECT DIAGRAM	5
GLOSSARY TERMS	6
COMMUNICATION	6
COM PORTS	6
COM PORTS: BAUD RATES.....	6
COM PORTS: DEVICE TYPES	6
COM PORTS: CONFIGURATION	7
COM1	7
COM2	7
COM3: USB DEVICE PORT	7
USB HOST PORTS.....	7
CSV FORMATS	8
ETHERNET PORT	9
VIDEO INPUT & OUTPUT.....	10
VIDEO FRAME RATES.....	11
VIDEO DELAY	11
IRIG INPUT.....	11
COMPOSITE INPUT (PIP)	12
LOAD CONFIGURATION.....	13
STORE CONFIGURATION.....	13
TEXT, LOGO AND DATA INSERTER	14
QUICK TUTORIAL	14
DISPLAY TIME, DATE	14
DISPLAY TEXT	15
DISPLAY IMAGES.....	17
DISPLAY GPS DATA	18
DISPLAY NMEA 0183 DATA.....	20
DISPLAY VALUES FROM ANY CSV SENTENCE	21
DISPLAY VALUES FROM ANY UNSUPPORTED NMEA SENTENCE.....	21
DISPLAY NMEA 2000 DATA.....	25
DISPLAY TILT SENSOR AND COMPASS	26
REAL TIME ANNOTATION.....	27
APPEND MILLISECOND COUNTER TO IRIG, GPS, RTC TIME.....	28
SNTP	29

APPS	30
QUADRATURE OR SIMPLE COUNTERS	30
ANALOG DATA	34
XY MEASUREMENT	38
RETICLE	40
PLANE SITUATION AWARENESS	42
ROV SITUATION AWARENESS	45
SLIDERS	48
COMPASS	50
COUNT UP TIMER.....	51
PROTEUS COMMANDS	52
TRANSMIT A COMMAND SCRIPT	52
PROTEUS REGISTERS	53
SPECIFICATIONS	54
MAXIMUM INPUT VOLTAGE	54
INPUT CONNECTOR	54
ENVIRONMENTAL	54
WEIGHT & DIMENSION	54
FRONT PANEL LED	54
PCB SPECIFICATION	55
ENCLOSURE DIMENSION	57
APPENDIX A – KEYBOARD COMMANDS	58
KEYBOARD COMMANDS	58
KEYBOARD SHORTCUTS	58
APPENDIX B – UPDATING FIRMWARE.....	59
APPENDIX C – INSTALL RENESAS FLASH PROGRAMMER	61
APPENDIX D – IMAGES.....	62
JPG	62
PNG	62
LOCATION	62
APPENDIX E – CREATE CUSTOM FONTS.....	63
APPENDIX F – TERMINAL BLOCKS.....	64
APPENDIX G – REGISTER DESIGNATION.....	65
APPENDIX H – FORMAT MICROSD.....	70

GENERAL OVERVIEW

Video Overlay is a method by which computer-generated images are superimposed on video. Properly transformed images appear as if they are an integral part of the scene without impeding the video of the actual environment.

The primary purpose of PROTEUS is to provide the ability to insert text, logos and GPS data.

Numerous apps have been developed to enhance this product. Customers have found them to be useful like the apps available for iPhone. The existence of these apps should not discourage any customer from considering this product for basic text, logo and GPS data insertion.


PROTEUS supports both HD-SDI, HDMI input & output. It does not need to be connected to a computer for normal operation.

PROTEUS is available in 3 editions and the table below provides a comparison. **This User Manual is for PROTEUS ESSENTIAL.**

FEATURES	PROTEUS		
	LITE	ESSENTIAL	PLUS
Insert Texts, Images, Time/Date, GPS data, POS Laser Scanner Code	✓	✓	✓
Insert values from CSV sentences via RS232 & Ethernet		✓	✓
Insert values from NMEA0183 sensors via RS232		✓	✓
Insert values from NMEA2000 sensors via CAN		✓	✓
Numerous APPs + Widgets + Device drivers		✓	✓
2 x Quadrature inputs		✓	✓
4 x Analog inputs		✓	✓
Insert IRIG-B timecode		✓	✓
Insert Network SNTP timecode		✓	✓
Tilt sensor and eCompass		✓	✓
30+ Drawing commands via RS232 & Ethernet		✓	✓
Superimpose composite (NTSC/PAL) video input over HD video input (PIP)		✓	✓
Geotagging + KML File			✓

TYPICAL INTERCONNECT DIAGRAM

Diagram below illustrates a few the possible applications.

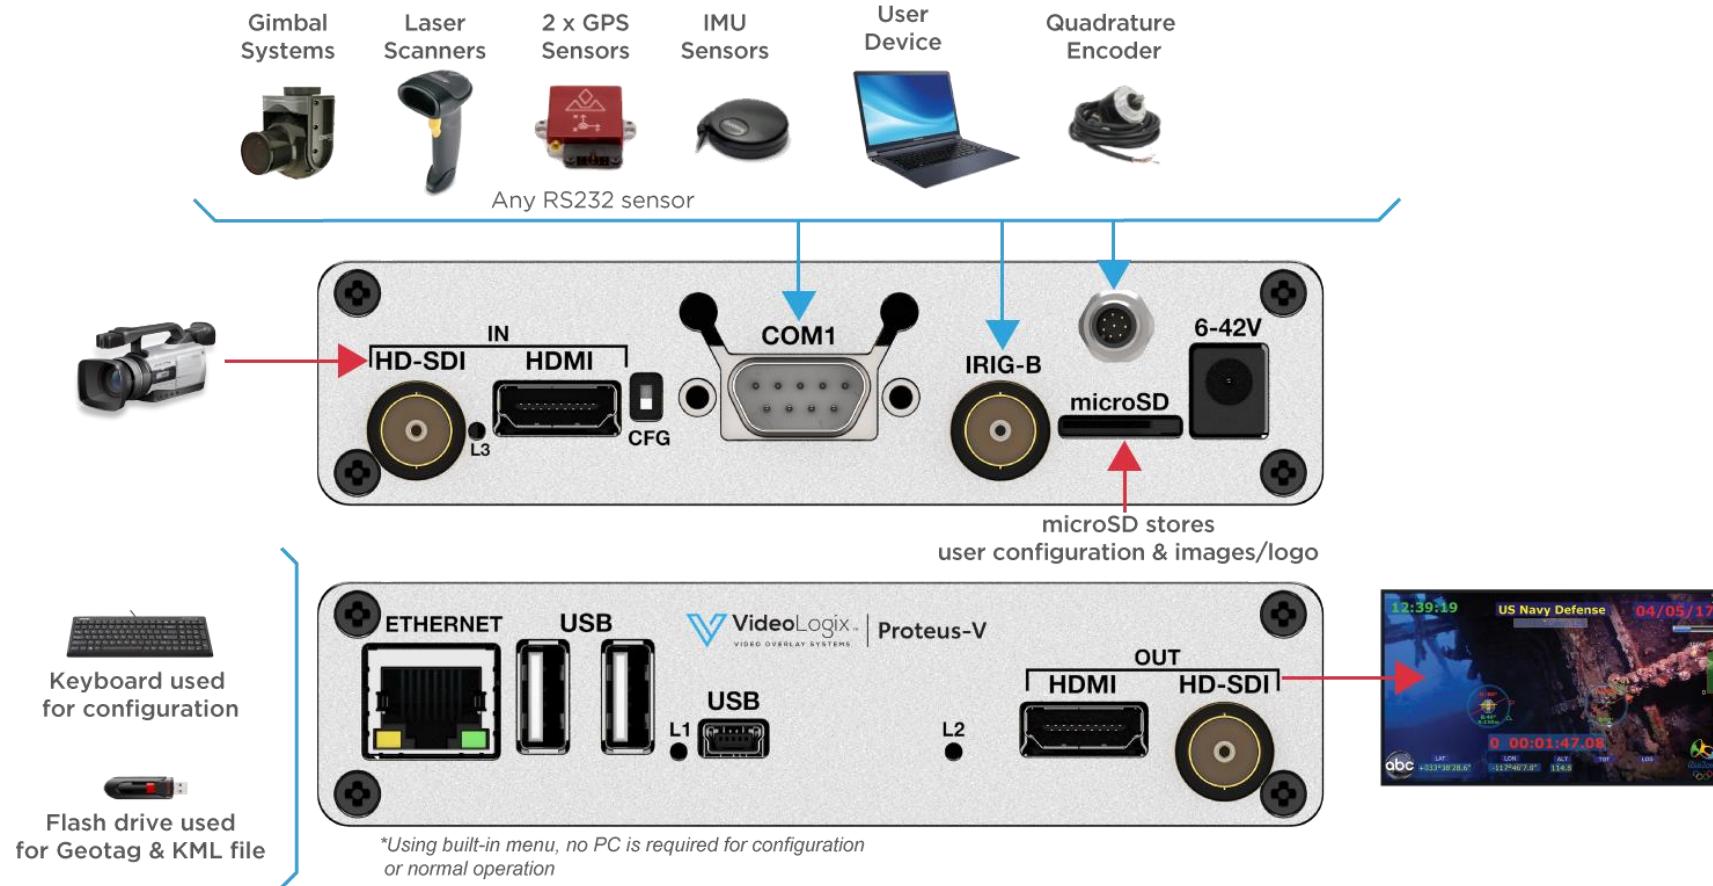

GLOSSARY TERMS

Term	Definition
SCS	Software Communication Specification
CSV	Comma Separated Values
TB	Terminal Block
UM	User Manual

COMMUNICATION

COM PORTS

PROTEUS provides 3 x serial ports for communication with the external devices:

COM PORT	Location	Pin assignments
COM1	RS232: Rear Panel DB9	2=RX, 3=TX, 5=GND
COM2	RS232: Internal J54 & J16	J54: 1=RX, 2=GND, 3=TX
COM3	Mini-USB: Front panel	Standard USB Device

COM PORTS: BAUD RATES

- COM1 & COM2 are fixed for N, 8, 1. However, baud rates can be set to 4800, 9600, 19200, 38400, 57600, 115200, 230400, 460800.
- COM3 is USB Device CDC-ACM class. It allows a USB host (PC) to communicate with the device (Proteus) as a serial device. There is no baud rate associated with this interface and transfer speed of 1.7 Mbit/s to 4.1Mbit/s can be achieved.

COM PORTS: DEVICE TYPES

COM1-2 ports can be interfaced to various sensors. Table below shows a few examples and their corresponding Device Type setting.

Attach Sensor/Device	Corresponding Device Type setting
Any device transmitting CSV sentences i.e. GPS, IMU, laptop, etc.	CSV1, CSV2, CSV3, CSV4 (See CSV formats for more detail)
All NMEA-0183 compatible devices i.e. GPS Modem, Sounder, etc.	CSV1, CSV2, CSV3, CSV4
Serial Terminal program such as PuTTY, Tera Terminal, etc.	CSV1
Vector NAV IMU	VectorNav
General Dynamic CINEFLEX	CINEFLEX

COM PORTS: CONFIGURATION

Press F9 to display the Main Menu. Follow *Figure 1-Figure 2* to configure COM ports for desire baud rate & device.

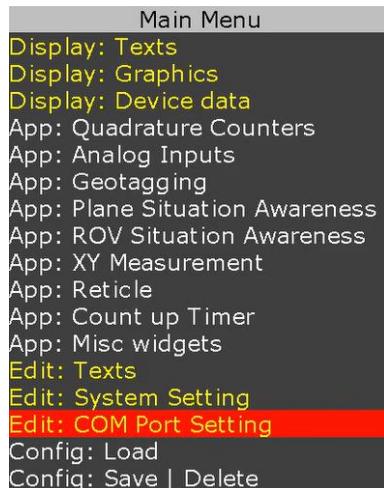


Figure 1

Edit COM Ports	
COM1 (DB9) Device	CSV1 (\$Header,Dn...*CS)
COM1 (DB9) Baud	115200
COM2 (INT) Device	CSV1 (\$Header,Dn...*CS)
COM2 (INT) Baud	4800
Sentence A Header	\$SentenceA
Sentence B Header	\$SentenceB
Sentence C Header	\$SentenceC
Sentence D Header	\$SentenceD
COM2 mode	RS232
\$PTSAG ID	0
Proteus IP Address type	STATIC
SNTP	DISABLE
SNTP Server IP Address	192.168.1.120
Proteus IP Address	192.168.1.131

Figure 2

COM1

COM1 (DB9) is configured as DTE (PC) i.e. RX=Pin2, TX=Pin3. Thus, sensors such as GPS can be directly connected to the DB9 without the need for NULL modem cable. However, when using COM1, a NULL modem cable is required to interface PROTEUS to a PC.

This port can also be used to send remote commands defined in SCS (Software Communication Specification) or connect any RS232 sensor.

COM2

COM2 is located internal. Signals TX & RX are provided at J16 connector (Compatible with Garmin GPS 18x LVC) as well as Terminal Block J54.

This port can also be used to send remote commands defined in SCS (Software Communication Specification) or connect any RS232 sensor.

COM3: USB DEVICE PORT

When connected to a PC, it will enumerate as a COM port. This port can also be used to send remote commands defined in SCS (Software Communication Specification). This port is also used to upgrade the internal firmware.

USB HOST PORTS

PROTEUS has 2 USB host ports. Typical devices connected to these ports are USB keyboard and USB Flash drive for storing KML data.

CSV FORMATS

A CSV (Comma Separated Values) is an ASCII sentence composed of a unique header, followed by up to 12 comma separated values and a checksum.

\$Header,VAL1,VAL2,VAL3,VAL4,VAL5,VAL6,VAL7,VAL8,VAL9,VAL10,VAL11,VAL12*CS

\$	Signifies start of the sentence.
Header	Sentence header. Follow <i>Figure 1-2</i> to define your unique sentence header.
VALn	Each sentence contains multiple values (VALn) delimited by commas.
*	The asterisk serves as checksum delimiter.
CS	The checksum field contains two ASCII characters which indicate the hexadecimal value of the checksum.

PROTEUS supports 4 different CSV sentences:

Type	Sentence includes	Sentence Structure	Example
CSV1	\$Header, Values..., Checksum	\$HEADER,VAL1,VAL2,VAL3,...VALn*CS	\$STEVE,45,315,200,100*XX
CSV2	\$Header, Values...	\$HEADER,VAL2,VAL3,...	\$BRIAN,45,315,200,100
CSV3	\$Values...	\$VAL1,VAL2,VAL3,...	\$45,315,200,100
CSV4	Values ...	VAL1,VAL2,VAL3,..	45,315,200,100

Upon reception of a **CSV** sentence and confirmation of the sentence header (only CSV1), PROTEUS parses the sentence. Parsed values (VAL1 ... VAL12) are sequentially stored in [Registers](#) # 40 through 87. Any widgets linked to these registers will automatically get updated. CSV sentence vary in length, but each VALn is limited to 40 characters or less.

For more detail on how to use CSV sentences, see [Display values from any csv sentence](#)

The checksum field is the last field in a sentence and follows the checksum delimiter character “*”. The checksum is the 8-bit exclusive OR of all characters in the sentence, including “,” delimiters, between but not including the “\$” and the “*” delimiters. The hexadecimal values of the most significant and least significant 4 bits of the result is converted to two ASCII characters (0-9, A-F (upper case)) for transmission. The most significant character is transmitted first. Example: \$GPGLL,5057.970,N,00146.110,E,142451,A*27<CR><LF>

In C checksum computation would be written as:

```
char sentence [] = "GPGLL,5057.970,N,00146.110,E,142451,A";
int i;
char checksum = 0;
for ( i = 0; i < strlen(sentence); i++)
    checksum ^= sentence[i];
```

Although not recommended, for CSV1 type sentences, checksum computation can be bypassed by replacing **CS** with **XX**.

ETHERNET PORT

This port can be used to send remote commands defined in SCS (Software Communication Specification).

- 10M/100M auto sensing network interface
- Networking: Static or DHCP IPv4 addressing
- Subnet Mask: 255.255.255.0
- Default Gateway: 0.0.0.0
- UDP protocol. Port 9999

Follow [Figure 1-Figure 2](#) to configure network interface. Following any change to the DHCP setting, power must be recycled for the change to take effect. *PROTEUS's IP address can be viewed by pressing Alt-h.*

F9	Main Menu
Alt+H	Help
Alt+G	Display Grid
F1	Start External Video Recorder
F2	Stop External Video Recorder
F3	KML: Drop Placemaker #1
F4	KML: Drop Placemaker #2
F8	Edit User Texts
Esc	Clear screen
Serial	1900000D17174B018E53A6CDAE75B20C
Edition	Pro
Ver	V2.10-E
Video	HDMI=VIC0, SDI=0A, Output=VIC5
IP	DHCP: 192.168.1.131

VIDEO INPUT & OUTPUT



PROTEUS provides the following video input & output:

- SDI (HD & SD)
- HDMI (HD & SD)

PROTEUS does *not support* HDMI video with *HDCP*. It can only process one video input at a given time. If more than one input is connected at the same time, PROTEUS selects a video input based on the following priorities:

1. HD-SDI
2. HDMI

PROTEUS does not scale video and the output resolution follows the input. PROTEUS provides simultaneous video outputs.

VIDEO FRAME RATES

PROTEUS is compatible with the following video formats:

1080i @ 50 / 60 Hz
1080p @ 23.98 / 24 / 25 / 29.97 / 30 Hz
1080PsF @ 23.98 / 24 Hz
720p @ 50 / 59.94 / 60 Hz
NTSC 480i @ 60 Hz
PAL 576i @ 50 Hz

VIDEO DELAY

All OSD functions are superimposed into the video "on-the-fly." As a result, there is no degradation in video quality and the delay from the video input to the video output is < 290 nsec.

IRIG INPUT

This interface can be used to input an external unmodulated IRIG-B signal. PROTEUS can decode IRIG-B time & date code. This interface can also be used to input a composite video NTSC (M, J, 4.43) or PAL (B,D,G,H,I,M,N,CN) for purpose of superimposing it on a HD video as PIP.


COMPOSITE INPUT (PIP)

IRIG input can also be used to input a composite video NTSC (M, J, 4.43) or PAL (B,D,G,H,I,M,N,CN) for purpose of superimposing it on a HD video. To enable PIP follow the pictures below. Composite video (as shown below as colorbar) can be superimposed anywhere on the 1920 x 1080.



System Settings	
Time (hh:mm:ss)	18:00:49
Date (mm/dd/yy)	10/01/19
GMT offset (-HH:MM)	-00:00
Date format	MM/DD/YY
Autosync RTC to GPS	On
System of unit	Meter
Show RTC HH:MM:SS.mmm	Off
Show IRIG HH:MM:SS.mmm	Off
Show GPS HH:MM:SS.mmm	Off
Alpha blend	25
Colorbar options	SMPTE CBAR1
Composite PIP	On
Composite Video Standard	NTSC_M
Composite PIP (X,Y) position	1400,100

Enter or Type= Edit Esc=Abort F10=Save

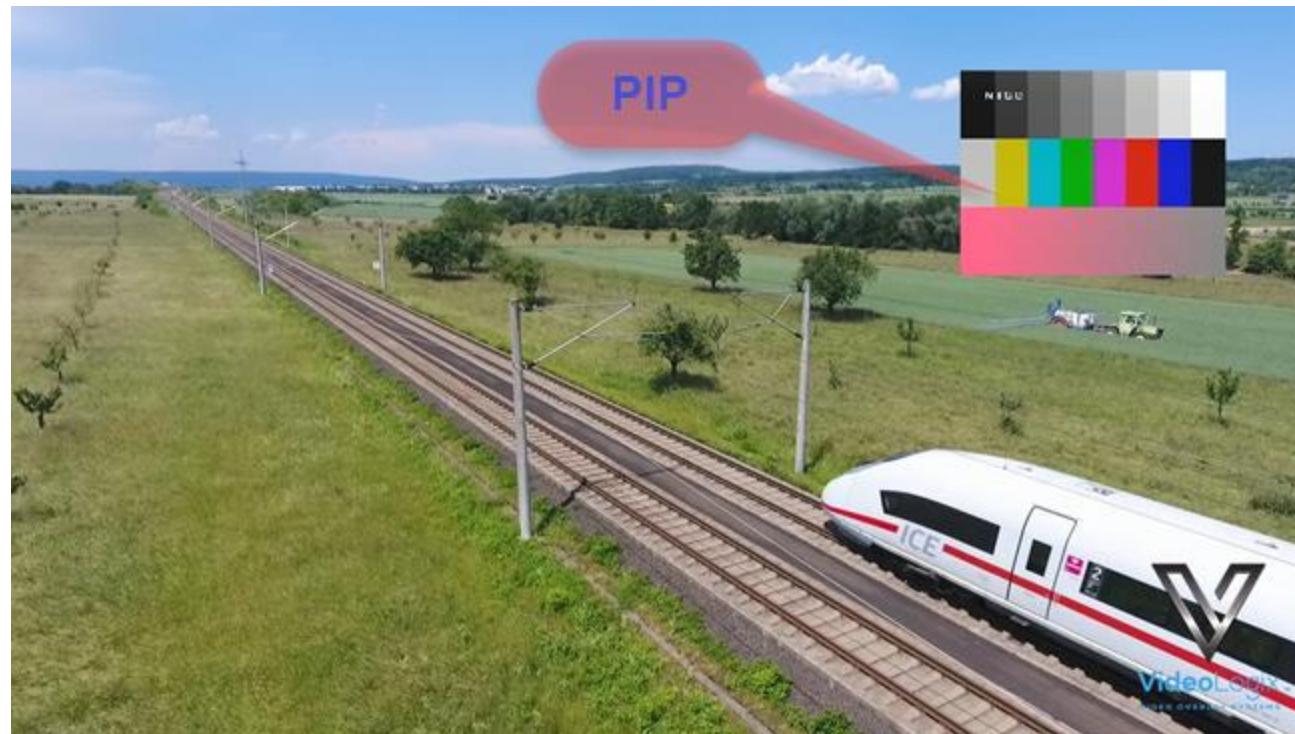

LOAD CONFIGURATION

PROTEUS can maintain 16 different configurations. Follow figures below to load a configuration.



STORE CONFIGURATION

PROTEUS stores 16 different configurations. Follow figures below to save your configuration.

To save, type in the new file name in an empty field or highlight a file name (overwrite) and press **F10** to save.

To delete, highlight the file name and press **Ctrl + Alt + F10**.



TEXT, LOGO AND DATA INSERTER

QUICK TUTORIAL

DISPLAY TIME, DATE

1. Press F9 to display main menu
2. Follow *Figure 3 - Figure 5* to insert the desired parameter
3. On *Figure 5*, use $\uparrow\downarrow$ arrow keys to select "RTC Time"
4. Press \downarrow to select "On"
5. RTC time will appear on the screen and *flashing*.
6. Use shortcuts keys to change the field attributes as described below:
"Font select, field **Width**, text **Justification**, text **Color**, text **Background** and **Ctrl** or **Alt + $\uparrow\downarrow$** text position"
7. Repeat steps 3 through 6 to display "RTC Date"
8. Press F10 to save and exit.

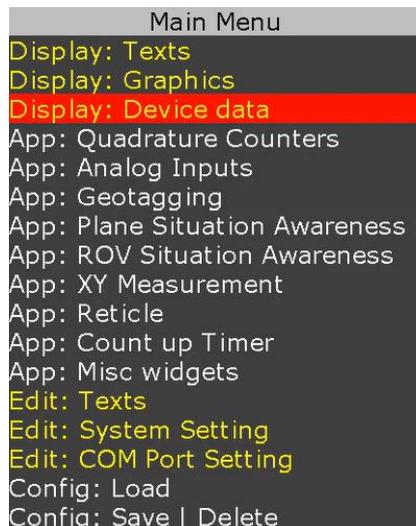


Figure 3

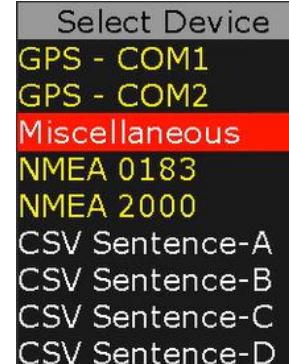


Figure 4

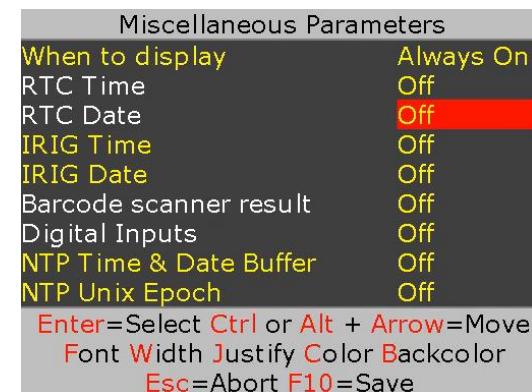


Figure 5

DISPLAY TEXT

Press F9 to display Main Menu. Follow *Figure 6 - Figure 7* to type-in or edit pre-existing texts.

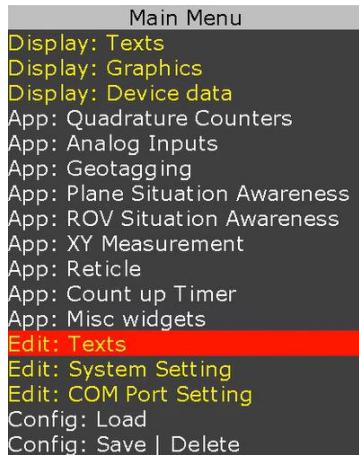


Figure 6

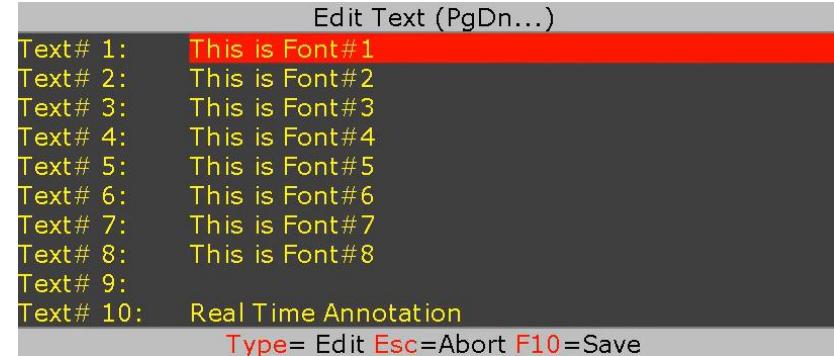


Figure 7

Follow *Figure 8 - Figure 9* to display text on video.

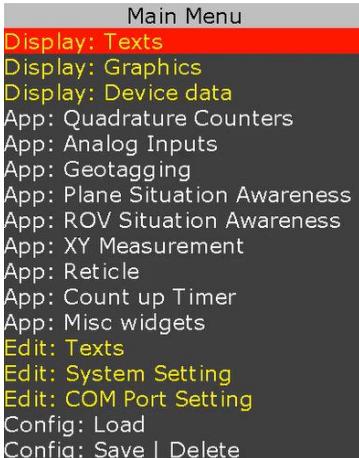


Figure 8



Figure 9

While in *Figure 9*, use \uparrow arrow keys to select desire text. Press \downarrow to select "On". Use shortcuts keys to format the text as described below:

Font select, field **Width**, text **Justification**, text **Color**, text **Background** and **Ctrl or Alt + $\uparrow\downarrow$** text position

Insert text

This is font#1

This is font#2

This is font#3

This is font#4

This is font#5

This is font#6

This is font#7

This is font#8



DISPLAY IMAGES

Please review [Appendix D – images](#) on how to prepare images for use with PROTEUS.

Press F9 to display Main Menu. Follow [Figure 10](#)- [Figure 11](#) to display images.

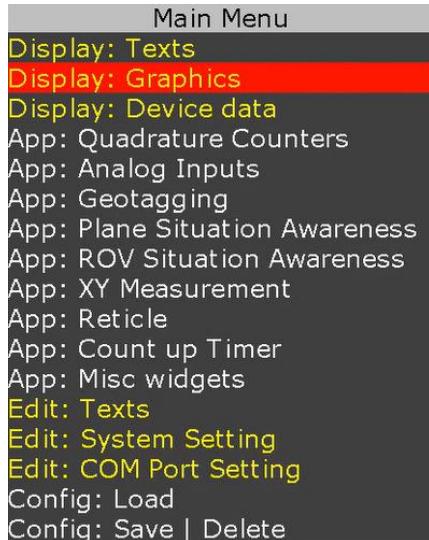


Figure 10




Figure 11

While in [Figure 11](#), use \uparrow to select a desire image. Press \downarrow to select "On". Use Ctrl or $\text{Alt} + \leftrightarrow$ to position the image on screen.

DISPLAY GPS DATA

- Two independent GPS modems can be connected to COM1 & COM2 at the same time.
- COM ports are fixed for N, 8, 1. Follow [Figure 1 - Figure 2](#) to configure for desire baud rate
- \$GPRMC, \$GPGGA, \$PTSGA, \$GPWPL, \$GPGSA, \$GPGSV, \$GPGGL....

A *sample* GPS file is provided with your PROTEUS. To load it, press F9, go to “[Config: Load](#)” and select “GPS-COM1” or “GPS-COM2”.

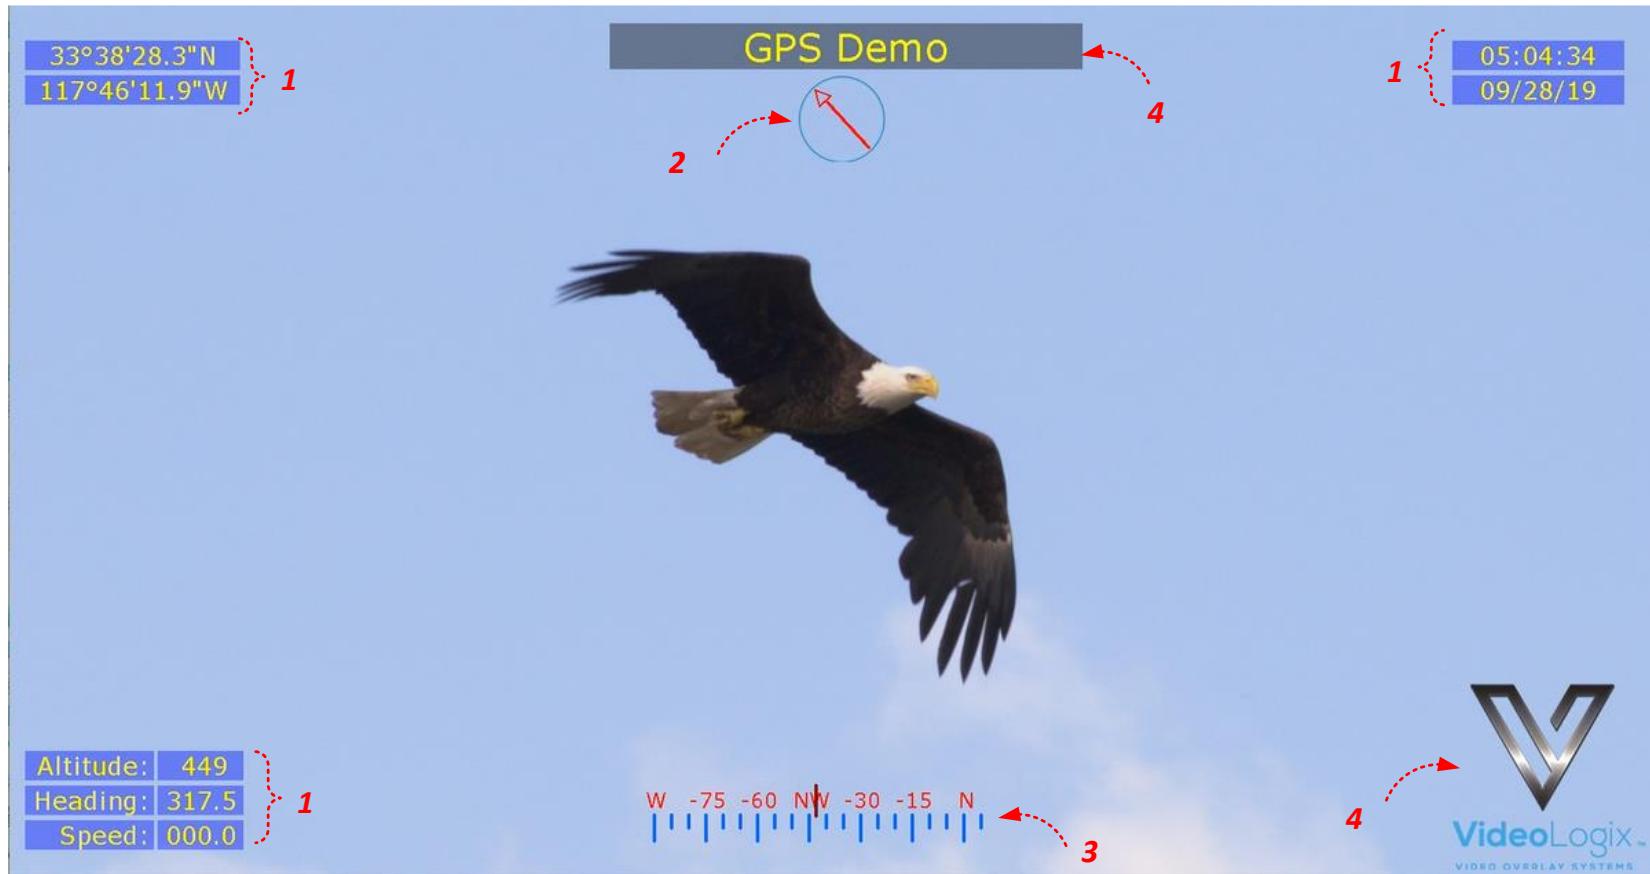

1	GPS data	Obtained directly from GPS modem
2	Circular Compass	Controlled via GPS heading
3	Rolling Compass	Controlled via GPS heading
4	Misc. Parameters	Title, Logo. Fully configurable by the user

To customize the sample file to meet your needs, follow [Figure 12 - Figure 14](#).

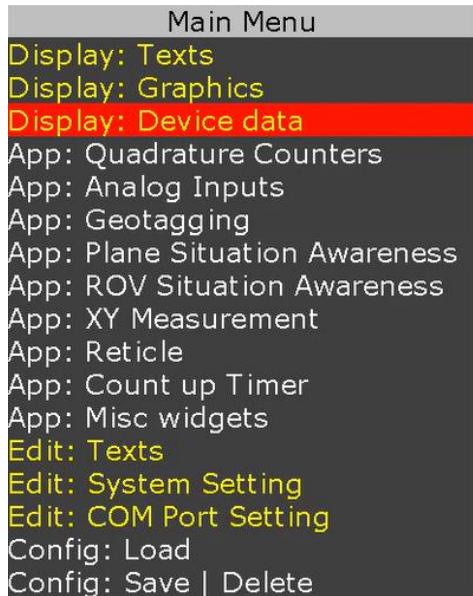


Figure 12

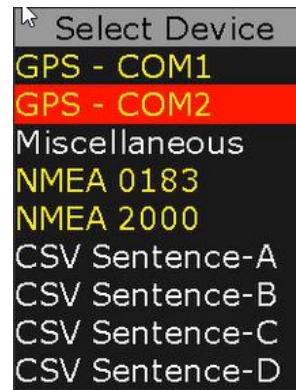


Figure 13

COM2 GPS Parameters	
When to display	Always On
Latitude (ddd.dddddd°)	Off
Latitude (ddd°mm.mmmm')	Off
Latitude (dd°mm'ss")	On
Longitude(dd.dddddd°)	Off
Longitude(dd°mm.mmmm')	Off
Longitude(dd°mm'ss")	On
Altitude	On
Time	On
Date	On
Heading (0..360°)	On
Speed	On
Sequence	Off
ID	Off

Enter=Select **Ctrl** or **Alt** + **Arrow**=Move
Font **Width** **Justify** **Color** **Backcolor**
Esc=Abort **F10**=Save

Figure 14

While in [Figure 14](#), use **↑** to select desire GPS parameter. Press **↓** to select “On”. Use [shortcuts](#) keys to format the text as described below:

Font select, field **Width**, text **Justification**, text **Color**, text **Background** and **Ctrl** or **Alt** + **↑↓↔** text position

DISPLAY NMEA 0183 DATA

- PROTEUS intrinsically supports many NMEA sentences such as \$GPRMC, \$GPGGA, \$PTSGA, \$GPWPL, \$GPGSA, \$GPGSV, \$GPGGL, \$SDDPT, \$SDDBT, \$WIMTW, \$WIMWV, \$VNINS, \$VNIMU, \$VNYPR, \$PTNTHPR, \$HCHDG, \$HCHDT, \$HCC, \$DBS, \$PCIT, \$PCIPR, etc.
- For above messages, just configure [COM port](#) and PROTEUS is ready to receive messages & manage your visual data. Follow [Figure 15-Figure 17](#) and [Figure 12 - Figure 14](#) to display NMEA parameters.
- You may come across a NMEA sentence that is not intrinsically supported by PROTEUS for example \$PTCF. To configure PROTEUS to receive this sentence, follow [Figure 1 - Figure 2](#) and replace \$SentenceA with \$PTCF. Upon reception of \$PTCF sentence, PROTEUS parses the sentence and parsed values (VAL1..VAL6) are sequentially stored in Registers # 40-45 as shown below:

\$PTCF,HHH.H,T,+RRR.R,+PPP.P,+rrr.rr,+ppp.pp*CS

\$PTCF	VAL1	VAL2	VAL3	VAL4	VAL5	VAL6
Register	40	41	42	43	44	45
Values	HHH.H	T	+RRR.R	+PPP.PP	+rrr.rr	+ppp.pp

For more detail on how to display each value, please see [Display values from any csv sentence](#)

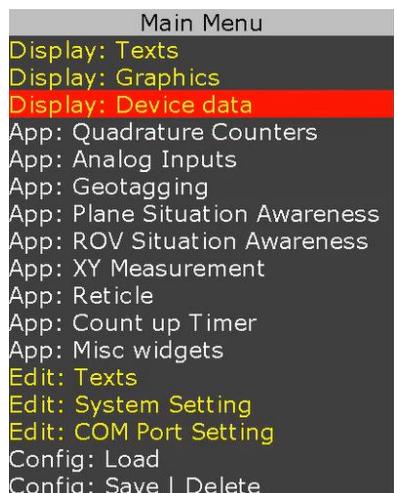


Figure 15

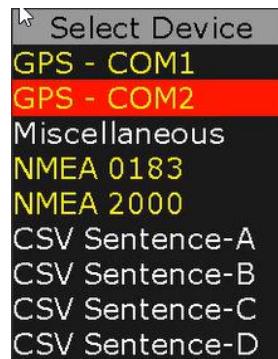


Figure 16

NMEA Parameters	
When to display	Always On
DBT Depth	Off
DPT Depth	Off
DPT Offset	Off
DPT Range	Off
MTW Temperature	Off
MWV Angle	Off
MWV Reference	Off
MWV Speed	Off
MWV Unit	Off
Heading	Off
Pitch	Off
Roll	Off
Altitude	Off
Enter=Select Ctrl or Alt + Arrow=Move Font Width Justify Color Backcolor Esc=Abort F10=Save	

Figure 17

DISPLAY VALUES FROM ANY CSV SENTENCE

DISPLAY VALUES FROM ANY UNSUPPORTED NMEA SENTENCE

A CSV (Comma Separated Values) is an ASCII sentence composed of a unique header, followed by up to 12 comma separated values and a checksum.

\$Header,VAL1,VAL2,VAL3,VAL4,VAL5,VAL6,VAL7,VAL8,VAL9,VAL10,VAL11,VAL12*XX

- All NMEA-0183 messages are CSV
- PROTEUS intrinsically supports many of the NMEA-0183 messages i.e. **\$GPRMC, \$GPGGA, \$PTSAG, \$GPWPL, \$GPGSA, \$GPGSV, \$GPGGL, \$SDDPT, \$SDBT, \$WIMTW, \$WIMWV, \$VNINS, \$VNIMU, \$VNYPR, \$PTNTHPR, \$HCHDG, \$HCHDT, \$HCC, \$DBS, \$PCIT, \$PCIPR, etc.**
- For these messages, just configure [COM port](#) and PROTEUS is ready to receive messages & manage your visual data
- There may be instances where you want to send your own CSV message or support a new NMEA message
- You can configure PROTEUS to receive up to 4 customize CSV messages (A, B, C, D)
- Upon reception of a CSV sentence, PROTEUS verifies checksum & parses the message
- For each message, parsed values (VAL1.. VAL12) are stored in Registers # 40-87 as shown below:

\$Header-A	VAL1	VAL2	VAL3	VAL4	VAL5	VAL6	VAL7	VAL8	VAL9	VAL10	VAL11	VAL12
Register	40	41	42	43	44	45	46	47	48	49	50	51

\$Header-B	VAL1	VAL2	VAL3	VAL4	VAL5	VAL6	VAL7	VAL8	VAL9	VAL10	VAL11	VAL12
Register	52	53	54	55	56	57	58	59	60	61	62	63

\$Header-C	VAL1	VAL2	VAL3	VAL4	VAL5	VAL6	VAL7	VAL8	VAL9	VAL10	VAL11	VAL12
Register	64	65	66	67	68	69	70	71	72	73	74	75

\$Header-D	VAL1	VAL2	VAL3	VAL4	VAL5	VAL6	VAL7	VAL8	VAL9	VAL10	VAL11	VAL12
Register	76	77	78	79	80	81	82	83	84	85	86	87

EXAMPLE

\$Header-A,1,22,333,4444,55555,666666,7777777,88888888*XX

\$Header-A	VAL1	VAL2	VAL3	VAL4	VAL5	VAL6	VAL7	VAL8
Register	40	41	42	43	44	45	46	47
Values	1	22	333	4444	55555	666666	7777777	88888888

\$Header-C,This,is,an,,,Example*XX

\$Header-C	VAL1	VAL2	VAL3	VAL4	VAL5	VAL6
Register	64	65	66			67
Values	This	is	an			Example

A *sample* CSV file is provided with your PROTEUS. To load it, press F9, go to “*Config: Load*” and select “*CSV*”.



1	Sentence-A values	VAL1..VAL8
2	Sentence-B values	VAL1..VAL4
3	Sentence-C values	VAL1..VAL4
4	Sentence-D values	VAL1..VAL4
5	Misc. Parameters	Texts, RTC Time & Date, Logo. Fully configurable by the user

Upon transmission of the following sentences (use PuTTY @115K, N,8,1), their values should appear as shown in *Figure 18*.

```
$SentenceA,1,22,333,4444,55555,666666,7777777,88888888*XX  
$SentenceB,A,BB,CCC,DDDD*XX  
$SentenceC,Pitch,Roll,Yaw,Heading*XX  
$SentenceD,This,is,an,Example*XX
```



Figure 18

Any individual value can also be updated by sending command **\$VL43**. For example:

- To change VAL7 from SentenceA to 777 send: **\$VL43,46,777*XX**.
- To change VAL6, VAL7, VAL8 from SentenceA to 777,8888,99999 accordingly, send: **\$VL43,45,777,8888,99999*XX**.

To customize the sample file to meet your needs, follow [Figure 19-Figure 24](#).

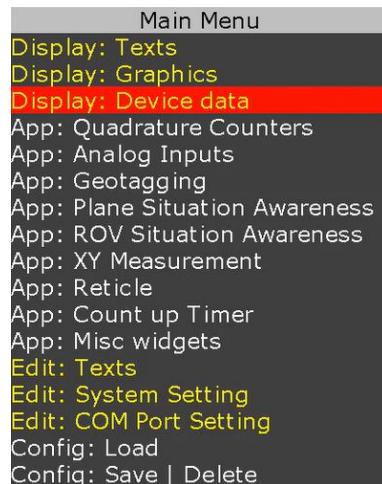


Figure 19

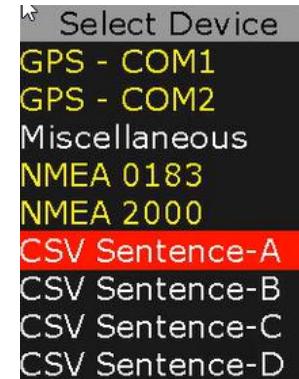


Figure 20

Sentence-A Values	
When to display	Off
VAL1	Off
VAL2	Off
VAL3	Off
VAL4	Off
VAL5	Off
VAL6	Off
VAL7	Off
VAL8	Off
VAL9	Off
VAL10	Off
VAL11	Off
VAL12	Off

Enter=Select Ctrl or Alt + Arrow=Move
Font Width Justify Color Backcolor
Esc=Abort F10=Save

Figure 21

Sentence-B Values	
When to display	Off
VAL1	Off
VAL2	Off
VAL3	Off
VAL4	Off
VAL5	Off
VAL6	Off
VAL7	Off
VAL8	Off
VAL9	Off
VAL10	Off
VAL11	Off
VAL12	Off

Enter=Select Ctrl or Alt + Arrow=Move
Font Width Justify Color Backcolor
Esc=Abort F10=Save

Figure 22

Sentence-C Values	
When to display	Off
VAL1	Off
VAL2	Off
VAL3	Off
VAL4	Off
VAL5	Off
VAL6	Off
VAL7	Off
VAL8	Off
VAL9	Off
VAL10	Off
VAL11	Off
VAL12	Off

Enter=Select Ctrl or Alt + Arrow=Move
Font Width Justify Color Backcolor
Esc=Abort F10=Save

Figure 23

Sentence-D Values	
When to display	Off
VAL1	Off
VAL2	Off
VAL3	Off
VAL4	Off
VAL5	Off
VAL6	Off
VAL7	Off
VAL8	Off
VAL9	Off
VAL10	Off
VAL11	Off
VAL12	Off

Enter=Select Ctrl or Alt + Arrow=Move
Font Width Justify Color Backcolor
Esc=Abort F10=Save

Figure 24

While in [Figure 21- Figure 24](#), use **↓** to select desire CSV value. Press **↓** to select “On”. Use [shortcuts](#) keys to format the text as described below:

Font select, field **Width**, text **Justification**, text **Color**, text **Background** and **Ctrl or Alt + ↑↓** text position.

DISPLAY NMEA 2000 DATA

Follow [Figure 1](#) and [Figure 2](#) to enable CAN communication by setting “COM2 mode” to CAN. Sensor signals “CAN-H” and “CAN-L” must be connected to the internal terminal block J48 as shown in [PCB specification](#).

Follow [Figure 25 - Figure 27](#) to display NMEA2000 messages.

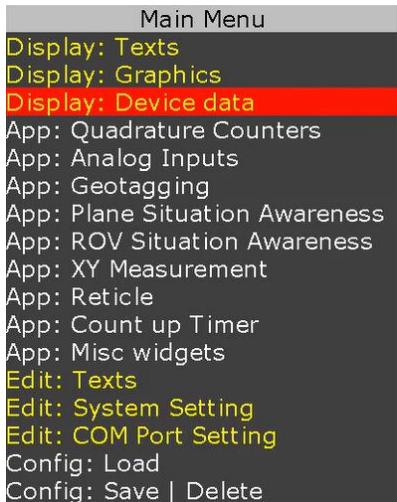


Figure 25

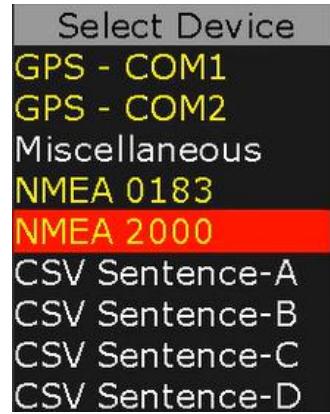


Figure 26

NMEA2000 Parameters (PgDn...)	
When to display	Off
PGN 129029: Time	Off
PGN 129029: Date	Off
PGN 129029,129025: Lat	Off
PGN 129029,129025: Lon	Off
PGN 128259: Speed Water Ref	Off
PGN 128259: Speed Ground Ref	Off
PGN 130323: Wind Speed	Off
PGN 130323: Wind Direction	Off
PGN 130323: Wind Gusts	Off
PGN 130323: Temperature Air	Off
PGN 130323: Pressure	Off
PGN 128267: Depth at Sensor	Off
Enter=Select Ctrl or Alt + Arrow=Move Font Width Justify Color Backcolor Esc=Abort F10=Save	

Figure 27

PROTEUS supports PNG messages 129025, 128259, 128267, 129029, 130323. VideoLogix will continuously add new messages per customer request and free of charge.

DISPLAY TILT SENSOR AND COMPASS

Proteus has a built-in 3D accelerometer, 3D gyroscope (LSM6DSM) and 3-axis magnetometer (LIS2MDL). Follow [Figure 28 - Figure 30](#) and to display the sensor data:

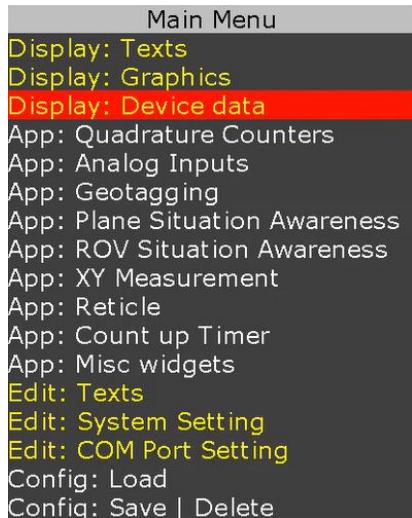


Figure 28



Figure 29

Miscellaneous Parameters	
When to display	Always On
RTC Time	Off
RTC Date	Off
IRIG Time	Off
IRIG Date	Off
Barcode scanner result	Off
Digital Inputs	Off
NTP Time & Date Buffer	Off
NTP Unix Epoch	Off
Development	Off
ATC Time	Off
Target Lat	Off
Target Lon	Off
Proteus IMU Heading	Off
Proteus IMU Pitch	Off
Proteus IMU Roll	Off

Figure 30

To calibrate the sensor, press `Alt_Left + Ctrl_Left + Shift_Left + I` simultaneously and follow the on-screen prompts.

REAL TIME ANNOTATION


Follow [Figure 31](#) and [Figure 32](#) to enable “Real time annotation”.

The default settings for annotation is:

- Upper left corner (x, y) is 100, 100
- Font size #2
- Text color yellow
- Text background color blue

To change the default setting, visit [Display text](#) and follow [Figure 6](#) through [Figure 9](#) to display, position and format **Text #10**. Once complete, remove Text #10 as shown in [Figure 9](#).

Once annotation is enabled, your keyboard entries will appear as shown in the picture below. Press Esc to clear the text.

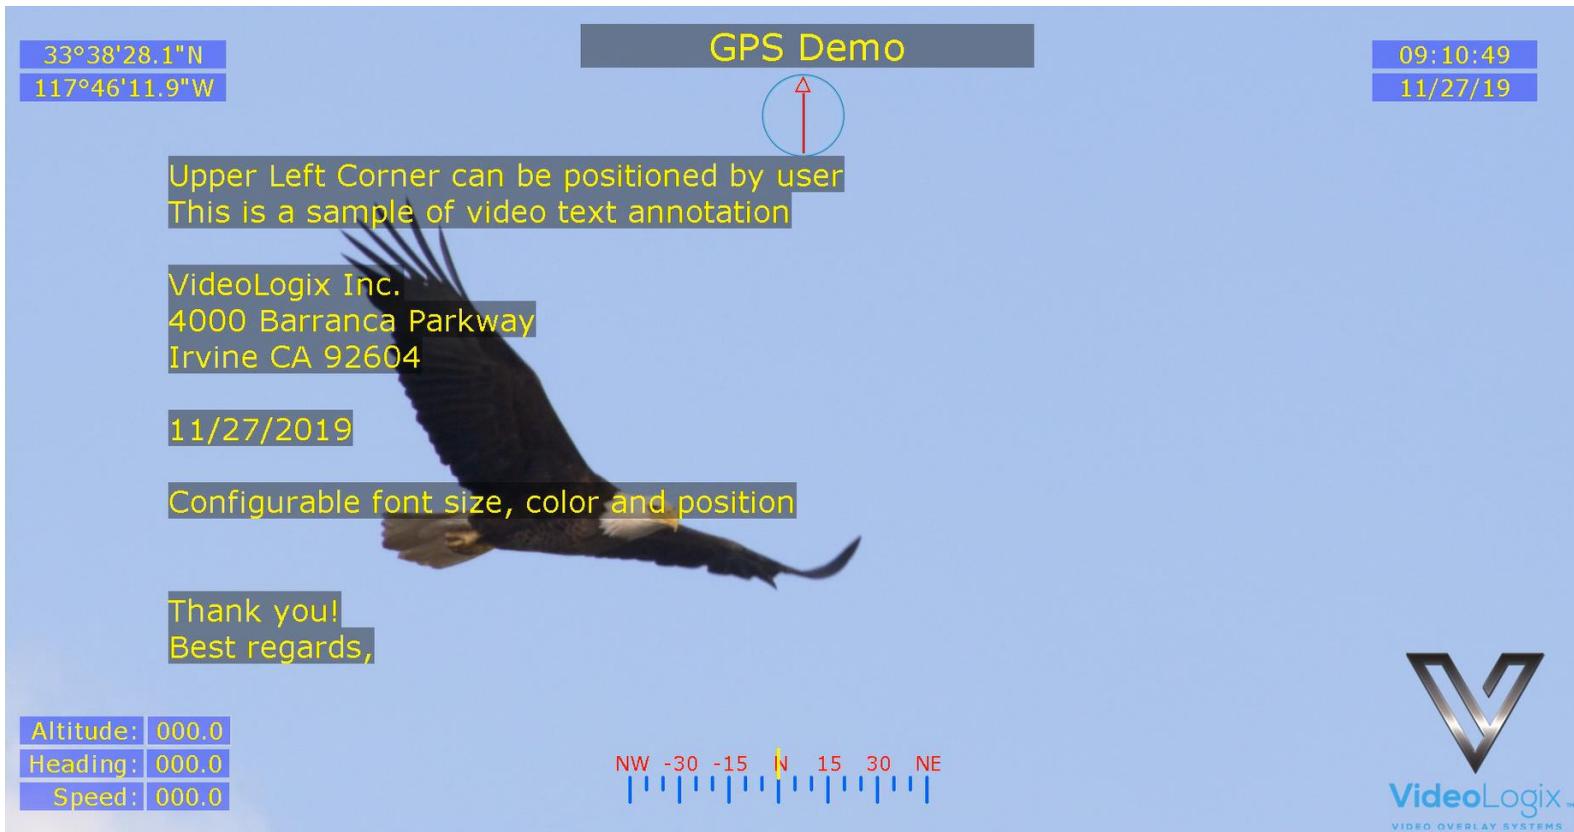

APPEND MILLISECOND COUNTER TO IRIG, GPS, RTC TIME

Follow *Figure 31* - *Figure 32* to append millisecond count to RTC, IRIG and GPS time. Millisecond counter is reset on second rollover. Once enable, the displayed time will refresh at video frame rate i.e. 30 time per second for 1080p@30

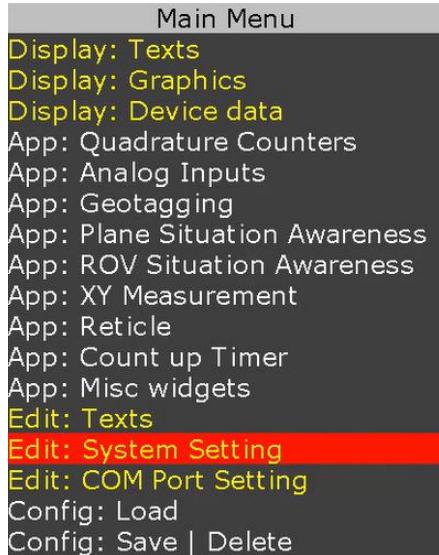


Figure 31

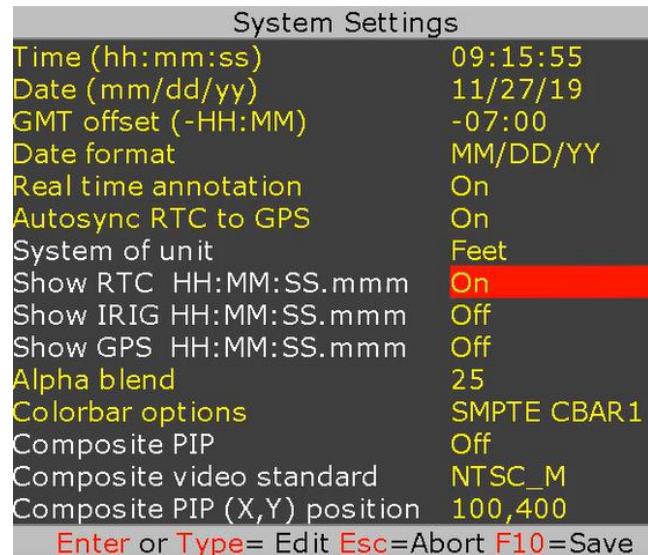


Figure 32

SNTP

SNTP (Simple Network Time Protocol) synchronizes PROTEUS built-in RTC with a server that has already been synchronized by a source such as a radio, satellite receiver or modem.

PROTEUS SNTP Client operates in unicast to obtain time over the network. It polls its SNTP Server on regular interval and waits to receive a reply from that Server. When one is received, it verifies that the reply contains a valid update by applying a set of 'sanity check' recommended by RFC 4330. It then applies Server clock directly to its local clock (RTC).

Follow [Figure 33 - Figure 34](#) to configure SNTP.

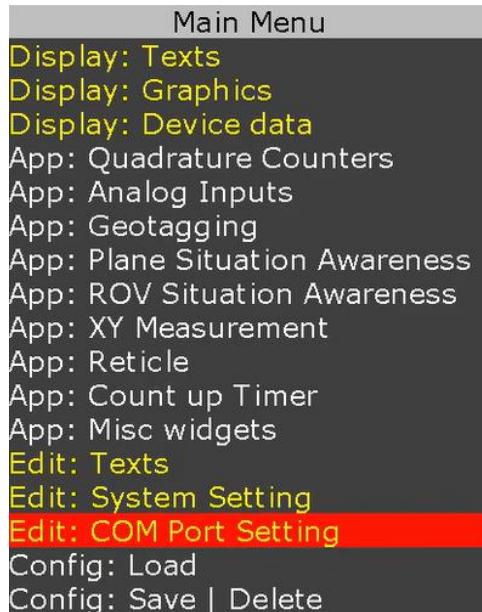


Figure 33


Edit COM Ports	
COM1 (DB9) Device	CSV1 (\$Header,Dn...*CS)
COM1 (DB9) Baud	115200
COM2 (INT) Device	CSV1 (\$Header,Dn...*CS)
COM2 (INT) Baud	4800
Sentence A Header	\$SentenceA
Sentence B Header	\$SentenceB
Sentence C Header	\$SentenceC
Sentence D Header	\$SentenceD
COM2 mode	RS232
\$PTSAG ID	0
Proteus IP Address type	STATIC
SNTP	ENABLE
SNTP Server IP Address	192.168.1.120
Proteus IP Address	192.168.1.131

Figure 34

APPS

QUADRATURE OR SIMPLE COUNTERS

- Two Quadrature counters.
- Counters are 26-bits wide. Maximum count 67,108,863 or $\pm 33,554,431$
- Configurable line resolution x_1, x_2, x_4 . See diagram below for additional detail
- Dedicated RESET pins
- Raw counter value can be converted to any unit (distance, speed, etc.) using $mapped_count = m * raw_count + b$
- Counter values can be used to control “XY Measurement app” or “Reticle app”
- Interface compatible with Mechanical, Hall effect & Optical rotary encoders

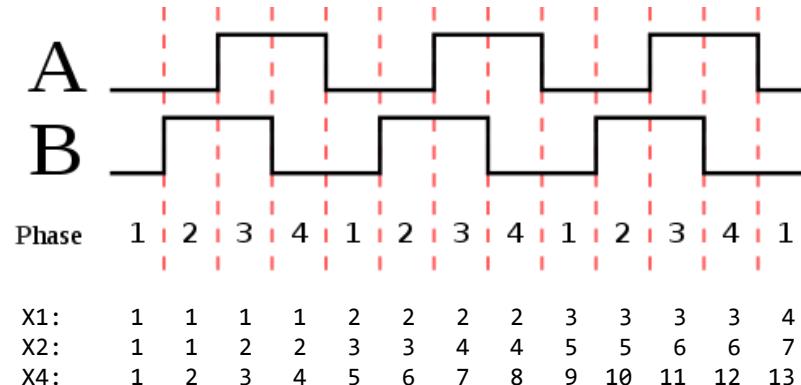


The counters can be configured as Quadrature or Simple counters.


Terminal Block (J52-J53) Pins	As Quadrature Counters	As Simple Counters
DIN1	RESET for Counter 1.	RESET for Counter 1
DIN2	RESET for Counter 2	RESET for Counter 2
DIN3	Quadrature Counter 1 inputs	Simple Counter 1 input
DIN4		-
DIN5	Quadrature Counter 2 inputs	Simple Counter 2 input
DIN6		-

Typical wiring connection for Quadrature Counters

Quadrature Counter 1

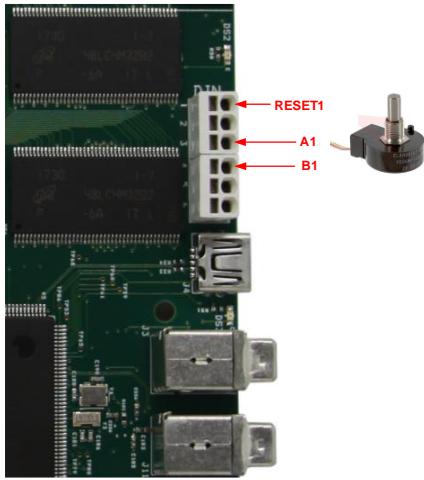

Quadrature Counter 2

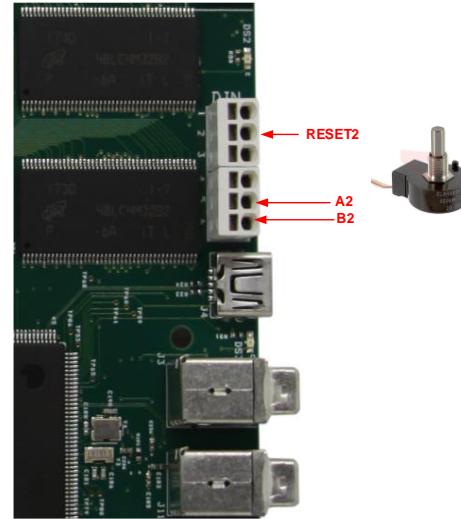


Electrical Interface

Input compatibility:


- 0-5V logic (10mA sink current)
- Frequency < 10MHz

Power & ground can be provided to the quadrature encoder via J55:

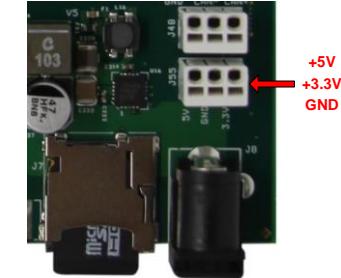


Typical wiring connection for Simple Counters

Simple Counter 1

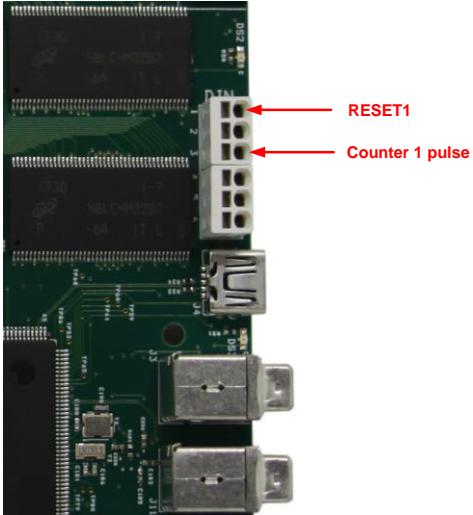

Simple Counter 2

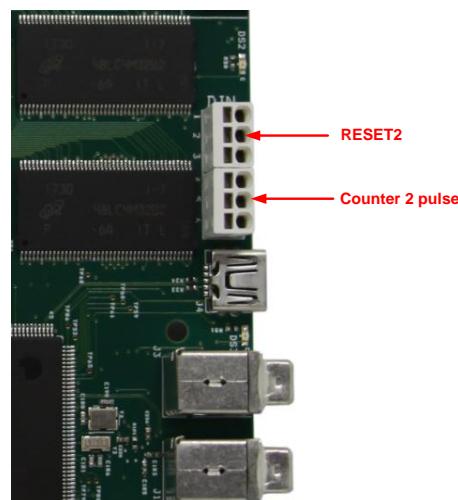

Electrical Interface

Input compatibility:

- 0-5V logic (10mA sink current)
- Frequency < 1KHz (5msec debouce)

CONFIGURE COUNTERS

A *sample* Quadrature file is provided with your PROTEUS. To load it, press F9, go to “*Config: Load*” and select “*Quadrature*”.



1	Raw count	$raw_count = 67,108,863 \text{ or } \pm 33,554,431$
2	Mapped count	$mapped_count = m * raw_count + b$
3	Misc. Parameters	Title, Time & Date, Logo. Fully configurable by the user

To customize the sample file to meet your needs, follow [Figure 35 - Figure 37](#)

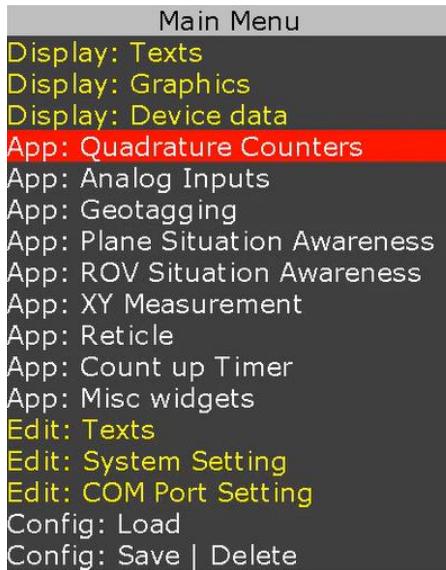


Figure 35



Figure 36

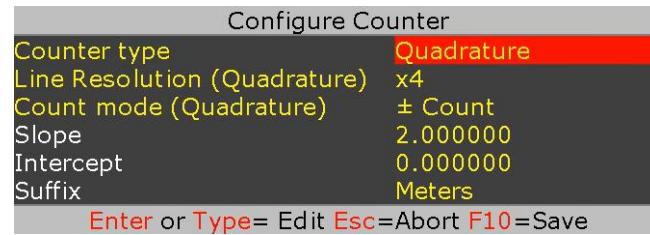


Figure 37

Follow [Figure 38 - Figure 39](#) to display map and raw counts.



Figure 38

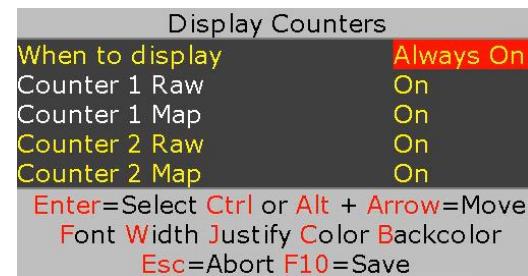


Figure 39


EXAMPLE

Configure counter 1 for 0.0023 inch/count and display result.

- Follow [Figure 35 - Figure 37](#) to set Counter 1 “*Slope*” and “*Intercept*” to 0.0023 and 0 respectively.
- Follow [Figure 35, Figure 38 - Figure 39](#) to display “*Counter 1 Map*”

ANALOG DATA

- Four Analog inputs
- Input range 0..3.3V
- Internal low pass RC filter (24Ω , 5600pF)
- 12-Bit ADC. Analog signals are *Sampled* at 1KHz. Each ADC *Sample* is average of 4 consecutive ($2\mu\text{s}$ apart) samples
- ADC_{raw} is average of 1 to 64 (user selectable) most recent *Samples*.
- For example $n=1$ displays the most recent sample and $n=8$ displays average of the most recent 8 samples
- Analog signals can be converted to any unit using $ADC_{mapped} = m * ADC_{raw} + b$
- ADC_{mapped} and ADC_{raw} are placed in video frame on falling edge of VSYNC. See diagram below for additional detail
- Analog signals can also be used to control “XY Measurement app” or “Reticle app”

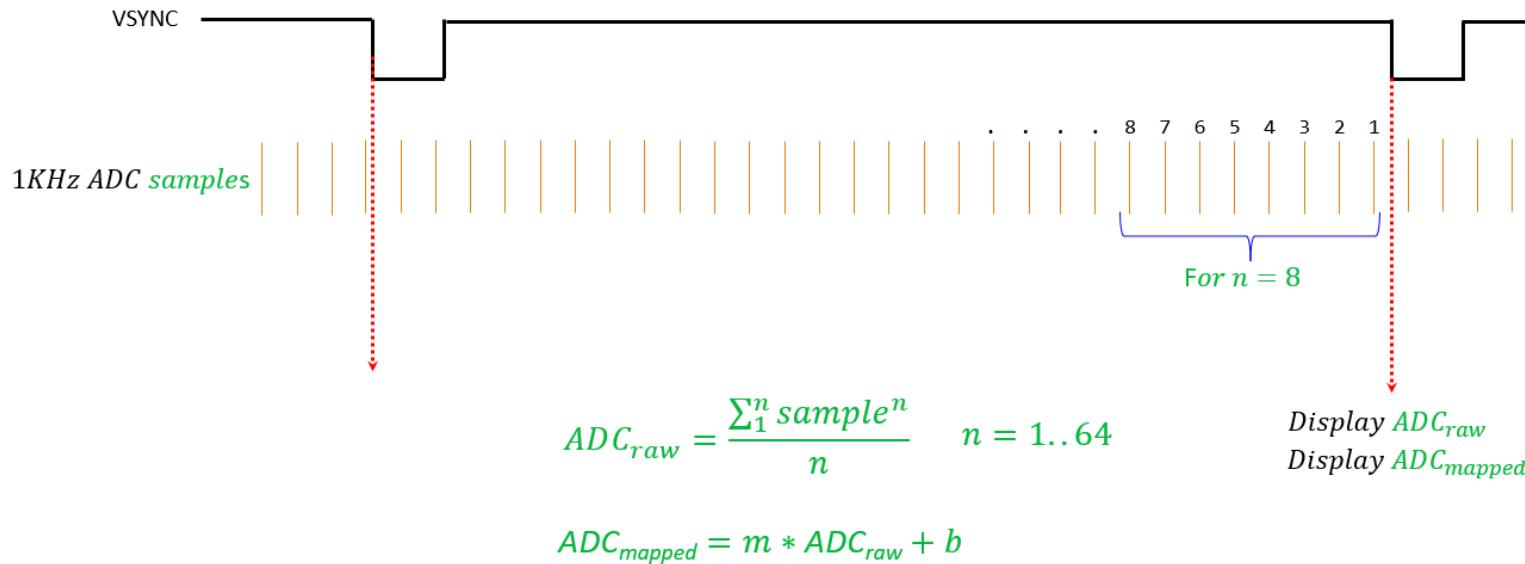

TB: J50	Description	Range	Corresponding 12-bit ADC Value
Pin 1	GND	-	-
Pin 2	Analog Input CH1	0..3.3V	0..4095
Pin 3	Analog Input CH2	0..3.3V	0..4095
Pin 4	Analog Input CH3	0..3.3V	0..4095
Pin 5	Analog Input CH4	0..3.3V	0..4095
Pin 6	GND	-	-

A **sample** Analog file is provided with your PROTEUS. To load it, press F9, go to "*Config: Load*" and select "*Analog*".



1	Raw Analog values	$ADC_{raw} = 0.4095$
2	Mapped Analog values	$ADC_{mapped} = m * ADC_{raw} + b$
3	Misc. Parameters	Title, Time & Date, Logo. Fully configurable by the user

To customize the sample file to meet your needs, follow [Figure 40 - Figure 42](#):

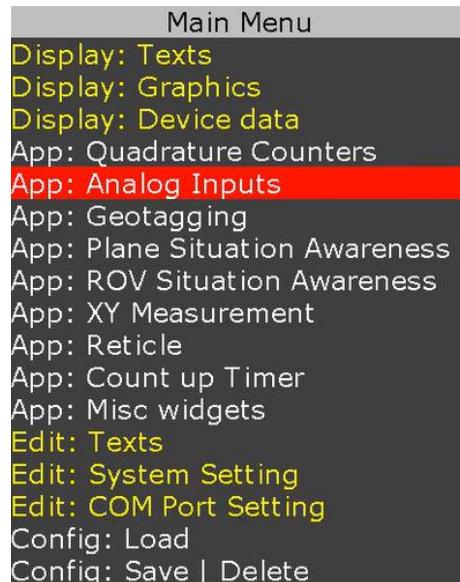


Figure 40



Figure 41

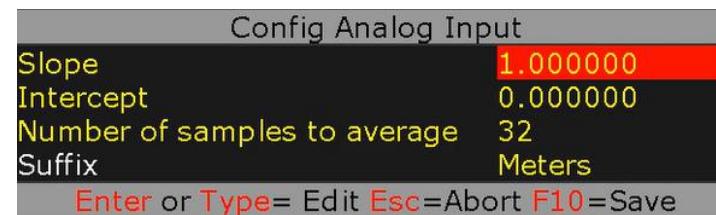


Figure 42

Follow [Figure 43 - Figure 44](#) to display map and raw values.



Figure 43


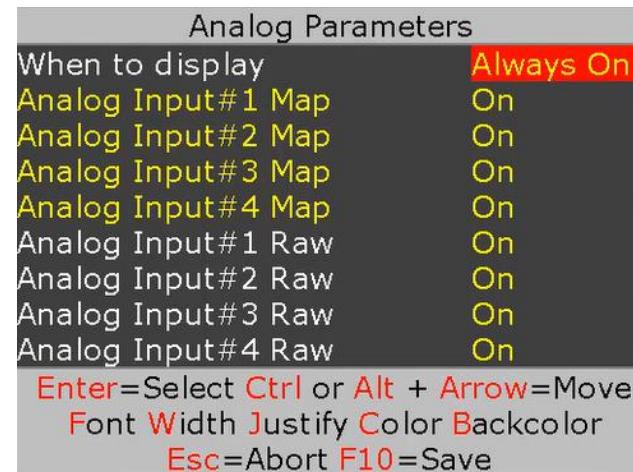


Figure 44

EXAMPLE 1

Configure analog channel 1 to convert 0-3.3V input to display 0 - 667.5 feet.

Input	ADC Count	Represent (feet)
3.3V		
0	0	0
3.3	4095	667.5

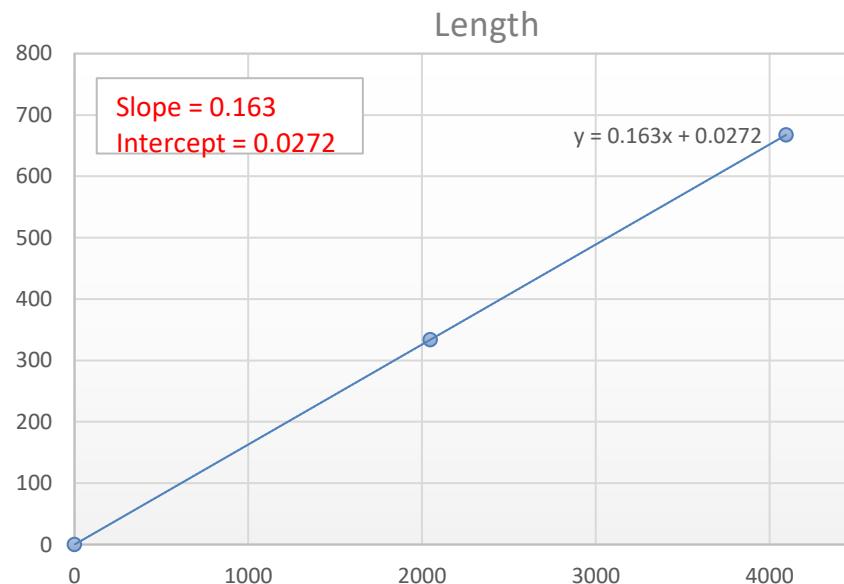


Follow [Figure 40 - Figure 42](#) to set CH1 "Slope" & "Intercept" to 0.163 and 0.0272 respectively.

Follow [Figure 43 - Figure 44](#) to display "Analog Input #1 Map"

To quickly get familiar with this app, please watch our short tutorial video "[Tutorial Analog Inputs](#)" on our web site.

XY MEASUREMENT

A *sample* XY measurement file is provided with your PROTEUS. To load it, press F9, go to "[Config: Load](#)" and select file "["XY Measurement"](#)"

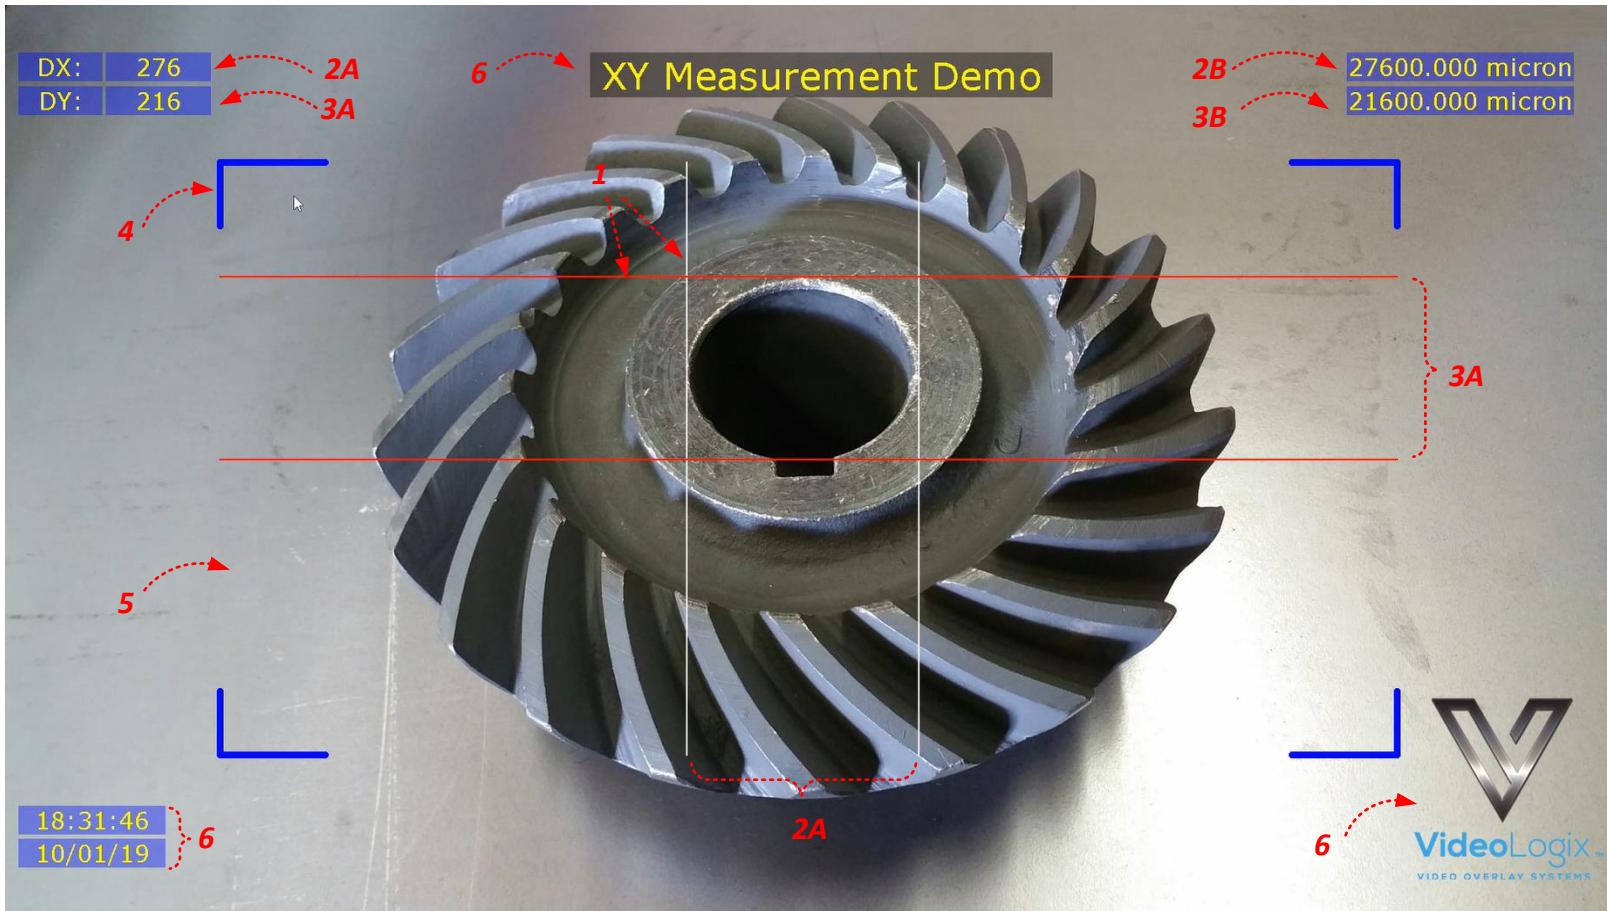

1	Markers	x_1, x_2, y_1, y_2 markers. Can be moved via Analog inputs, quadrature inputs, RS232 command, arrow keys
2A	Delta X	$DX = x_2 - x_1 $
2B	Calibrated DX	$CX = mx * DX + bx$
3A	Delta Y	$DY = y_2 - y_1 $
3B	Calibrated DY	$CY = my * DY + by$
4	Border	Border can be a bracket, box or none. Adjustable line width & color
5	Area	The width and height are adjustable up to 1920 x 1080
6	Misc. Parameters	Title, Time & Date, Logo. Fully configurable by the user

To customize the sample file to meet your needs, follow [Figure 45 - Figure 47](#):

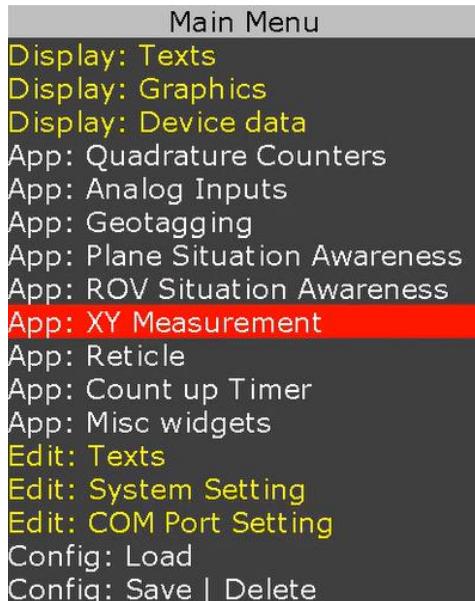


Figure 45



Figure 46

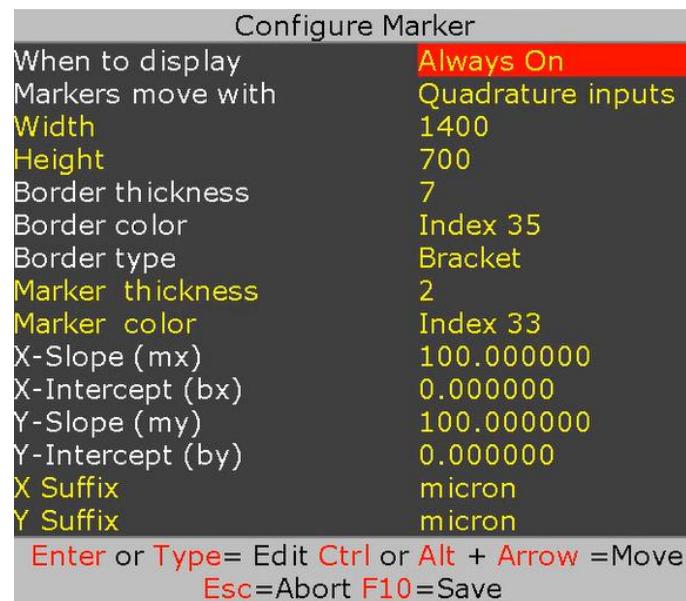


Figure 47

There are 4 options for X1, X2, Y1, Y2 marker movement:

Analog Inputs	Apply 0-3.3V to CH1-CH4
Quadrature Inputs	Connect incremental encoder switches to quadrature inputs# 1,2. (Toggle IN0 to select between horizontal & vertical marker pair)
RS232 Command	Send command \$VL43,157,x1,x2,y1,y2*XX to set registers #157,158,159,160
Keyboard Arrow	Use ↗ to move 1-pixel resolution. Use Ctrl + ↗ to move 25 pixels. Press ↴ to select next marker.


To quickly get familiar with this app, please watch our short tutorial video "[Tutorial Video XY Measurement](#)" on our web site.

RETICLE

A *sample* Reticle file is provided with your PROTEUS. To load it, press F9, go to "*Config: Load*" and select "*Reticle*".



1	Reticle position	Reticle X&Y position. Center is at 0,0 Reticle can be a PNG image, adjustable crosshair or square box. See a few examples below. If an image is selected, it must reside on the microSD card. Image must be converted to BMP and named Crosshair.BMP
2	Reticle style	Reticle can be moved by via Analog inputs, quadrature inputs, RS232 command, arrow keys
3	Border	Border can be a bracket, box or none. Adjustable line width & color
4	Area	The width and height are adjustable up to 1920 x 1080
5	GPS	Latitude & Longitude
6	Misc. parameters	Title, Time & Date, Logo. Fully configurable by the user

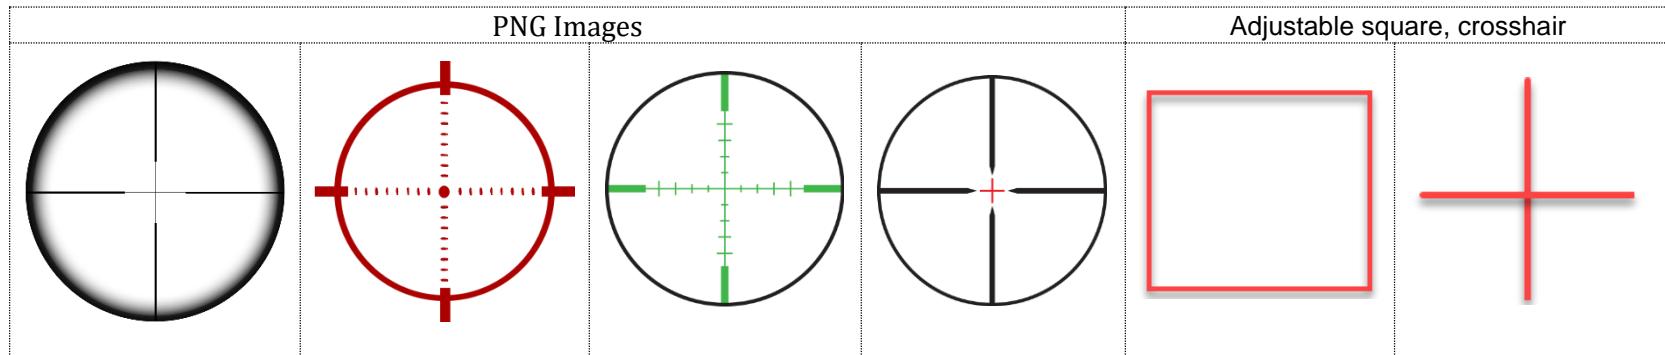

To customize the sample file to meet your needs, follow [Figure 48 - Figure 50](#)



Figure 48



Figure 49



Figure 50

There are 4 options for Reticle movement:

Analog Inputs	Apply 0..3.3V to CH1-CH2
Quadrature Inputs	Connect two incremental encoder switches to quadrature inputs# 1,2
RS232 Command	Send command <code>\$VL43,155,x,y*XX</code> to set registers #155,156
Keyboard Arrow	Use ↗↖ to move 1-pixel resolution. Use Ctrl + ↗↖ to move 25 pixels

To quickly get familiar with this app, please watch our short tutorial video "[Tutorial Reticle](#)" on our web site.

PLANE SITUATION AWARENESS

A *sample* Plane file is provided with your PROTEUS. To load it, press F9, go to “*Config: Load*” and select “*Plane*”.



1	GPS data	Read from GPS attach to COM1 or COM2
2	Plane Situation Widget	Please see below for detail description
3	Compass	Rolling compass widget
4A, 4B, 4C	Sliders	4A depict pitch, 4B roll and 4C Altitude
5	Timer	A count up timer with msec resolution
6	CSV Sentence-A values	VAL1 = Heading, VAL2 = Bearing, VAL3 = Roll, VAL4=Pitch, VAL5 = Depth
7	Misc. parameters	Title, Logo. Fully configurable by the user

PLANE SITUATION AWARENESS WIDGET

As shown in [Figure 51](#), Plane situation awareness widget depicts parameters such as heading, bearing (relative or magnetic), roll, pitch, azimuth, elevation. The size of the widget is governed by the background image shown in [Figure 52](#). Larger image will result in a larger widget. Background image resides on the microSD and can be replaced by a user-provided image for different size and look & feel. The image must be named “Ring Plane”.

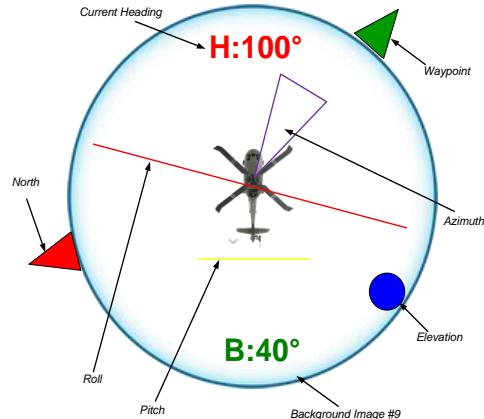


Figure 51

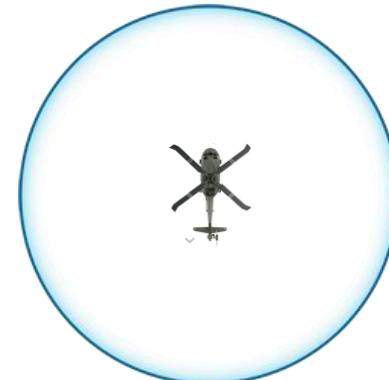


Figure 52

Follow [Figure 53 - Figure 54](#) to configure the widget.

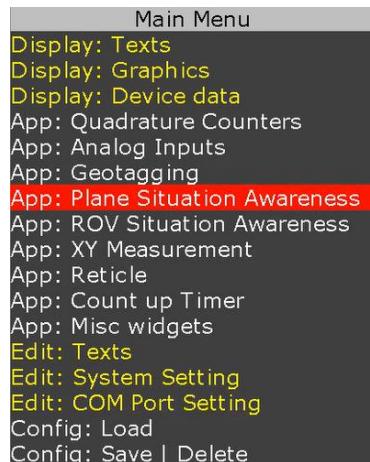


Figure 53

Aircraft Situation Awareness	
When to display	Always On
REG: Heading°	40
REG: Bearing°	41
REG: Roll°	42
REG: Pitch°	43
REG: Gimbal Azimuth°	44
REG: Gimbal Elevation°	45
REG: Lens	46
Invert: Heading°	Off
Invert: Bearing°	Off
Invert: Roll°	Off
Invert: Pitch°	Off
Invert: Azimuth°	Off
Invert: Elevation°	Off
Relative Bearing°	Off
Text color	Index 32
Enter or Type= Edit Ctrl or Alt + Arrow =Move Esc=Abort F10=Save	

Figure 54

Follow [Figure 54](#) to specify what register are associated with each parameter. For example, table below shows available options for heading:

Register # associated with Heading	Description
89	Heading is provided by attaching Garmin GPS modem to COM1 port
114	Heading is provided by attaching Vector NAV INS sensor to any COM port
40	Heading is provided by transmitting a CSV sentence A to any COM port. Heading would be VAL1
89	Do not display heading

The device (GPS, INS ...) specific registers are updated automatically when it is connected to PROTEUS. When the content of a register changes, any widget (text or graphic) that is linked to that register is **automatically** updated.

The content of any register can also be changed by sending Set Register Command. Assuming register 40 is linked to heading, command below will set the heading to 85°. Therefore, all widgets linked to register 40 will be updated automatically.

```
$VL43,40,85*XX
```

[Figure 55](#) demonstrates the relation between heading, relative vs magnetic bearing:


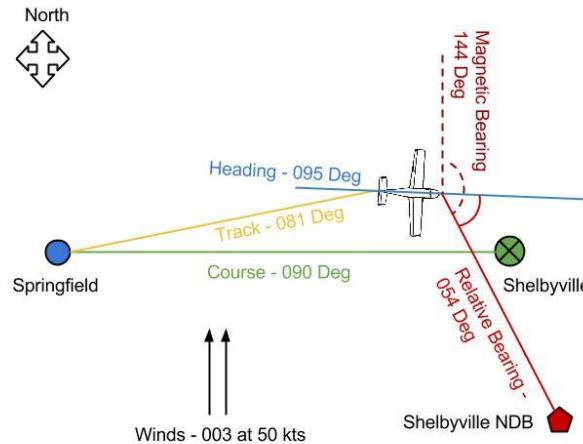


Figure 55

To customize the sample file to meet your needs, please visit the corresponding section in this document to learn about the specifics.

Rov Situation Awareness

A *sample* ROV file is provided with your PROTEUS. To load it, press F9, go to "*Config: Load*" and select "ROV".

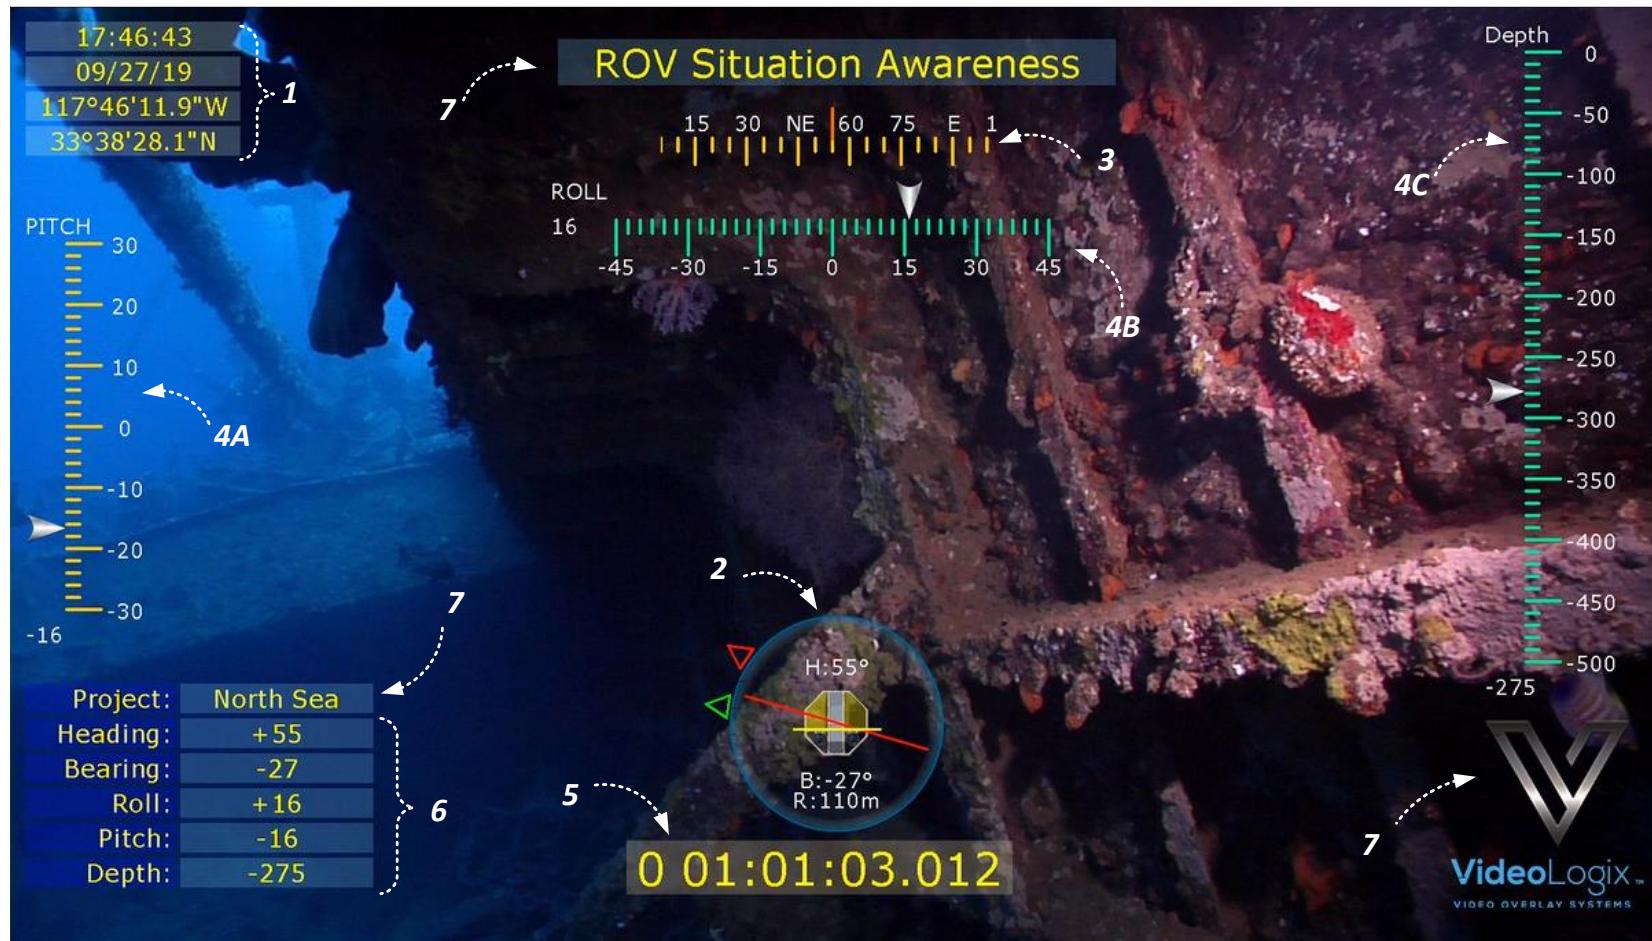

1	GPS date	Read from GPS attach to COM1
2	ROV Situation Widget	Please see below for detail description
3	Compass	Rolling compass widget
4A, 4B, 4C	Sliders	4A depict pitch, 4B roll and 4C Depth
5	Timer	A count up timer with msec resolution
6	CSV Sentence-A values	VAL1 = Heading, VAL2 = Bearing, VAL3 = Roll, VAL4=Pitch, VAL5 = Depth
7	Misc. parameters	Title, Logo. Fully configurable by the user

ROV SITUATION AWARENESS WIDGET

As shown in [Figure 56](#), ROV situation awareness widget depicts parameters such as heading, bearing (relative or magnetic), range to target, roll and pitch. The size of the ROV widget is governed by the background image shown in [Figure 57](#). Larger image will result in a larger widget. Background image resides on the microSD and can be replaced by a user-provided image for different size and look & feel. The image must be named “Ring Rov”.

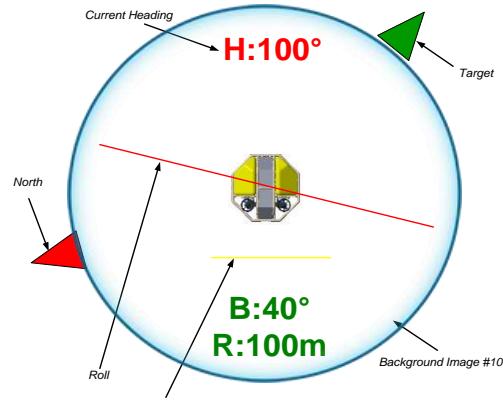


Figure 56

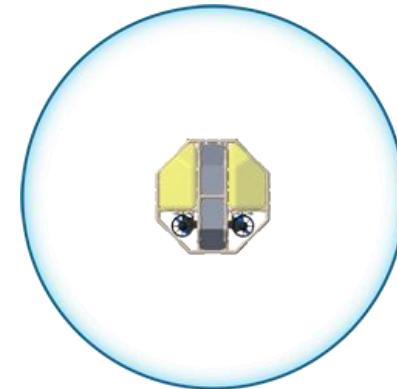


Figure 57

Follow [Figure 58-Figure 59](#) to configure the widget.



Figure 58

Rov Situation Awareness	
When to display	Always On
REG: Heading°	40
REG: Bearing°	41
REG: Roll°	42
REG: Pitch°	43
REG: Range	44
Invert: Heading°	Off
Invert: Bearing°	Off
Invert: Roll°	Off
Invert: Pitch°	Off
Relative Bearing°	Off
Text color	Index 32
Enter or Type= Edit Ctrl or Alt + Arrow =Move Esc=Abort F10=Save	

Figure 59

Follow [Figure 59](#) to specify what register is associated with each parameter. For example, table below shows available options for heading:

Register # associated with Heading	Description
89	Heading is provided by attaching Garmin GPS modem to COM1 port
114	Heading is provided by attaching Vector NAV INS sensor to any COM port
40	Heading is provided by transmitting a CSV sentence A to any COM port. Heading would be VAL1.
00	Do not display heading

The device (GPS, INS ...) specific registers are updated automatically when it is connected to PROTEUS. When the content of a register changes, any widget (text or graphic) that is linked to that register is **automatically** updated.

The content of any register can also be changed by sending Set Register Command. Assuming register 40 is linked to heading, command below will set the heading to 85°. Therefore, all widgets linked to register 40 will be updated automatically.

```
$VL43,40,85*XX
```

To customize the sample file to meet your needs, please visit the corresponding section in this document to learn about the specifics.

SLIDERS

PROTEUS provides 4 fully configurable sliders. Follow [Figure 60- Figure 62](#) to configure the sliders.



Figure 60



Figure 61

Slider	
When to display	Always On
Orientation	HORZ
Major tick marks	5
Minor tick marks	5
Tick gaps	14
Tick color	Index 35
Text color	Index 32
Line width	2
Link to register	52
Min value	0
Max value	100
Title	Power
Arrow Type	Solid
Compass	Off
Enter or Type= Edit Ctrl or Alt + Arrow =Move Esc=Abort F10=Save	

Figure 62

Slider must be linked to a register. Registers are updated via associated sensors or through RS232 commands. When the linked register receives a new value, associated slider is automatically updated.

Assuming slider is linked to register #40, RS232 command **\$VL43,40,30*XX** will set slider to 30.



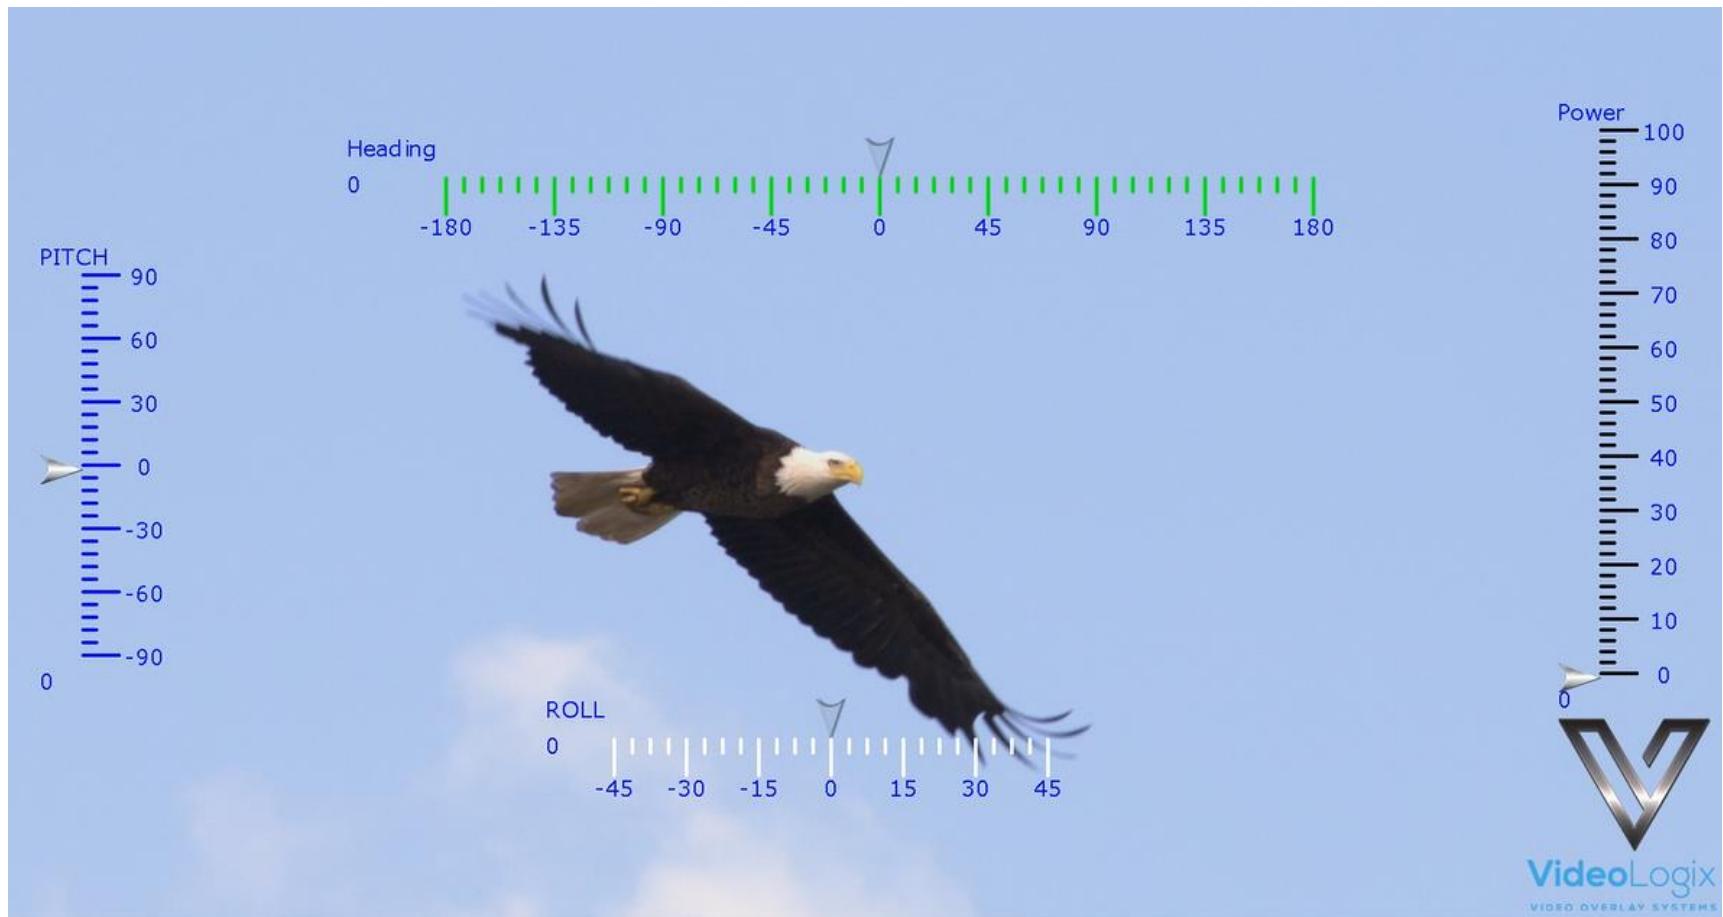


Figure 63

COMPASS

PROTEUS provides a rolling compass and simple circular compass as shown below.

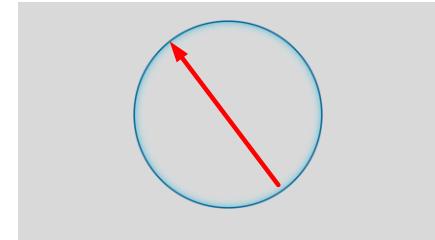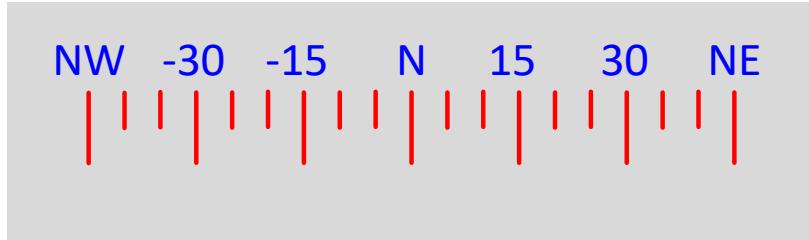

Follow [Figure 64 - Figure 66](#) to configure each compass



Figure 64



Figure 65



Figure 66

Rolling compass provides 4 visible spans (30° , 45° , 60° , 90°) with 4 different legends described below:

- $0..360^\circ$
- $0..360^\circ$ NSEW
- $-180^\circ...+180^\circ$
- $-180^\circ...+180^\circ$ NSEW

The size of the circular compass widget is governed by its background image. Larger image will result in a larger compass. Background image resides on the microSD and can be replaced by a user-provided image for different size and look & feel. The image must be named "Ring100".

COUNT UP TIMER

PROTEUS provides Count Up timer. Follow *Figure 67-Figure 68* to configure the timer.

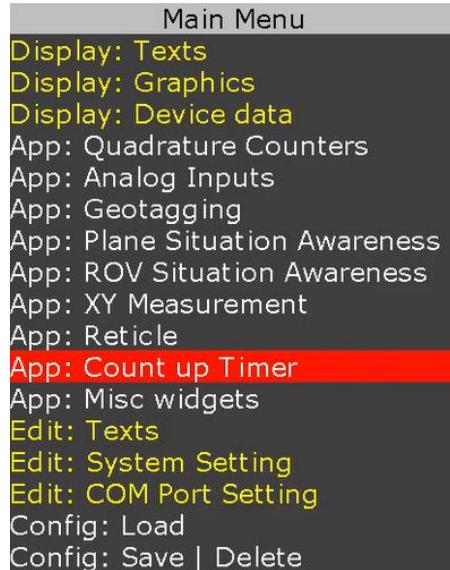


Figure 67

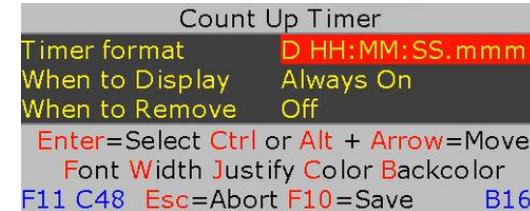


Figure 68

CLOCK SOURCE

Source	Description
Internal 27MHz	Source for 1msec pre-scaler

EXTERNAL CONTROLS

GPI	Description
IN1	0 = Pause Timer, 1 = Resume Timer
IN2	0 = Reset Timer. Reset occurs within 10nsec.

TIMER FORMAT

Timer format is “D HH:MM:SS.mmm” where D is number of days and mmm is milliseconds

PROTEUS COMMANDS

Aside from supporting various connected devices, PROTEUS provides over 30 powerful commands to overlay crisp and clear texts, graphics and telemetry generated information into an incoming HD & SD video in real time. Refer to the Software Communication Spec (SCS) for the detail description of each command.

TRANSMIT A COMMAND SCRIPT

1. Connect PROTEUS to your monitor. Connect RS232 cable from your PC to the PROTEUS. Power on PROTEUS.
2. Run *PROTEUSApp* located in folder <C:\VideoLogix-V\utility>.
3. Use *File, Select Com Port* to assign a com port.
4. Go to "Demo/Tutorial" tab.
5. Click *Run Script Now* button and load <C:\VideoLogix-V\Script\0-TestCommands>.
6. A demo should appear on your video monitor.

PROTEUS REGISTERS

PROTEUS system contains a collection of registers used for configuring the system and accessing the data it produces. These registers may be read or written to using the Read Register and Write Register commands (refer to SCS for detail). The table in Appendix G provides a quick reference for all the registers and their associated properties. The device specific (Cineflex, IMU, GPS ...) registers are automatically updated when the associated device is connected to PROTEUS. Widgets that are linked to a register are updated automatically when the content of the register changes.

SPECIFICATIONS

MAXIMUM INPUT VOLTAGE

Min (DCIN)	Max (DCIN)	Power
6VDC	42VDC	4 watts

INPUT CONNECTOR

DC power jack is standard 2 conductors, center pin positive, 2.1mm ID, 5.5mm OD.

ENVIRONMENTAL

Specifications	Temperature	Humidity
Operating	0° C to 65° C	10 to 90% RH Non-Condensing
Storage Temperature	-10° C to 80° C	10 to 90% RH

WEIGHT & DIMENSION


Weight	1 lbs.
Dimension	125.30 x 105.23 x 30.51 (mm)

FRONT PANEL LED

PROTEUS provides 3 LED's in the front & rear panel.


LED	Description
L1	<i>Flashes when a RS232 message is received</i>
L2	<i>Flashes when system is working properly</i>
L3	<i>Flashes when FPGA is working properly</i>
Ethernet LED	<i>Flashes when there is a write to the USB flash drive</i>

PCB SPECIFICATION

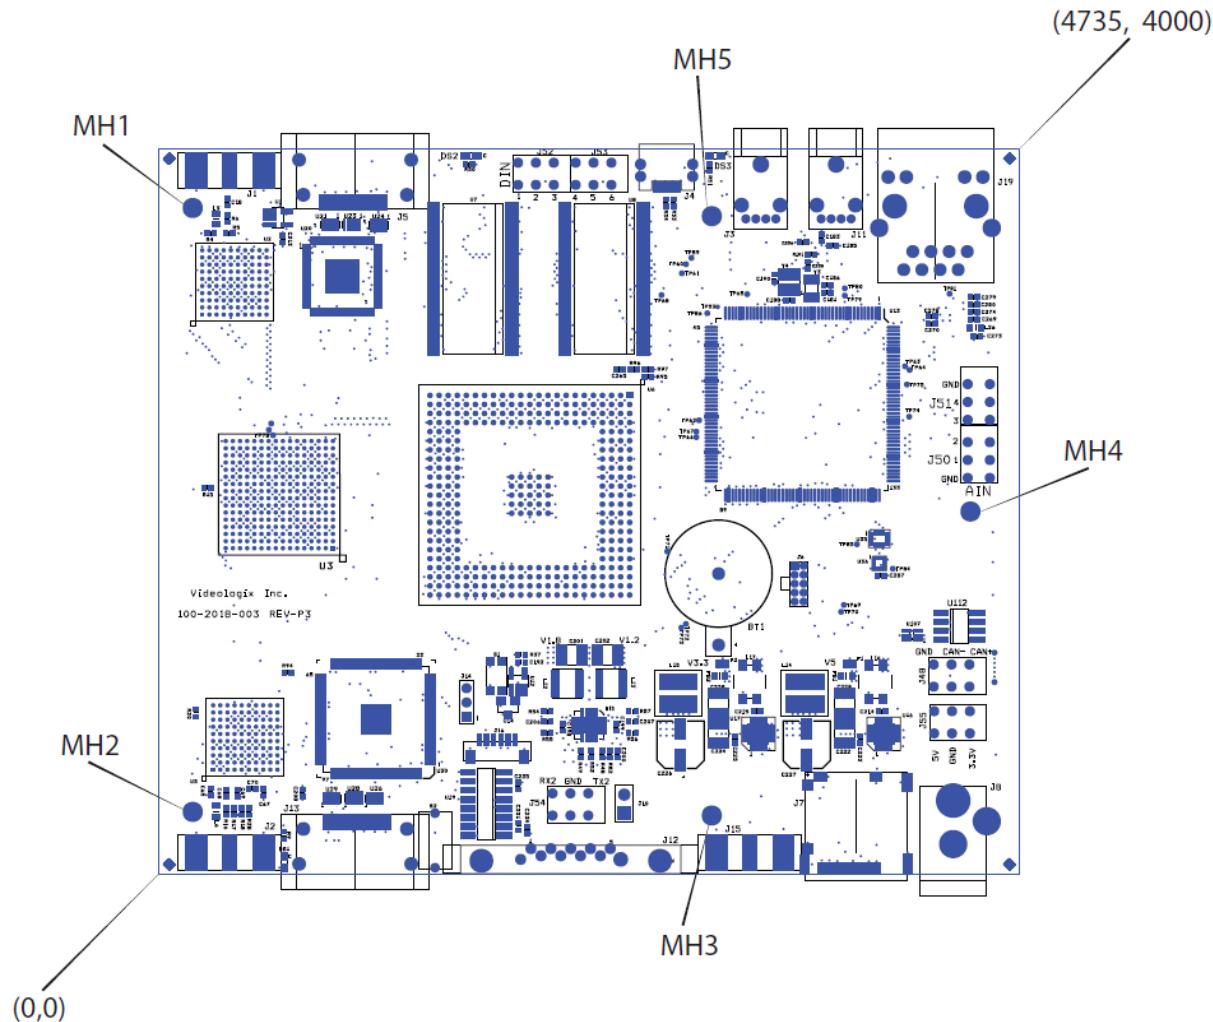


ALL DIMENSIONS IN MIL (0.001 inch)

	X	Y	Dia
MH1	185	3672	100
MH2	185	345	100
MH3	3045	325	100
MH4	4470	2000	100
MH5	3045	3627	100

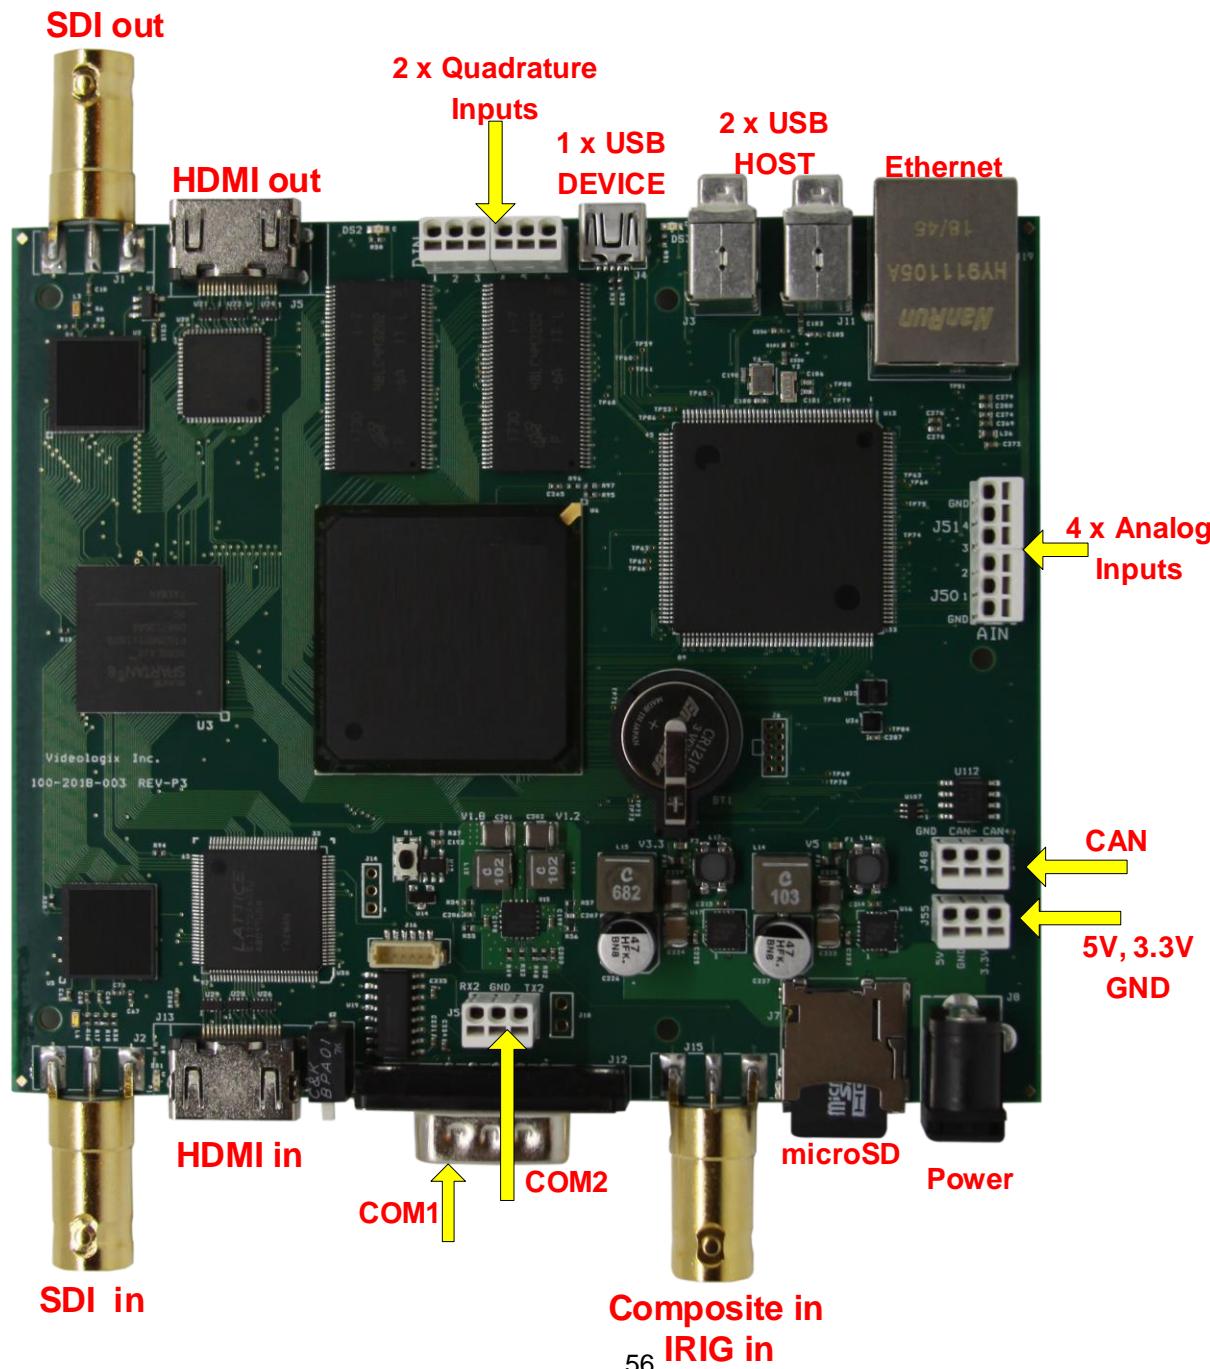

ENCLOSURE DIMENSION

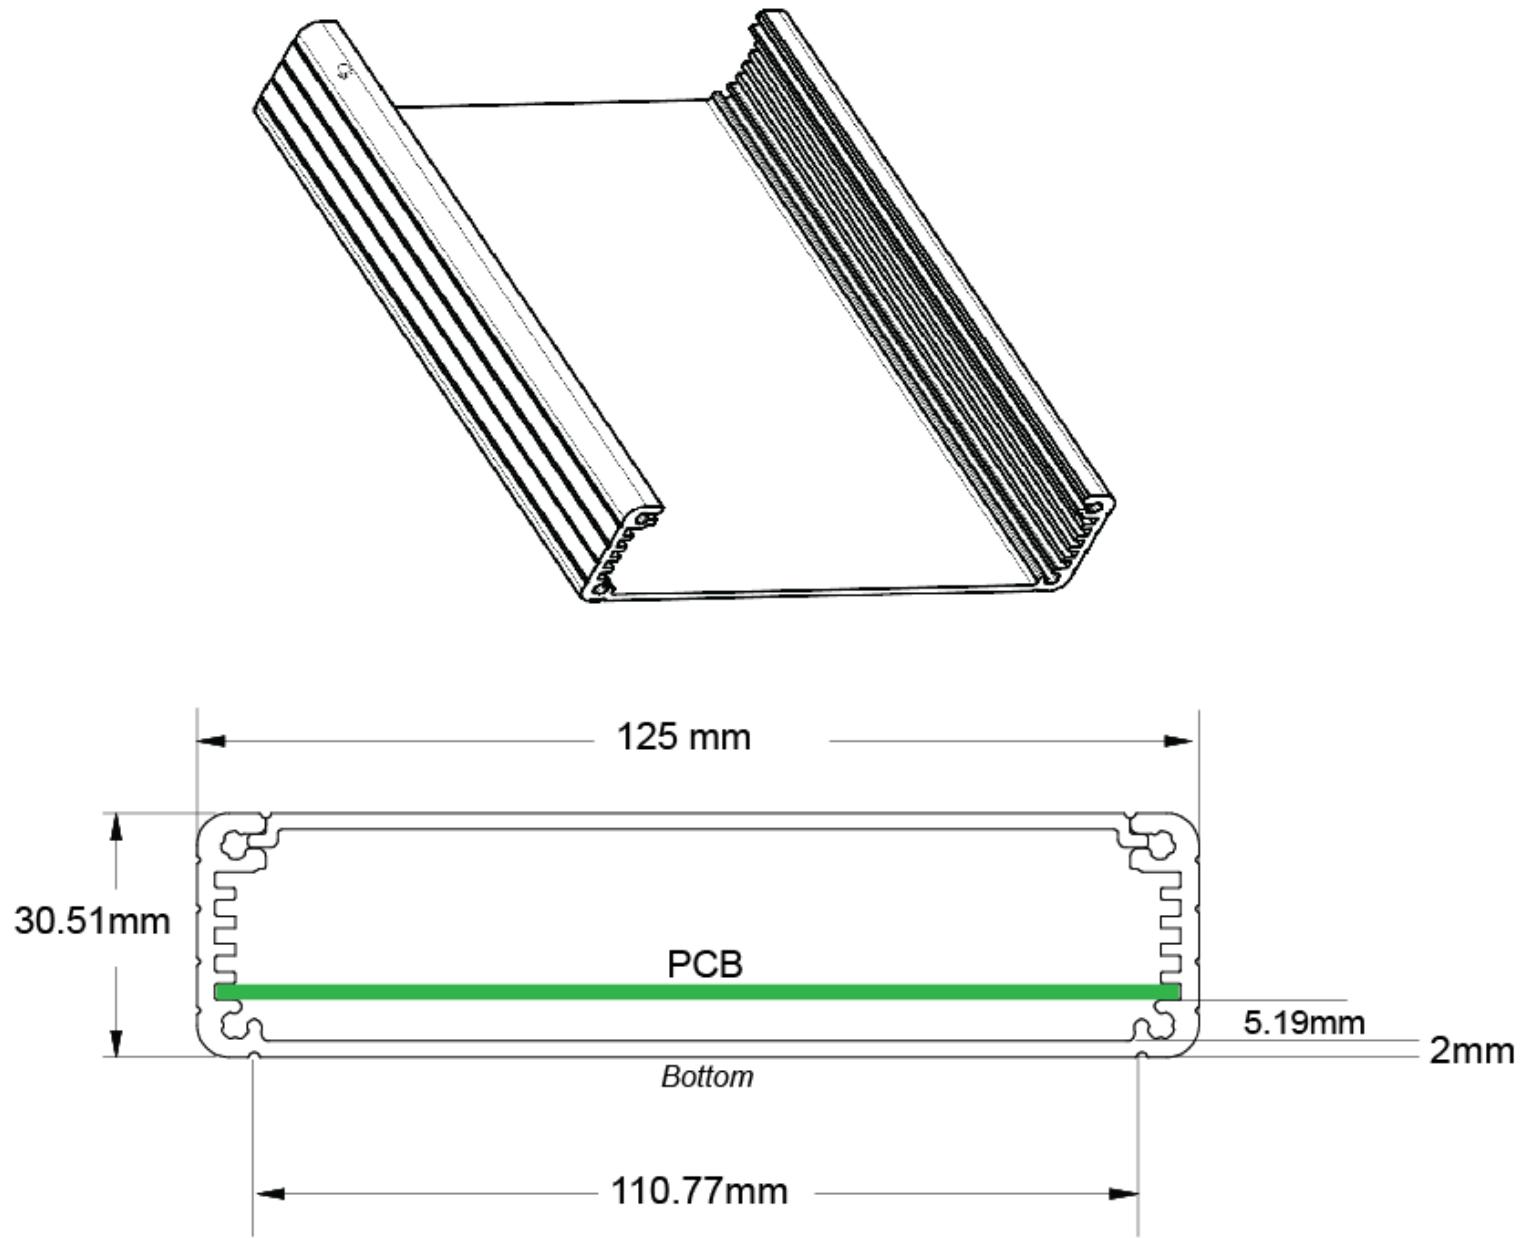

APPENDIX A – KEYBOARD COMMANDS

KEYBOARD COMMANDS

Keyboard command	Description
F8	Shortcut to “Edit: User Texts”
F9	Launch Main-Menu
F10	Save changes & exit Sub-Menu
ESC	Abort changes and exit Sub-Menu
Enter or Ctrl + Enter	Select an item from the picklist i.e. COM1, COM2...
Alt + G	Draw 60 x 60 pixel gridlines on video
Alt + H	Help

KEYBOARD SHORTCUTS


The following keystrokes are used to format the text superimposed on video.

Forward	Reverse	Browse	Description
C or Ctrl + C		Color:	Change text foreground color
F or Ctrl + F		Font:	Change font type
W or Ctrl + W		Width:	Change width of the field
J or Ctrl + J		Justify text:	Left, center or right justification text within field
B or Ctrl + B		Background color:	Change text background color
Ctrl + Arrow or Alt + Arrow			Move text location. Hold Ctrl to move the field 30 pixels and Alt to move the field 2 pixels.


APPENDIX B – UPDATING FIRMWARE

This section assumes you have already installed '[Renesas Flash Programmer](#)' described in Appendix C.

 
1. Toggle CFG switch in the rear panel to the lower position
2. Cycle power to PROTEUS
3. Connect mini USB cable from your PC to PROTEUS
4. Your PC should acknowledge PROTEUS with a beep. Alternatively, Device Manager will add the following:



5. Start Renesas Flash Programmer. As shown below, ensure **Current Project** is GVO.rpj. If confirmed, go to step 6.
If not, go to File, Open Project and load it from the folder established in Appendix C i.e. <C:\VideoLogix-V\Firmware>.
To avoid repeating this step in the future, go to File and Save Project.

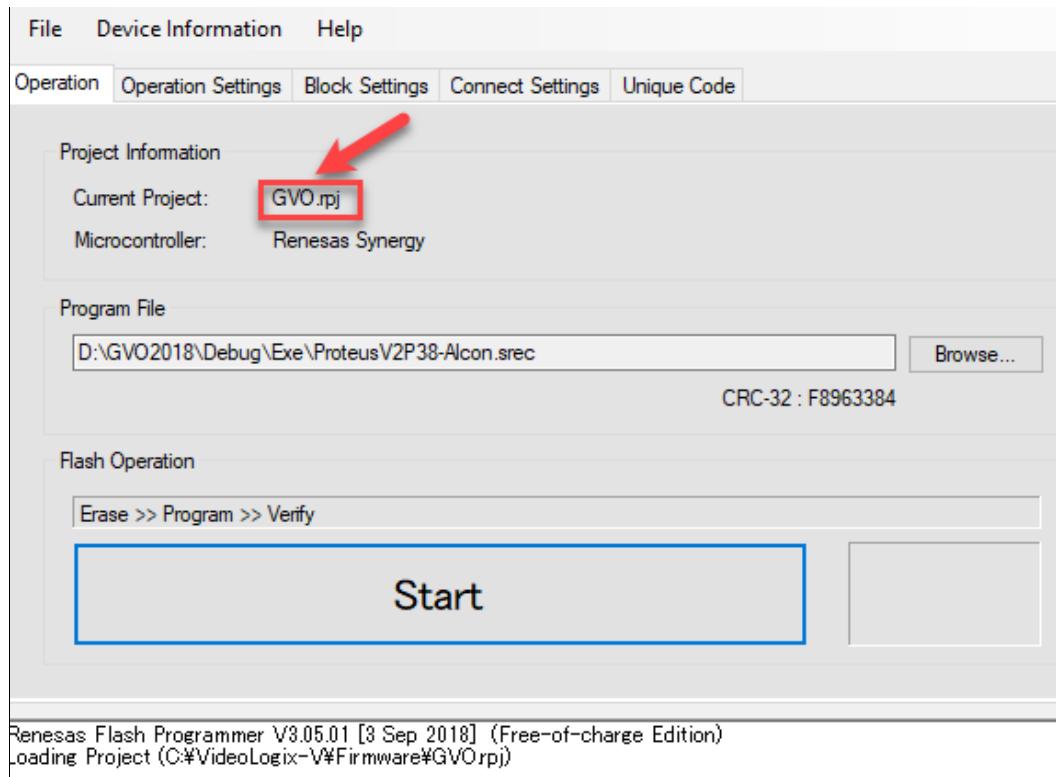

6. Follow instruction below to load the firmware into Proteus.

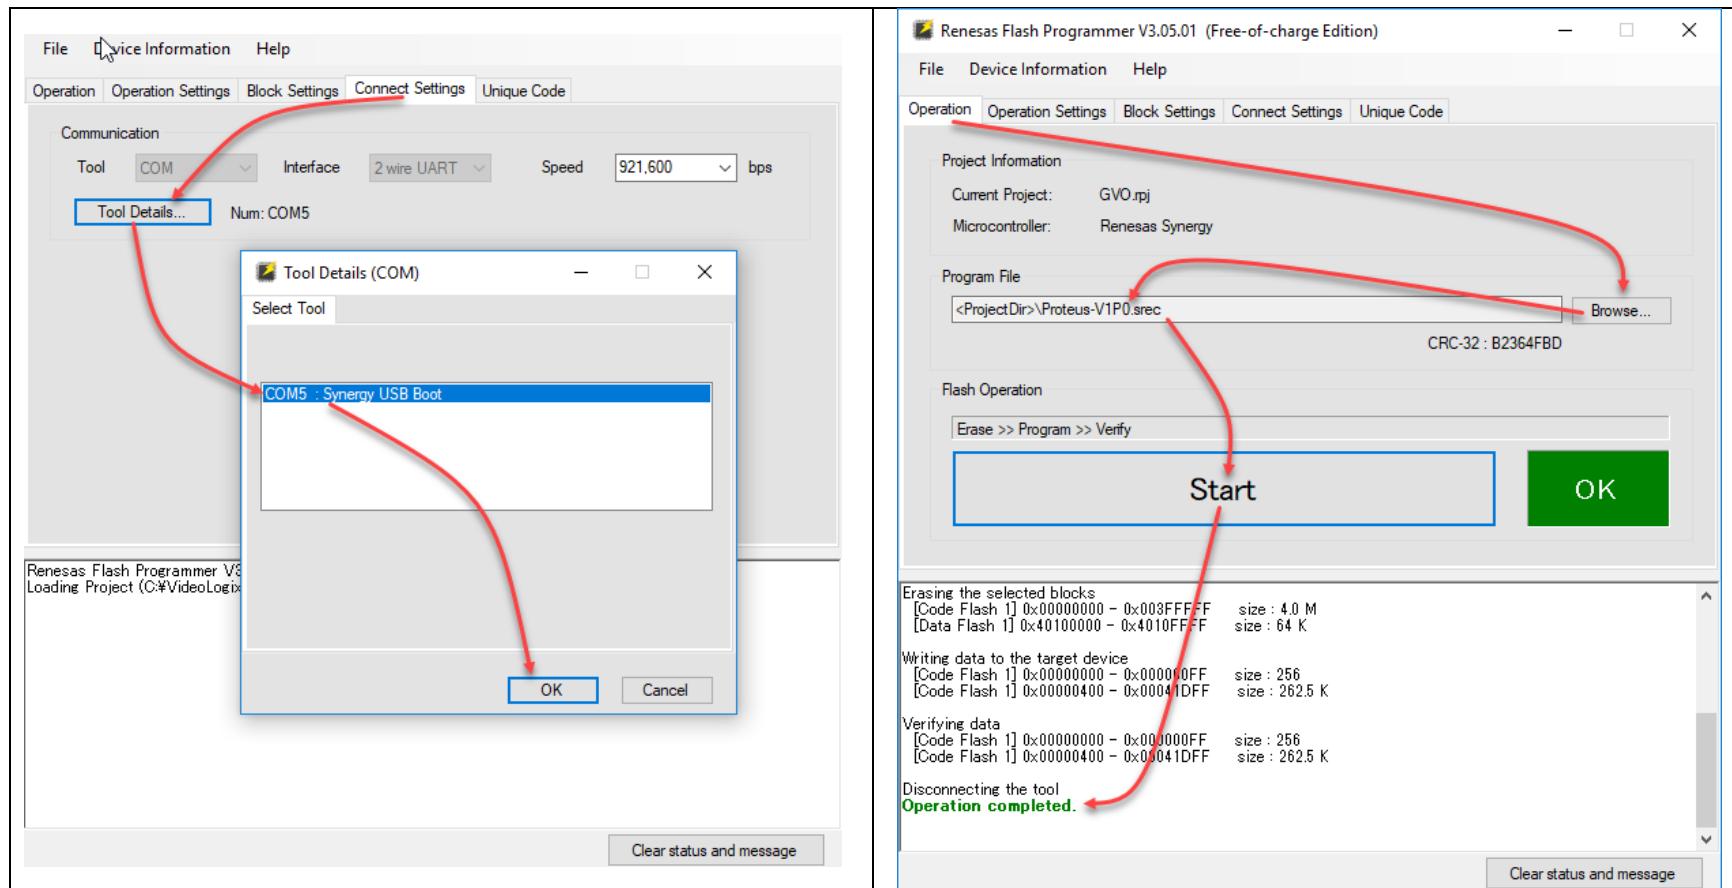


7. After 'Operation completed', Toggle CFG switch in the rear panel to the upper position

8. Cycle power to PROTEUS and you are done.

APPENDIX C – INSTALL RENESAS FLASH PROGRAMMER

Copy the content of the microSD card into a PC folder i.e. <C:\Videologix-V>. Alternatively, download it from [MicroSD FOLDERS – DOWNLOAD](#) and unzip it into a folder i.e. <C:\Videologix-V>.

Go to folder <C:\Videologix-v\Utilities> and launch program '[Renesas_Flash_Programmer_Package_V30501](#)'. Follow instruction below:

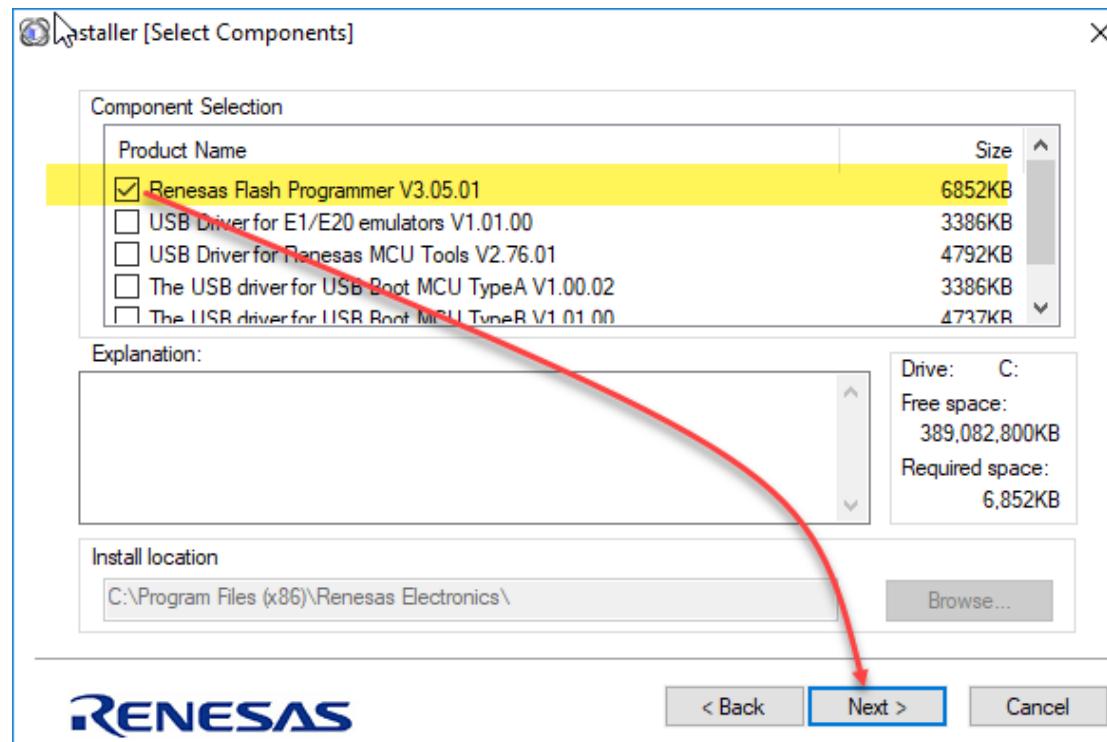

APPENDIX D – IMAGES


PROTEUS can display PNG and JPG images.

JPG

Image width & height divisible by 32. For example, 32 x 32 or 64 x 32 or 224 x 192, 320 x 64, etc.

PNG

PNG image must be converted to 32-bit BMP using Pixelformer utility. This utility will preserve pixel level alpha blending. *This program is in utility folder on microSD card*. Use File-import to open PNG file and File-export to create the BMP file. When prompted, select A8:R8:G8:B8 as shown below.

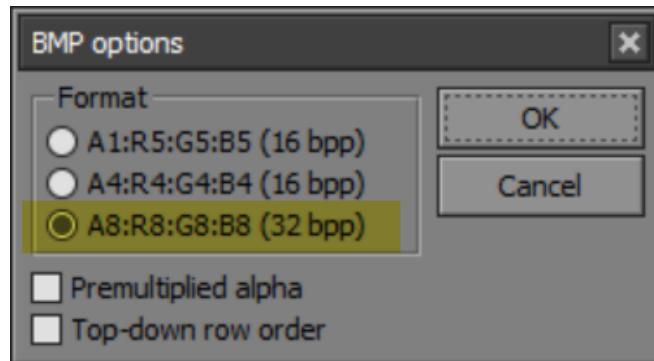

LOCATION

Store images in the folder [Images](#) on the microSD card.

APPENDIX E – CREATE CUSTOM FONTS


FONT0 through FONT7 can be customized by the user. To create your own fonts, follow steps below:

1. Start PROTEUSApp. *This app is in utility folder on microSD card.*
2. Go to **Font + Bitmask** tab.
3. Click **Select Font** button and select your desire font type & style.
4. Click **Create Font File** button.
5. Select your desire ISO Character set template from **C:\videologix-V\Fonts\ISO8859-9 Latin1.txt**
6. Type a file name for your font and press save.
7. Your new font will be stored in folder **C:\videologix-V\Fonts**
8. Edit file **FontList.txt** to add your new font file.
9. Copy **FontList.txt** and new font file to the folder ‘**Fonts**’ on microSD card.

APPENDIX F – TERMINAL BLOCKS

Care must be taken when inserting wire into terminal blocks. Do not insert thick screwdriver into terminal block as it will permanently damage the internal spring-loaded contacts. In general, any blade with 0.4mm x 2mm cross section is appropriate. Digikey P#1205202 is factory approved.

We have learned that X-ACTO Knife shown below works best.

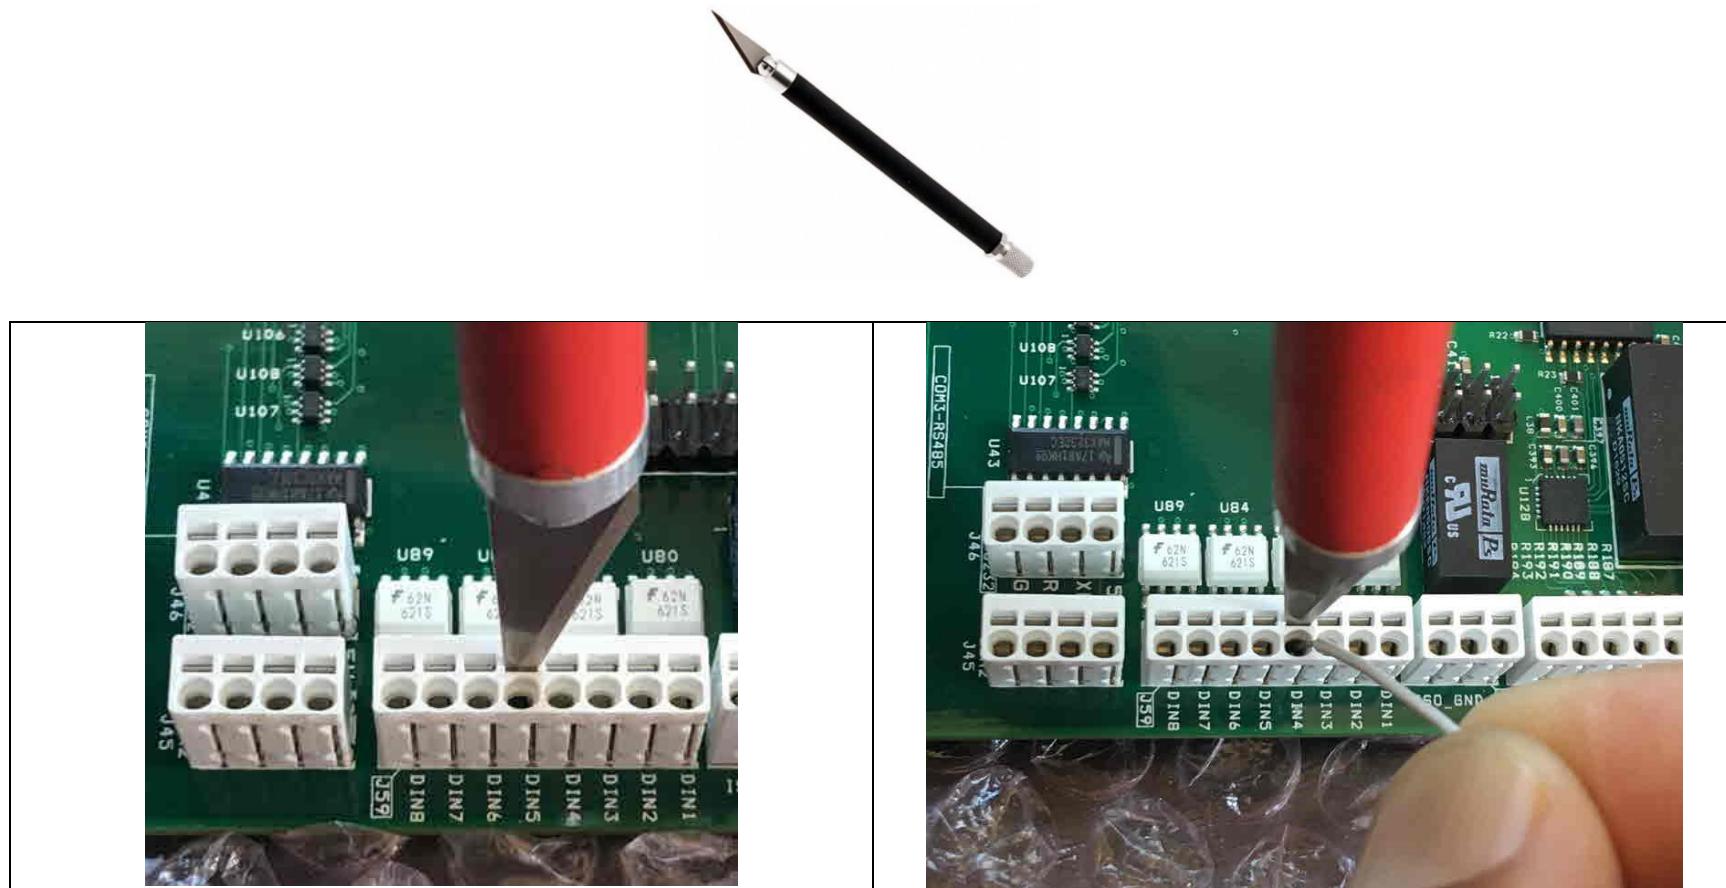

APPENDIX G – REGISTER DESIGNATION

Register ID	Designation
1	PM_STRING,
2	-
3	PM_HDMI_FORMAT
4	PM_UTC_OFFSET
5	PM_RTC_TIME,
6	PM_RTC_DATE,
7	PM_IRIG_TIME,
8	PM_IRIG_DATE,
9	PM_ATC_TIME
10	-
11	PM_NTP_BUFFER
12	PM_UNIX_EPOCH
13	PM_UPDATE_RETICLE
14	PM_UP_TIMER
15	PM_AN_RAW1,
16	PM_AN_RAW2,
17	PM_AN_RAW3,
18	PM_AN_RAW4,
19	PM_AN_MAP1,
20	PM_AN_MAP2,
21	PM_AN_MAP3,
22	PM_AN_MAP4,
23	PM_QUAD_RAW1,
24	PM_QUAD_RAW2,
25	PM_QUAD_MAP1,
26	PM_QUAD_MAP2,
27	PM_COUNTER1,
28	PM_COUNTER2,
29	PM_LSR

30	PM_IP_ADDRESS
31	PM_GPI,
32	PM_DEVELOPMENT
33	PM_FORMAT
34	PM_SDI_FORMAT
35	PM_TARGET_LAT
36	PM_TARGET_LON
37	PM_PROTEUS_HEADING
38	PM_PROTEUS_PITCH
39	PM_PROTEUS_ROLL
40	PM_TOKENA1,
41	PM_TOKENA2,
42	PM_TOKENA3,
43	PM_TOKENA4,
44	PM_TOKENA5,
45	PM_TOKENA6,
46	PM_TOKENA7,
47	PM_TOKENA8,
48	PM_TOKENA9,
49	PM_TOKENA10,
50	PM_TOKENA11,
51	PM_TOKENA12,
52	PM_TOKENB1,
53	PM_TOKENB2,
54	PM_TOKENB3,
55	PM_TOKENB4,
56	PM_TOKENB5,
57	PM_TOKENB6,
58	PM_TOKENB7,
59	PM_TOKENB8,
60	PM_TOKENB9,
61	PM_TOKENB10,
62	PM_TOKENB11,

63	PM_TOKENB12,
64	PM_TOKENC1,
65	PM_TOKENC2,
66	PM_TOKENC3,
67	PM_TOKENC4,
68	PM_TOKENC5,
69	PM_TOKENC6,
70	PM_TOKENC7,
71	PM_TOKENC8,
72	PM_TOKENC9,
73	PM_TOKENC10,
74	PM_TOKENC11,
75	PM_TOKENC12,
76	PM_TOKEND1,
77	PM_TOKEND2,
78	PM_TOKEND3,
79	PM_TOKEND4,
80	PM_TOKEND5,
81	PM_TOKEND6,
82	PM_TOKEND7,
83	PM_TOKEND8,
84	PM_TOKEND9,
85	PM_TOKEND10,
86	PM_TOKEND11,
87	PM_TOKEND12,
88	PM_GPS1_ALTITUDE,
89	PM_GPS1_COG,
90	PM_GPS1_SPEED,
91	PM_GPS1_TIME,
92	PM_GPS1_DATE,
93	PM_GPS1_LAT_D,
94	PM_GPS1_LON_D,
95	PM_GPS1_LAT_DM,


96	PM_GPS1_LON_DM,
97	PM_GPS1_LAT_DMS,
98	PM_GPS1_LON_DMS,
99	PM_GPS1_SEQUENCE,
100	PM_GPS1_ID,
101	PM_GPS2_ALTITUDE,
102	PM_GPS2_COG,
103	PM_GPS2_SPEED,
104	PM_GPS2_TIME,
105	PM_GPS2_DATE,
106	PM_GPS2_LAT_D,
107	PM_GPS2_LON_D,
108	PM_GPS2_LAT_DM,
109	PM_GPS2_LON_DM,
110	PM_GPS2_LAT_DMS,
111	PM_GPS2_LON_DMS,
112	PM_GPS2_SEQUENCE,
113	PM_GPS2_ID,
114	PM_IMU_HEADING,
115	PM_IMU_PITCH,
116	PM_IMU_ROLL,
117	PM_IMU_HEIGHT,
118	PM_IMU_LAT,
119	PM_IMU_LON,
120	PM_IMU_TIME,
121	PM_IMU_DATE,
122	PM_IMU_LAT_DMS,
123	PM_IMU_LON_DMS,
124	PM_CINEFLEX_AZIMUTH,
125	PM_CINEFLEX_ELEVATION,
126	PM_CINEFLEX_ROLL,
127	PM_CINEFLEX_FOCUS,
128	PM_CINEFLEX_ZOOM,

129	PM_CINEFLEX_IRIS,
130	PM_CINEFLEX_TELE,
131	PM_CINEFLEX_PAN,
132	PM_ALTIMETER,
133	PM_VSPEED,
134	PM_MWV_ANGLE,
135	PM_MWV_REFERENCE,
136	PM_MWV_SPEED,
137	PM_MWV_UNIT,
138	PM_DBT_DEPTH,
139	PM_DPT_DEPTH,
140	PM_DPT_OFFSET,
141	PM_DPT_RANGE,
142	PM_MTW_TEMPRATURE,
143	PM_LAT_FLOAT
144	PM_LON_FLOAT
145	
146	
147	PM_HEADING,
148	PM_PITCH,
149	PM_ROLL,
150	PM_HCC_HEADING,
151	PM_DBS_DEPTH,
152	PM_PCIT_TILT,
153	PM_PCIPR_PITCH
154	PM_PCIPR_ROLL

APPENDIX H – FORMAT MICROSD

Disable power before removing or inserting microSD card.

- The following instructions only apply to firmware version V2.24 or higher.
- microSD card capacity is limited to 2GB, 4GB, 8GB, 16GB, 32GB.
- Follow the diagram below to **format** your microSD card. Select **FAT32** as File System and Allocation unit size of **8192 bytes**.
- After microSD format, copy the folders shown below into your microSD card.
- Always **eject** the microSD card (as shown below) to complete the write operation.

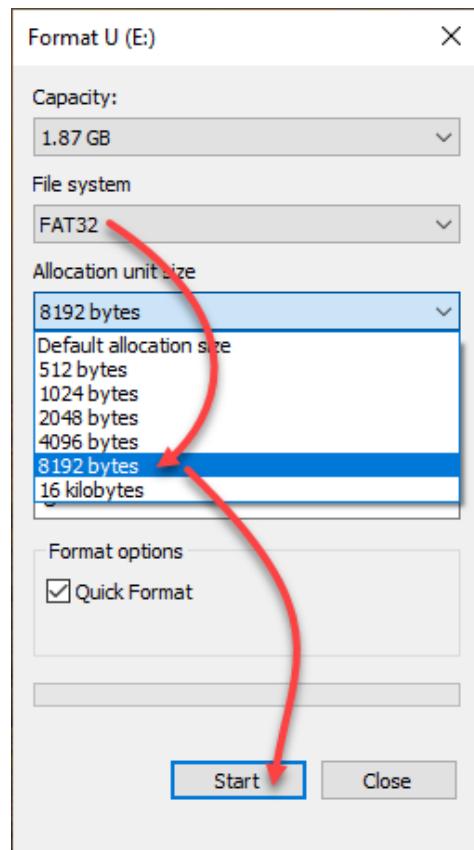

Name	Date modified
Configs	10/1/2019 12:13 PM
Documents	9/25/2019 11:16 AM
Firmware	9/25/2019 11:16 AM
Fonts	9/25/2019 11:16 AM
Images	9/25/2019 11:16 AM
KML	9/25/2019 11:16 AM
Script	9/25/2019 11:16 AM
lic	8/23/2019 3:54 PM
Read-me	7/28/2019 8:15 AM

